
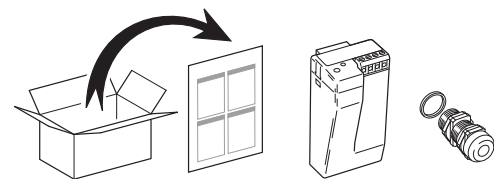


Fig. 1

- de Einbau- und Betriebsanleitung
- en Installation and operating instructions
- fr Notice de montage et de mise en service
- nl Inbouw- en bedieningsvoorschriften
- es Instrucciones de instalación y funcionamiento
- it Istruzioni di montaggio, uso e manutenzione
- pt Manual de instalação e funcionamento
- el Οδηγίες εγκατάστασης και λειτουργίας
- tr Montaj ve kullanma kılavuzu
- sv Monterings- och skötselansvisning
- no Montasje- og bruksanvisning
- fi Asennus- ja käyttöohje
- da Monterings- og driftsvejledning
- hu Beépítési és üzemeltetési utasítás
- pl Instrukcja montażu i obsługi
- cs Návod k montáži a provozu
- ru Инструкция по монтажу и эксплуатации
- et Paigaldus- ja kasutusjuhend
- lv Uzstādīšanas un ekspluatācijas instrukcija
- lt Montavimo ir naudojimo instrukcija
- sk Návod na montáž a obsluhu
- sl Navodila za vgradnjo in obratovanje
- bg Инструкция за монтаж и експлоатация
- ro Instrucțiuni de montaj și exploatare
- hr Upute za ugradnju i uporabu
- sr Uputstvo za ugradnju i upotrebu
- uk Інструкція з монтажу та експлуатації

Fig. 2

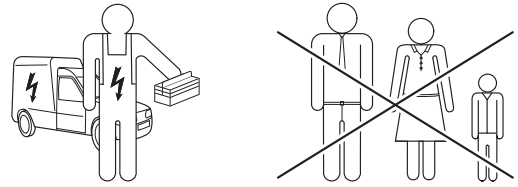


2 030 465



[www.wilo.com/automation](http://www.wilo.com/automation)

Fig. 3

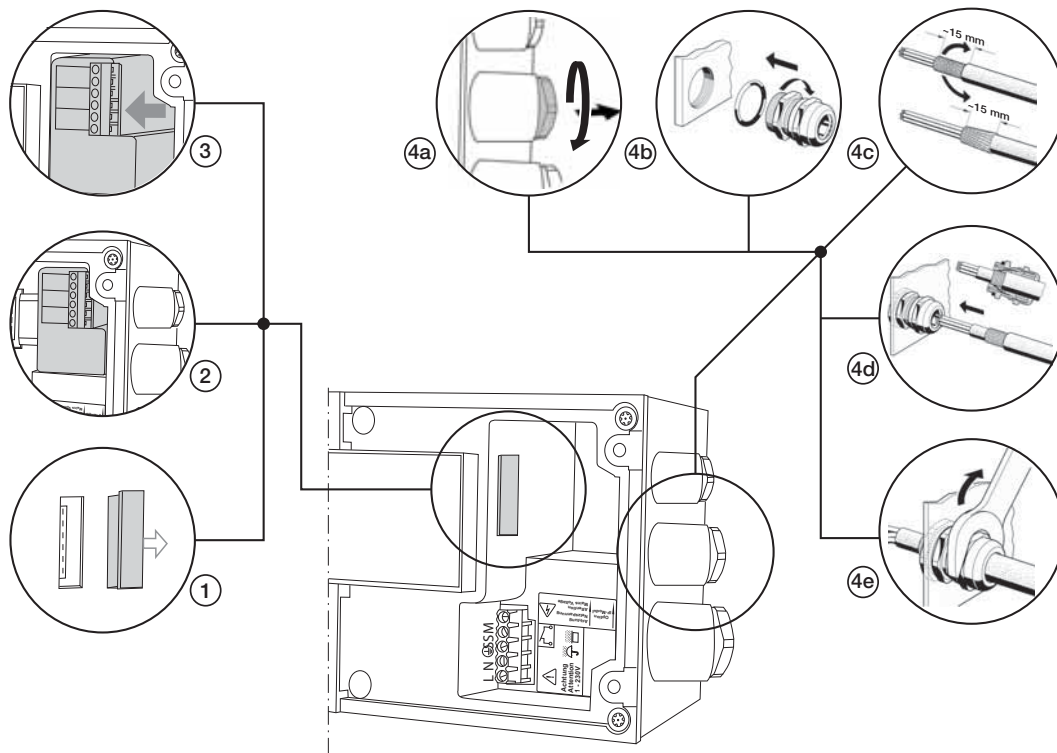

## Wilo-IF-Modul Stratos PLR

Fig. 4



1 x IF-Modul Stratos PLR



Wilo-Stratos/Stratos-Z

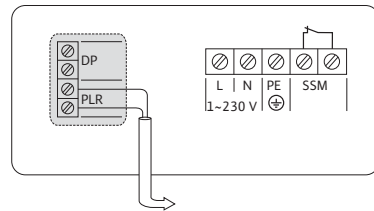


Fig. 5



2 x IF-Modul Stratos PLR



Wilo-Stratos/Stratos-D/Stratos-Z/Stratos-ZD

