

Pioneering for You

wilo

Wilo-Yonos MAXO-Z



en Installation and operating instructions

Table of contents

1 Guidance information.....	4
1.1 About these instructions	4
1.2 Original instructions	4
1.3 Safety information.....	4
2 Description of the pump	4
2.1 Overview	4
2.2 Description of the pump	4
2.3 Type key	5
2.4 Technical data	5
2.5 Min. inlet pressure.....	5
3 Safety.....	5
3.1 Intended use	5
3.2 Misuse.....	5
3.3 Operator responsibilities.....	6
3.4 Safety instructions.....	6
4 Transportation and storage.....	6
4.1 Scope of delivery.....	6
4.2 Accessories	6
4.3 Transport inspection	6
4.4 Transport and storage conditions	6
4.5 Transport.....	7
5 Installation.....	7
5.1 Personnel requisition.....	7
5.2 Safety during installation.....	7
5.3 Preparing the installation.....	7
5.4 Permissible installation	7
5.5 Outdoor installation.....	7
5.6 Aligning	7
5.7 Installation	8
6 Connect.....	11
6.1 Personnel requisition.....	11
6.2 Requirements	11
6.3 Connection options	11
6.4 Collective fault signal (SSM).....	12
6.5 Connect	12
7 Put into operation.....	14
7.1 Venting	14
7.2 Flush.....	14
7.3 Select operating mode	14
7.4 Adjust operating mode and pump output.....	14
8 Troubleshooting.....	14
8.1 Personnel requisition.....	14

8.2	Safety during troubleshooting.....	14
8.3	Error table.....	15
8.4	Fault signals	15
8.5	Warning signals	15
9	Spare parts.....	16
10	Disposal.....	16
10.1	Information on the collection of used electrical and electronic products.....	16

1 Guidance information

1.1 About these instructions

These instructions enable the safe installation and initial commissioning of the pump.

- Read these instructions before commencing work and keep them in an accessible place at all times.
- Observe instructions and labelling on the pump.
- Observe local regulations where the pump is installed.

1.2 Original instructions

The German language version represents the original instructions. All other language versions are translations of the original instructions.

1.3 Safety information

1.3.1 Identification of safety instructions

These installation and operating instructions set out safety instructions for preventing personal injury and damage to property that are displayed in different ways:

- Safety instructions relating to personal injury start with a signal word and are **preceded by a corresponding symbol**.
- Safety instructions relating to property damage start with a signal word and are displayed **without** a symbol.

Signal words

▪ **Danger!**

Failure to observe the safety instructions will result in serious injury or death!

▪ **Warning!**

Failure to follow the instructions can lead to (serious) injury!

▪ **Caution!**

Failure to follow the instructions can lead to property damage and a possible total loss.

▪ **Notice!**

Useful information on handling the product

Symbols

These instructions use the following symbols:



General danger symbol



Danger of electric voltage



Warning of hot surfaces



Warning of magnetic fields



Notes

1.3.2 Personnel qualifications

- The product must be operated by persons who are instructed in the functioning of the complete system.
- Installation/dismantling must be carried out by a qualified technician who is trained in the use of the necessary tools and mounting materials.
- Electrical work must be carried out by an authorised electrician (in accordance with EN 50110-1).

Definition of “qualified electrician”

A qualified electrician is a person with appropriate technical education, knowledge and experience who can identify **and** prevent electrical hazards.

2 Description of the pump

2.1 Overview

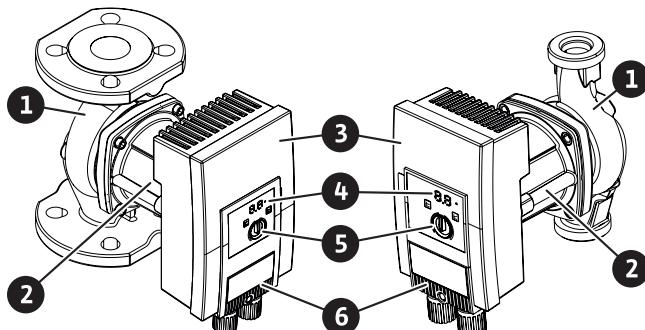


Fig. 1: Overview flange and threaded pipe union pump (single pump)

1. Pump housing
2. Motor
3. Control module
4. LED display and fault signal LED
5. Operating button
6. Plug

2.2 Description of the pump

The high-efficiency pump Wilo-Yonos MAXO-Z in the single pump version with flange or threaded pipe union is a glandless pump with a permanent magnet rotor and integrated differential pressure control. The choice of material of the pumps corresponds to the state of the art, taking into the account the guidelines of the German Environment Agency (UBA).

Power limit

The pump is fitted with a power-limiting function which prevents overload. This may have an operational influence on the delivery rate.

2.3 Type key

Example: Yonos MAXO-Z 40/0.5-12

Yonos MAXO	Pump designation
-Z	Single pump for domestic hot water circulation systems
40	Flange connection DN 40
	0.5: Minimum delivery head in m
0.5-12	12: Maximum delivery head in m at Q = 0 m³/h

2.4 Technical data

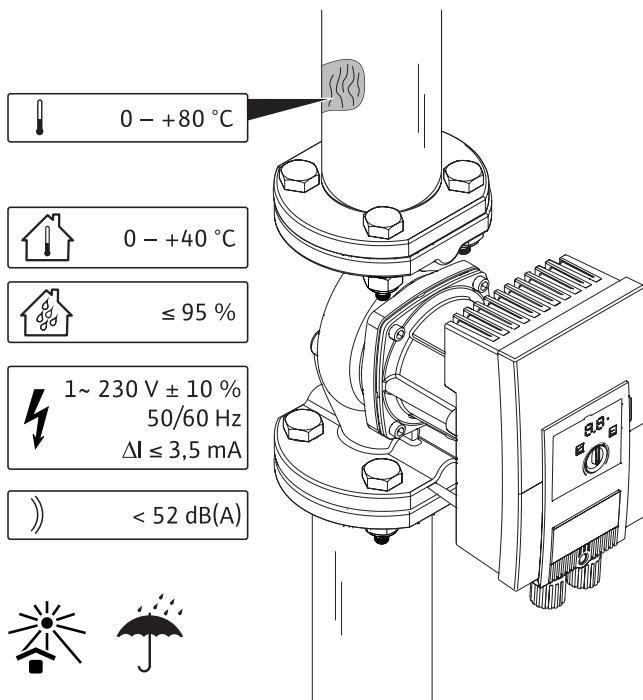


Fig. 2: Technical data

Instruction	Value
Permissible fluid temperature	0 to 80 °C (short term (2 h)): +110 °C
Permitted ambient temperature	0 to +40 °C
Maximum relative humidity	95 %
Mains voltage	1~ 230 V +/-10 % 50/60 Hz
Residual current ΔI	≤ 3.5 mA
Electromagnetic compatibility	Emitted interference in acc. with: EN 61800-3:2004+A1:2012 / residential area (C1) Interference resistance in acc. with:

Instruction	Value
	EN 61800-3:2004+A1:2012 / industrial environment (C2)
Emissions-sound-pressure level	< 52 dB(A)

For further instructions see rating plate and catalogue.

2.5 Min. inlet pressure

Nominal dia-meter	Fluid temperature		
	0 to +50 °C	up to +95 °C	up to +110 °C
RP 1	0.3 bar	1.0 bar	1.6 bar
RP 1½	0.3 bar	1.0 bar	1.6 bar
DN 40	0.5 bar	1.2 bar	1.8 bar
DN 50	0.5 bar	1.2 bar	1.8 bar
DN 65	0.7 bar	1.5 bar	2.3 bar



NOTICE

Effective up to 300 m above sea-level. For higher positions +0.01 bar/100 m.

3 Safety

3.1 Intended use

Use

Circulators from the Yonos MAXO-Z series may only be used for pumping liquids in domestic hot water circulation systems.

Permitted liquids

- Drinking water acc. to EC Drinking Water Directive.
- Drinking water and water according to the drinking water ordinance for Germany (TrinkwV).

CAUTION

Material damage!

Chemical disinfectants can result in damage to material.

Permitted temperatures

0 °C to +80 °C

3.2 Misuse

WARNING! Misuse of the pump can lead to dangerous situations and damage.

- Never use non-specified fluids.
- Highly flammable materials/fluids should always be kept at a safe distance from the product.

- Never allow unauthorised persons to perform work.
- Never operate the pump outside of the specified limits of use.
- Never carry out unauthorised conversions.
- Use exclusively authorised accessories and authorised spare parts.
- Never operate with phase angle control.

3.3 Operator responsibilities

The operator must:

- provide the installation and operating instructions in a language which the personnel can understand.
- have all work carried out by qualified personnel only.
- make sure that personnel are relevantly trained for the specified work.
- verify the area of responsibility and individual responsibilities of personnel.
- train personnel with regards to the operating principles of the system.
- eliminate risk from electrical current.
- equip hazardous components (extremely cold, extremely hot, rotating, etc.) with an on-site guard.
- have defective gaskets and connection pipes replaced.
- keep highly flammable materials at a safe distance from the product.

All information that appears on the product must be followed and kept permanently legible:

- Warnings
- Rating plate
- Direction of rotation arrow/symbol for direction of flow
- Identification of connections

This device can be used by children from 8 years of age as well as people with reduced physical, sensory or mental capacities or lack of experience and knowledge if they are supervised or instructed on the safe use of the device and they understand the dangers that can occur. Children are not allowed to play with the device. Cleaning and user maintenance is not allowed to be carried out by children without supervision.

3.4 Safety instructions

Electrical current



DANGER

Electric shock!

The pump is operated electrically. An electric shock may be a danger to life!

- Only allow work on electrical components to be carried out by qualified electricians (according to EN 50110-1).

- Before all work deactivate power supply and guard against accidental switch-on. Work on the control module may only be started after 5 minutes have elapsed, due to the dangerous residual contact voltage.
- Never open control module and never remove operator controls.
- Operate pumps exclusively with intact components and connection pipes.

Magnetic field



DANGER

Magnetic field!

The permanent magnet rotor inside the pump can pose mortal danger for people with medical implants (e.g. pacemakers) during dismantling.

- Never remove the rotor.

Hot components



WARNING

Hot components!

Pump housing and glandless pump motor can get hot and cause burns when touched.

- During operation only touch the control module.
- Allow the pump to cool down before commencing any work.
- Keep highly flammable materials away.

4 Transportation and storage

4.1 Scope of delivery

- Pump
- 8x washer M12 (only flange-end pump)
- 8x washer M16 (only flange-end pump)
- 2x flat gasket (only threaded pipe union pump)
- Concise Installation and operating instructions

4.2 Accessories

Separately available:

- Thermal insulation shell

4.3 Transport inspection

Following delivery immediately check for damage and integrity. Where necessary make a complaint immediately.

4.4 Transport and storage conditions

- Only carry by motor or pump housing → Fig. 3.
- Store in original packaging.

- Storage of pump on a horizontal bearing surface.
- Protect against damp and mechanical load.
- Dry pump thoroughly following use (e.g. function test) and store for a maximum of 6 months.
- Permissible temperature range: -20 °C to +40 °C

4.5 Transport

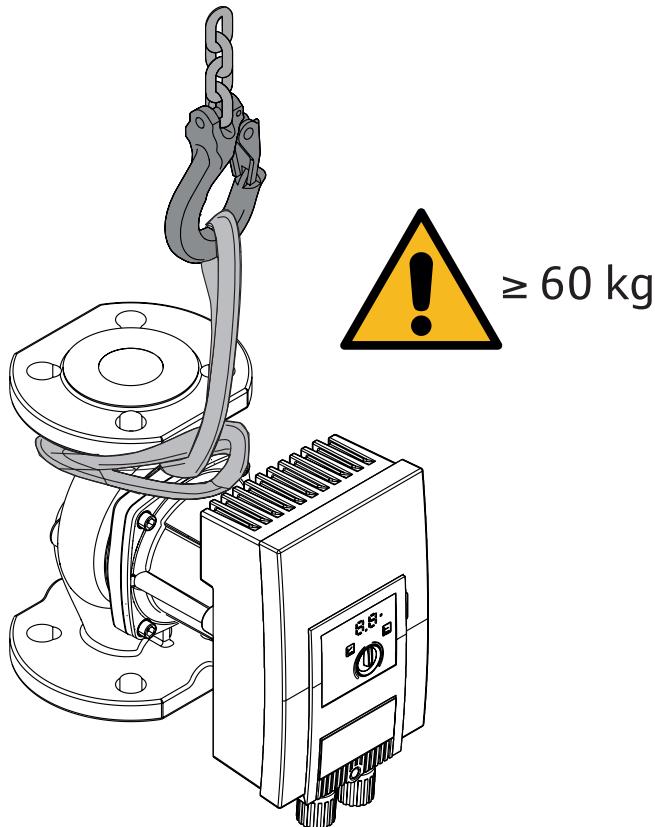


Fig. 3: Transport

- Only carry motor or pump housing.
- If necessary use hoisting gear with sufficient bearing capacity.

5 Installation

5.1 Personnel requisition

Carry out installation using qualified specialists only.

5.2 Safety during installation



WARNING

Hot fluids!

Hot liquids can cause scalding. Before the installation or removal of the pump or the dismantling of the housing screws observe the following:

1. Close shut-off device or drain unit.

2. Cool down the unit completely.

5.3 Preparing the installation

1. Complete all welding and brazing tasks.
2. Flush unit.
3. Provide shut-off devices upstream and downstream of the pump. Laterally align the shut-off device above the pump so that the leakage water does not drip on the control module.
4. Make sure that the pump can be installed free of mechanical stresses.
5. Allow a 10 cm distance around the control module so that it does not overheat.

5.4 Permissible installation

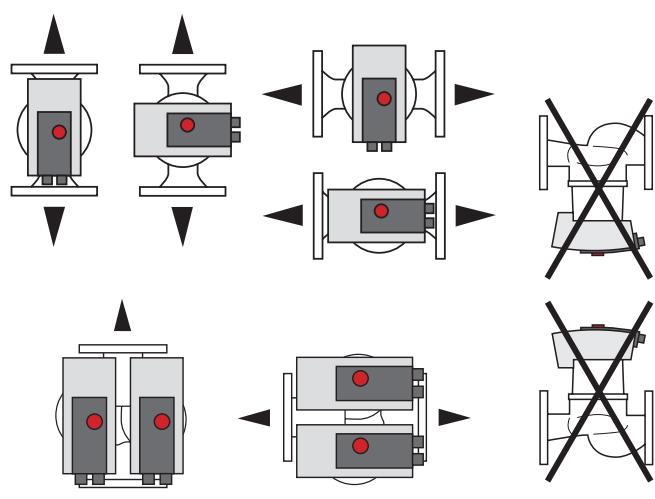


Fig. 4: Permissible installation

5.5 Outdoor installation

When installing outdoor also observe:

- Install pump in a pump chamber.
- Utilise cover as protection against environmental influences (e.g. rain).
- Observe permissible environmental conditions and protection classes.

5.6 Aligning

The motor head must be aligned according to installation position.

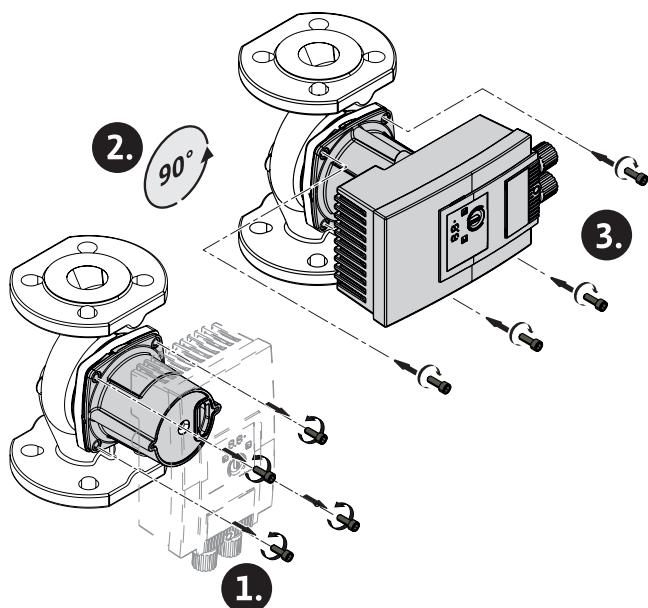


Fig. 5: Align motor

1. Check permissible installation positions → Fig. 4.

2. Detach motor head and carefully turn → Fig. 5.

Do not remove motor from pump housing.

CAUTION

Material damage!

Damage to the gasket causes leakage.

- Do not remove gasket.

5.7 Installation

5.7.1 Flange-end pump installation

Screws and tightening torques

Flange-end pump PN 6	DN 32	DN 40	DN 50	DN 65
-------------------------	-------	-------	-------	-------

Screw diameter	M 12	M 12	M 12	M 12
----------------	------	------	------	------

Strength class	≥ 4.6	≥ 4.6	≥ 4.6	≥ 4.6
----------------	-------	-------	-------	-------

Tightening torque	40 Nm	40 Nm	40 Nm	40 Nm
-------------------	-------	-------	-------	-------

Screw length	≥ 55 mm	≥ 55 mm	≥ 60 mm	≥ 60 mm
--------------	---------	---------	---------	---------

Flange-end pump PN 10	DN 32	DN 40	DN 50	DN 65
--------------------------	-------	-------	-------	-------

Screw diameter	M 16	M 16	M 16	M 16
----------------	------	------	------	------

Strength class	≥ 4.6	≥ 4.6	≥ 4.6	≥ 4.6
----------------	-------	-------	-------	-------

Tightening torque	95 Nm	95 Nm	95 Nm	95 Nm
-------------------	-------	-------	-------	-------

Screw length	≥ 60 mm	≥ 60 mm	≥ 65 mm	≥ 65 mm
--------------	---------	---------	---------	---------

- Never interconnect 2 combination flanges.

Installation steps

WARNING

Hot surface

The pipes might be hot. Injury may occur from burns!

- Wear protective gloves.

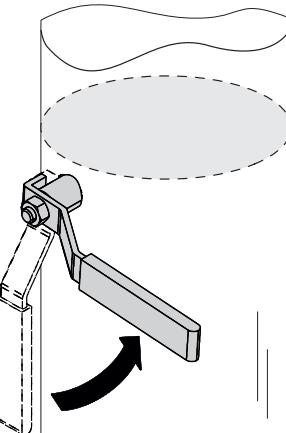
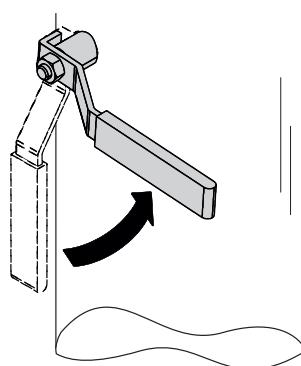


Fig. 6: Close the shut-off device

1. Close the shut-off devices in front of and behind the pump.

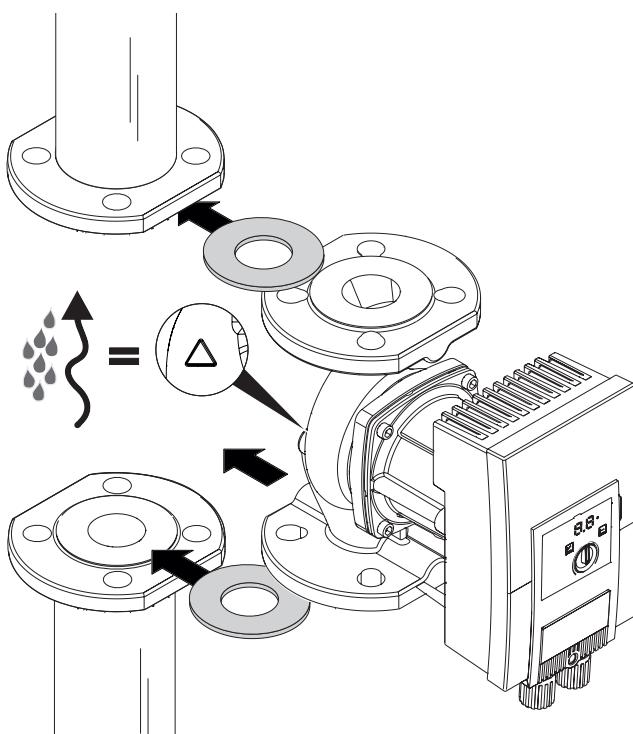


Fig. 7: Insert pump

2. Insert the pump in the pipe together with 2 suitable flat gaskets in such a way that the flange can be screwed to the pump inlet and outlet. The arrow on the pump housing must point in the direction of flow.

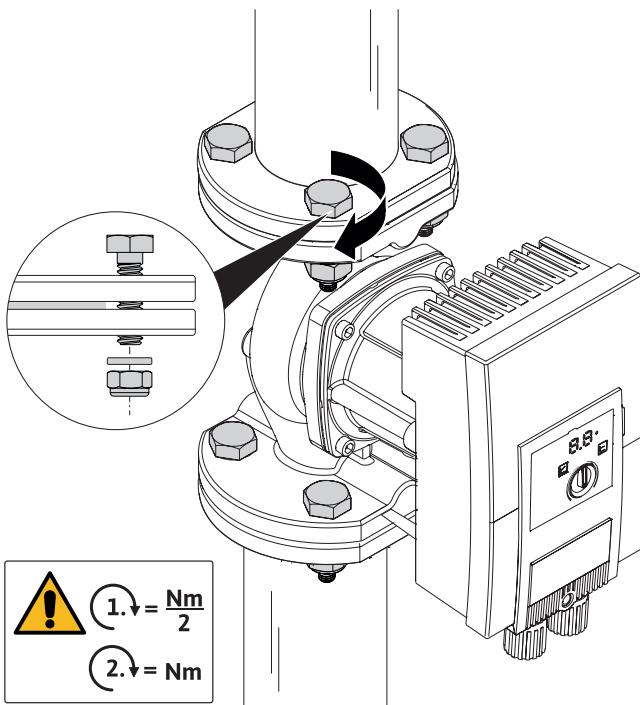


Fig. 8: Pump installation

3. Screw together flange with suitable screws and the supplied washers. Observe aforementioned tightening torques!


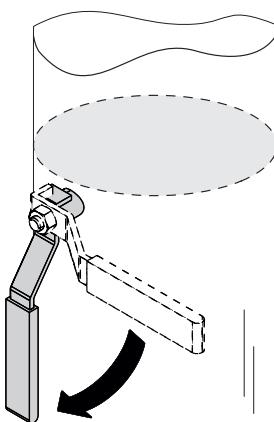


Fig. 9: Opening shut-off devices

4. Open the shut-off devices in front of and behind the pump.
5. Check impermeability.

5.7.2 Install threaded pipe union pump

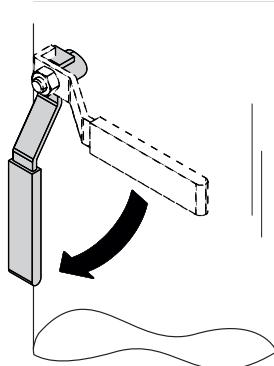

WARNING

Hot surface

The pipes might be hot. Injury may occur from burns!

- Wear protective gloves.
- 1. Install suitable threaded pipe union.

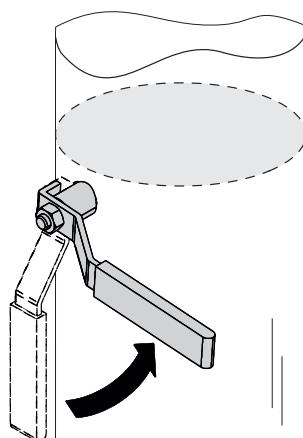
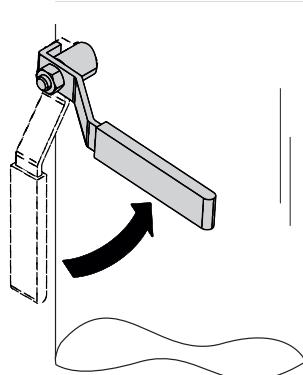


Fig. 10: Closing shut-off devices

2. Close the shut-off devices in front of and behind the pump.

3. Insert the supplied flat gaskets into the pump.

4. Screw together the pump with the union nuts. In doing so hold it exclusively against the flat faces on the pump housing.

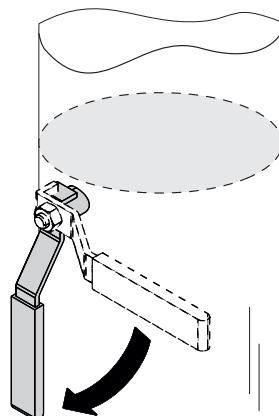
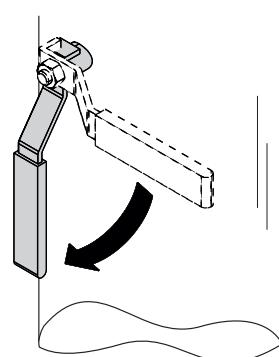


Fig. 12: Opening shut-off devices

5. Open the shut-off devices in front of and behind the pump.

6. Check impermeability.

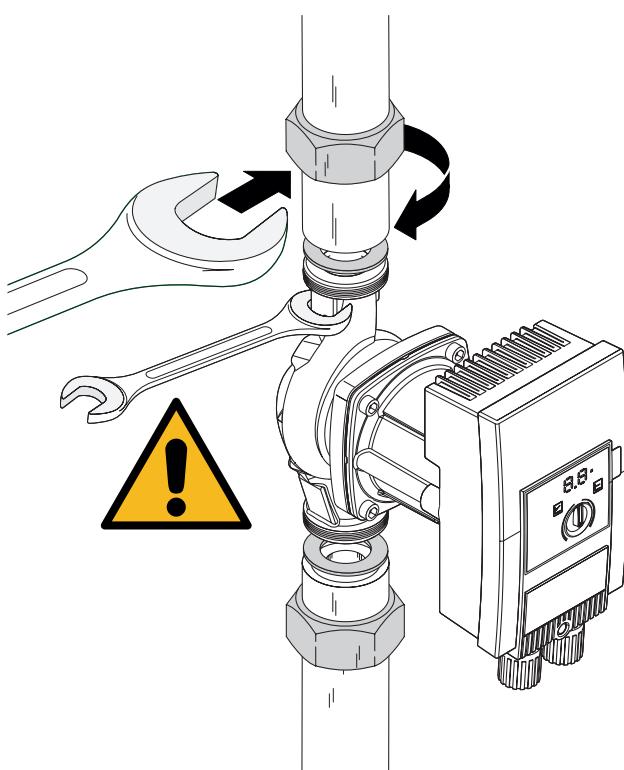


Fig. 11: Pump installation

5.7.3 Insulating

**Drinking water applications with fluid temperature
> 20 °C**

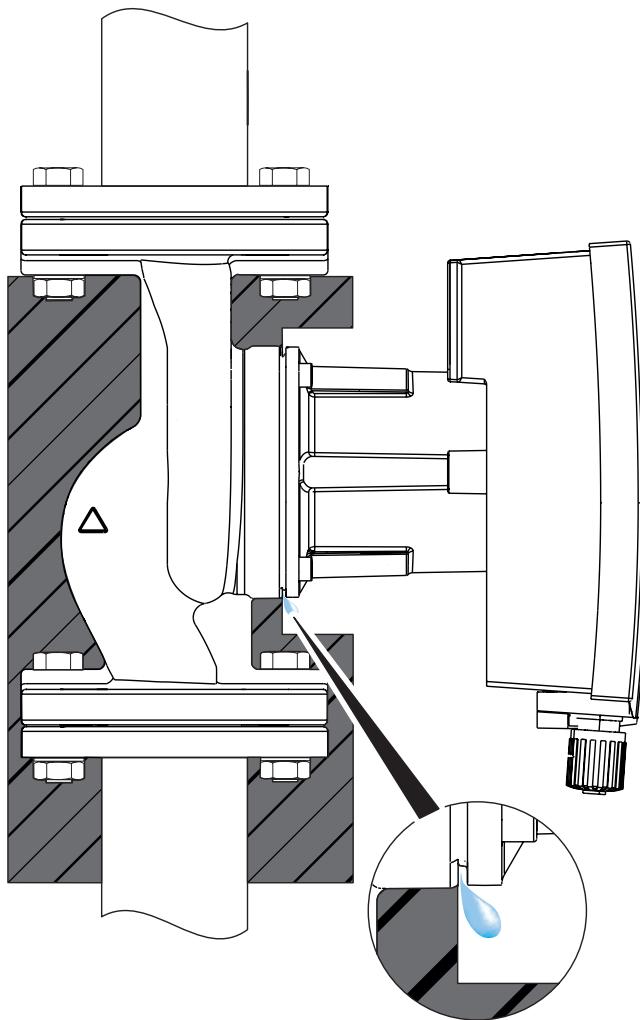


Fig. 13: Insulate, free up condensation drain

1. Mount thermal insulation shell (accessories) onto pump housing.

Cold water applications

1. Use standard, diffusion-proof insulation materials. Empty condensation drain.

6 Connect

6.1 Personnel requisition

- Electrical work must be carried out by an authorised electrician (in accordance with EN 50110-1).

6.2 Requirements

CAUTION

Incorrect connection

Wrong connection of the pump leads to damage to the electronics.

- Observe voltage rating on the rating plate.
- Maximum back-up fuse: 10 A, slow-blow or circuit breaker with C characteristic.
- Never connect to an uninterruptible power supply or IT-networks.
- During external connection of the pump deactivate a pulse of the voltage (for example phase angle control).
- Switching the pump via triacs/solid-state relays must be examined on a case-by-case basis.
- During deactivation with on-site power relay: Rated current ≥ 10 A, rated voltage 250 V AC
- Note switching frequency:
 - Switching on/off mains voltage $\leq 100/24$ h
 - $\leq 20/h$ at a switching frequency of 1 min between switching on/off via mains voltage
- Secure pump with a residual-current device (type A or B).
- Leakage current $I_{eff} \leq 3.5$ mA
- The electrical connection must be made via a fixed connecting cable equipped with a connector device or an all-pole switch with a contact opening width of at least 3 mm (VDE 0700/Part 1).
- To protect against leakage and for strain relief to the threaded cable connection use a connection pipe with sufficient outer diameter.
- Lay the connection pipe in such a way that it touches neither the pipes nor the pump.

6.3 Connection options

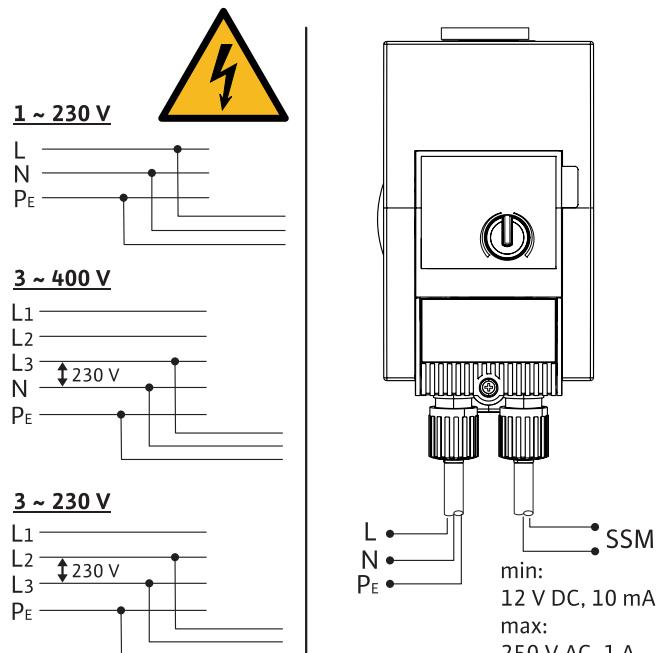


Fig. 14: Connection options

The pump can be connected to networks with the following voltage ratings:

- 1~ 230 V

- 3~ 400 V with neutral conductor
- 3~ 400 V without neutral conductor (upstream power transformer)
- 3~ 230 V

6.4

Collective fault signal (SSM)

The contact of the collective fault signal (potential-free normally closed contact) can be connected to a building automation system. Internal contact is closed in the following cases:

- The pump has zero current.
- There is no fault.
- The control module has failed.

**DANGER****Electric shock!**

Danger to life through voltage transmission if mains and collective fault signal line are led together through a 5-wire cable.

- Do not connect SSM pipe to protective low voltage.
- Use 5 x 1.5 mm² cable.

Connection

- minimum permitted: 12 V DC, 10 mA
- maximum permitted: 250 V AC, 1 A, AC 1

During connection of the SSM pipe to the network potential:


- SSM phase = live wire L1

6.5


Connect**DANGER****Electric shock!**

During connection of the pump risk of death from electric shock!

- Disconnect power supply before starting work.
- Only allow qualified electricians to carry out electrical connection.

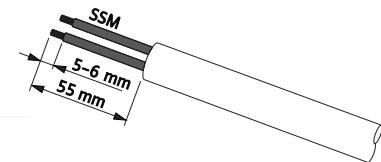

\varnothing 8-10 mm
min: 2x0,5 mm²
max: 2x1,5 mm²

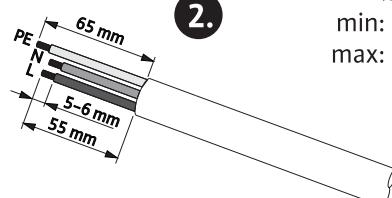

\varnothing 8-10 mm
min: 3x1,5 mm²
max: 3x2,5 mm²

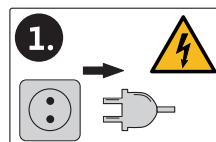


Fig. 15: Preparing the connection

1. Disconnect power supply.
2. Prepare pipes as per the instructions in the illustration.



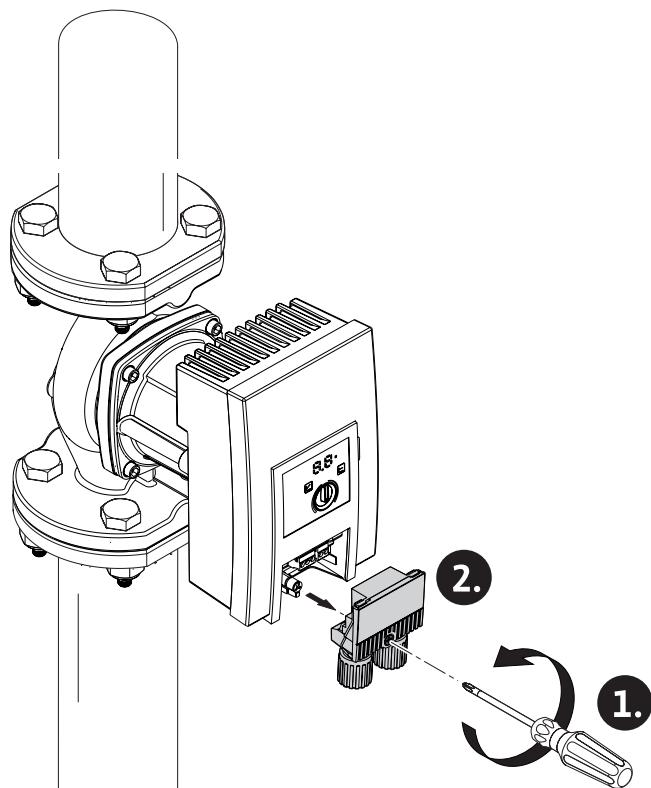


Fig. 16: Plug disassembly


3. Unscrew the screw from the plug.
4. Disassemble the plug.

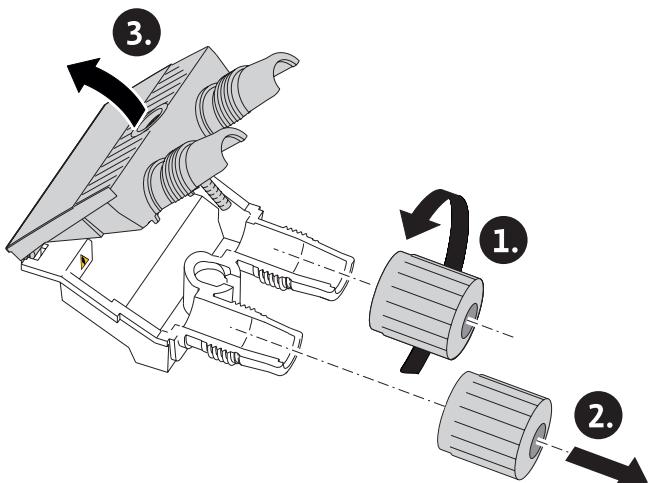


5. Unscrew cable ducts.
6. Flip open the plug.

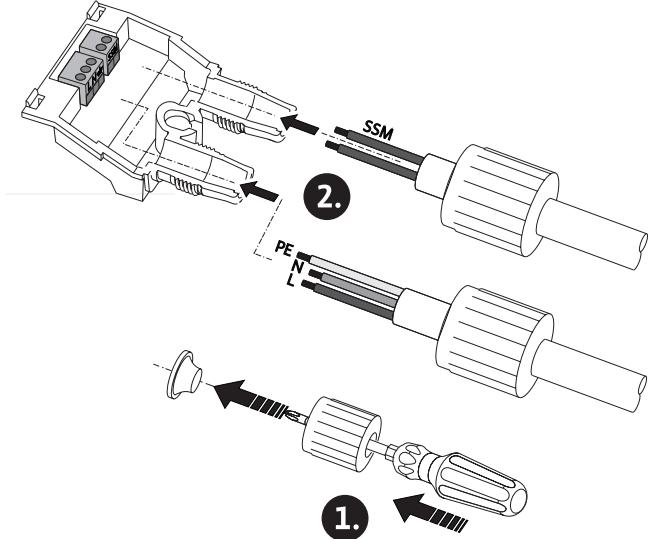

7. Remove the elastic fastener from the cable ducts using a small screwdriver.
8. Guide the pipes through the cable ducts to the connection sockets.

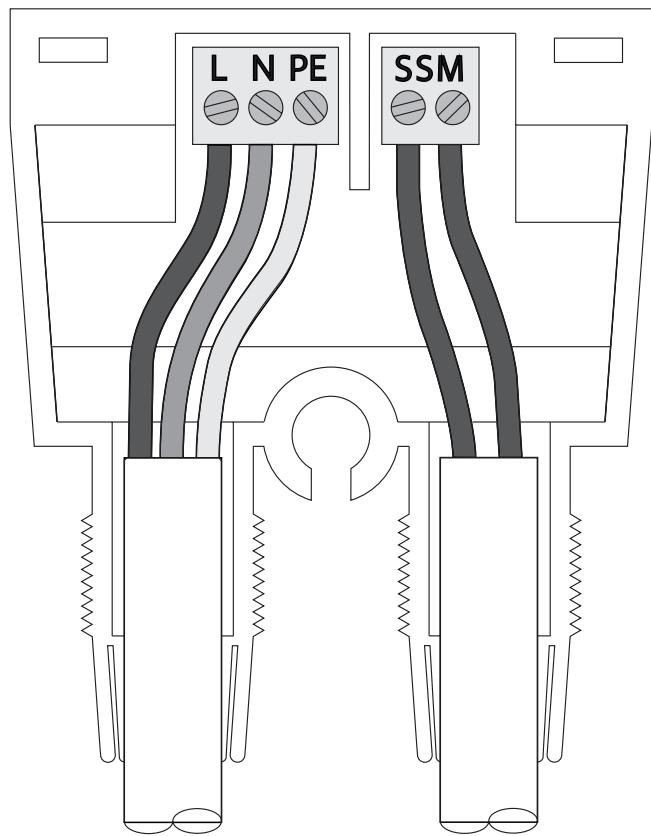

9. Connect the pipes in the correct position.

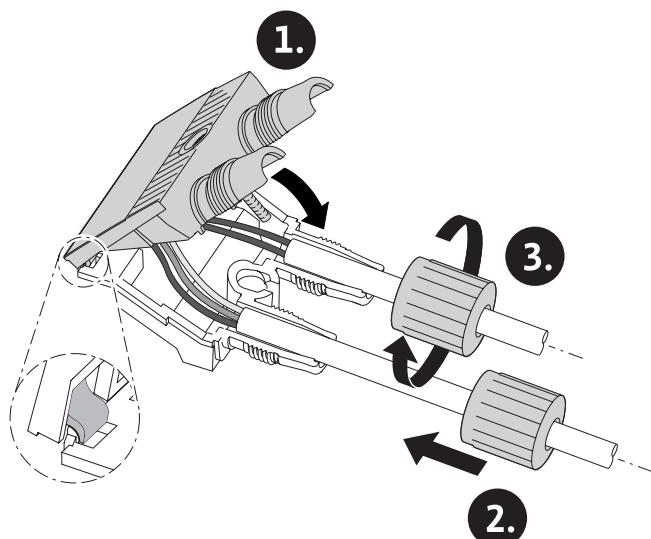

10. Close the plug and unscrew cable ducts.

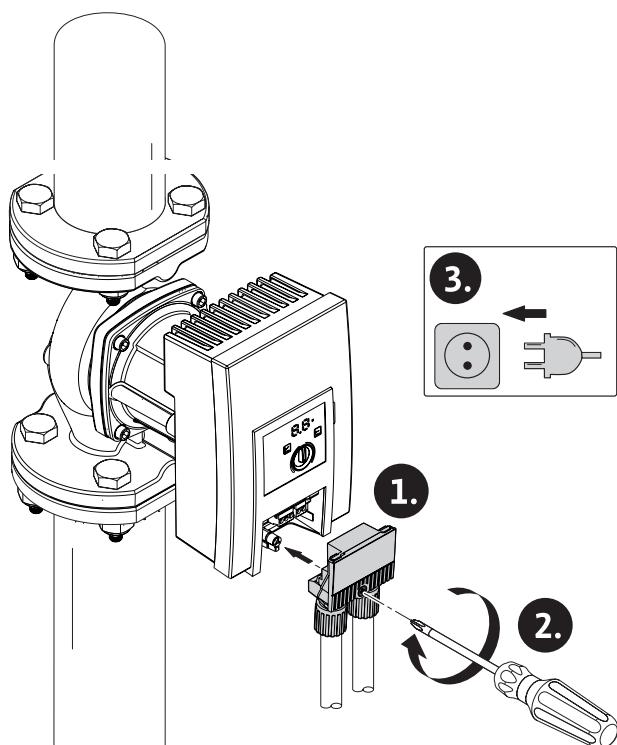


Fig. 21: Assemble the plug

11. Insert the plug and fasten with screw.
12. Restore power supply.

7 Put into operation

7.1 Venting

1. Charge the system appropriately and ventilate.
► The pump is self-ventilating.

7.2 Flush

1. Flush unit before commissioning.
2. Remove pump before change in pressure flushes.
3. Do not perform any chemical flushes.

7.3 Select operating mode

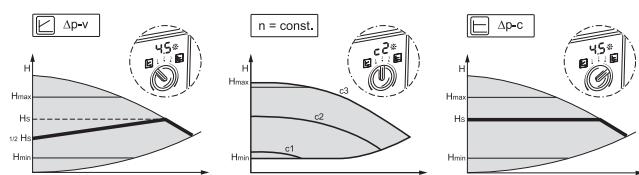


Fig. 22: Select operating mode

Operating mode	System type	System properties
Differential pressure variable $\Delta p-v$	Domestic hot water circulation systems	Domestic hot water circulation systems with thermostatically controlled line shut-off valves

Operating mode	System type	System properties
Constant speed (c_1, c_2, c_3)	Domestic hot water circulation systems	Constant flow rate
Constant differential pressure $\Delta p-c$	Domestic hot water circulation systems with thermostatically controlled line shut-off valves.	<p>Domestic hot water circulation systems with thermostatically controlled line shut-off valves.</p> <ul style="list-style-type: none"> ▪ The differential pressure is kept constant at the differential pressure setpoint H. <p>Recommended for systems with balancing valves</p>

7.4 Adjust operating mode and pump output

Factory setting

The pumps are delivered in control mode $\Delta p-c$. The required delivery head is preset according to pump type at between $\frac{1}{2}$ and $\frac{3}{4}$ of the maximal required delivery head (see pump data in the catalogue). Adjust operating mode and pump output according to system requirements.

Adjust the settings

In the design the unit is configured for a certain duty point (total resistance of the drinking water pipe network). When commissioning, adjust the pump output (delivery head) to the corresponding duty point. Select the alternative operating mode with constant speed.

1. Adjust desired operating mode with operating button.
► The LED display shows the operating mode (c_1, c_2, c_3) or the setpoint in m (at $\Delta p-c, \Delta p-v$).
1. Adjust the setpoint by turning the operating button (only at $\Delta p-c, \Delta p-v$).

8 Troubleshooting

8.1 Personnel requisition

The troubleshooting must only be performed by a qualified specialist, work on the electrical connection must only be performed by a qualified electrician.

8.2 Safety during troubleshooting



DANGER

Risk of fatal injury!

Danger to life due to touch voltage after switching off the pump.

- Disconnect all-pole power supply before starting work.
- Begin work at least 5 minutes after disconnecting the power supply.

8.3 Error table

Fault	Cause	Correction
Pump is not running with switched-on power supply.	Fuse protection defect. No voltage.	Check fuse. Check voltage.
Pump makes noises.	Cavitation due to insufficient suction pressure.	Maintain pressure/increase system pressure. Observe permissible pressure range. Check the delivery head and adjust where necessary.
Hot water does not get warm within a short period of time.	Setpoint set too low.	Increase setpoint. Set operating mode Δp-c.

8.4 Fault signals

- A signal is displayed.
- The fault signal LED lights up.
- The SSM contact opens.
- Switch off the pump and try a restart at regular intervals. During E10 switch off the pump permanently after 10 minutes.

No.	Fault	Cause	Remedy
E04	Undervoltage	Power supply on mains side too low.	Check mains voltage.
E05	Oversupply	Power supply on mains side too high.	Check mains voltage.
E09 ¹⁾	Turbine operation	Pump is operated backwards.	Check the flow and install non-return valve if necessary.
E10	Blocking	Rotor blocked.	Contact customer service.
E21 ²⁾ *	Overload	Slow motor.	Contact customer service.
E23	Short-circuit	Motor current too high.	Contact customer service.

No.	Fault	Cause	Remedy
E25	Contacting/winding	Winding defective.	Contact customer service.
E30	Excessive temperature of module	Interior of module too warm.	Check operating conditions.
E31	Excessive power section temperature	Ambient temperature too high.	Check operating conditions.
E36	Electronics errors	Electronics defective.	Contact customer service.

If a fault cannot be repaired, contact a qualified specialist or customer service.

¹⁾ Only for pumps with P1 ≥ 200 W

²⁾ In addition to the LED display, the fault signal LED is continuously illuminated in red.

* See also warning signal E21

8.5 Warning signals

- A signal is displayed.
- Fault signal LED does not light up.
- The SSM contact does not open.
- The pump is running at reduced performance.

No.	Fault	Cause	Remedy
E07	Generator operation	Pump hydraulics have fluid running through them.	Check unit.
E11	Dry run	Air in the pump.	Check liquid pressure and volume.
E21*)	Overload	Slow motor. Pump is operated beyond its specifications (e.g. high module temperature). The speed is lower than during normal operation.	Check ambient conditions.

¹⁾ Only for pumps with P1 ≥ 200 W

* See also fault signal E21

9 Spare parts

Obtain spare parts only from a qualified specialist or customer service.

10 Disposal

10.1 Information on the collection of used electrical and electronic products

Proper disposal and appropriate recycling of this product prevents damage to the environment and dangers to your personal health.



NOTICE

Disposal in domestic waste is forbidden!

In the European Union, this symbol can appear on the product, the packaging or the accompanying documentation. It means that the electrical and electronic products in question must not be disposed of along with domestic waste.

To ensure proper handling, recycling and disposal of the used products in question, please note the following points:

- Only hand over these products at designated, certified collecting points.
- Observe the locally applicable regulations!

Please consult your local municipality, the nearest waste disposal site, or the dealer who sold the product to you for information on proper disposal. For further information on recycling, go to www.wilo-recycling.com.

**EU/EG KONFORMITÄTSERKLÄRUNG
EU/EC DECLARATION OF CONFORMITY
DECLARATION DE CONFORMITE UE/CE**

Als Hersteller erklären wir unter unserer alleinigen Verantwortung, dass die Nassläufer-Umwälzpumpen der Baureihe,

*We, manufacturer, declare under our sole responsibility that these glandless circulating pump types of the series,
Nous, fabricant, déclarons sous notre seule responsabilité que les types de circulateurs de la série,*

Yonos MAXO-Z ...

(Die Seriennummer ist auf dem Typenschild des Produktes nach Punkten b) & c) von §1.7.4.2 und §1.7.3 des Anhangs I der Maschinenrichtlinie angegeben. / The serial number is marked on the product site plate according to points b) & c) of §1.7.4.2 and §1.7.3 of the annex I of the Machinery directive. / Le numéro de série est inscrit sur la plaque signalétique du produit en accord avec les points b) & c) du §1.7.4.2 et du §1.7.3 de l'annexe I de la Directive Machines.)

in der gelieferten Ausführung folgenden einschlägigen Bestimmungen entsprechen :

In their delivered state comply with the following relevant directives :

dans leur état de livraison sont conformes aux dispositions des directives suivantes :

_ Maschinenrichtlinie 2006/42/EG

_ Machinery 2006/42/EC

_ Machines 2006/42/CE

und gemäss Anhang 1, §1.5.1, werden die Schutzziele der Niederspannungsrichtlinie 2014/35/EU eingehalten
*and according to the annex 1, §1.5.1, comply with the safety objectives of the Low Voltage Directive 2014/35/EU
et, suivant l'annexe 1, §1.5.1, respectent les objectifs de sécurité de la Directive Basse Tension 2014/35/UE*

_ Elektromagnetische Verträglichkeit-Richtlinie 2014/30/EU

_ Electromagnetic compatibility 2014/30/EU

_ Compabilité électromagnétique 2014/30/UE

_ Richtlinie energieverbrauchsrelevanter Produkte 2009/125/EG

_ Energy-related products 2009/125/EC

_ Produits liés à l'énergie 2009/125/CE

Nach den Ökodesign-Anforderungen der Verordnung 641/2009 für Nassläufer-Umwälzpumpen , die durch die Verordnung 622/2012 geändert wird
*This applies according to eco-design requirements of the regulation 641/2009 for glandless circulators amended by the regulation 622/2012
suivant les exigences d'éco-conception du règlement 641/2009 pour les circulateurs, amendé par le règlement 622/2012*

und entsprechender nationaler Gesetzgebung,

and with the relevant national legislation,

et aux législations nationales les transposant,

sowie auch den Bestimmungen zu folgenden harmonisierten europäischen Normen :

comply also with the following relevant harmonized European standards :

sont également conformes aux dispositions des normes européennes harmonisées suivantes :

EN 809+A1

EN 60335-2-51

EN 16297-1

EN 61800-3+A1:2012

EN 16297-2

Bevollmächtigter für die Zusammenstellung der technischen Unterlagen ist:

Person authorized to compile the technical file is :

Personne autorisée à constituer le dossier technique est :

Dortmund,

Herr Holger Herchenhein

Digital unterschrieben
von Holger Herchenhein
Datum: 2017.02.17
15:24:34 +01'00'

H. HERCHENHEIN
Senior Vice President - Group ITQ

N°2156057.01 (CE-A-S n°4178941)

Division HVAC
Quality Manager - PBU Circulating Pumps
WILO SE
Nortkirchenstraße 100
D-44263 Dortmund

wilo

WILO SE
Nortkirchenstraße 100
44263 Dortmund - Germany

<p style="text-align: center;">(BG) - Български език ДЕКЛАРАЦИЯ ЗА СЪОТЕТСТВИЕ ЕО</p> <p>WILO SE декларираат, че продуктите посочени в настоящата декларация съответстват на разпоредбите на следните европейски директиви и приелите ги национални законодателства:</p> <p>Машини 2006/42/EO ; Електромагнитна съвместимост 2014/30/EO ; Продукти, свързани с енергопотреблението 2009/125/EO</p> <p>както и на хармонизираните европейски стандарти, упоменати на предишната страница.</p>	<p style="text-align: center;">(CS) - Čeština ES PROHLÁŠENÍ O SHODĚ</p> <p>WILO SE prohlašuje, že výrobky uvedené v tomto prohlášení odpovídají ustanovením níže uvedených evropských směrnic a národním právním předpisům, které je přejímají:</p> <p>Stroje 2006/42/ES ; Elektromagnetická Kompatibilita 2014/30/ES ; Výrobků spojených se spotřebou energie 2009/125/ES</p> <p>a rovněž splňují požadavky harmonizovaných evropských norem uvedených na předcházející stránce.</p>
<p style="text-align: center;">(DA) - Dansk EF-OVERENSSTEMMELSESERKLÆRING</p> <p>WILO SE erklaerer, at produkterne, som beskrives i denne erklæring, er i overensstemmelse med bestemmelserne i følgende europæiske direktiver, samt de nationale lovgivninger, der gennemfører dem:</p> <p>Maskiner 2006/42/EU ; Elektromagnetisk Kompatibilitet 2014/30/EU ; Energirelaterede produkter 2009/125/EU</p> <p>De er ligeledes i overensstemmelse med de harmoniserede europæiske standarder, der er anført på forrige side.</p>	<p style="text-align: center;">(EL) - Ελληνικά ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ ΕΚ</p> <p>WILO SE δηλώνει ότι τα προϊόντα που ορίζονται στην παρούσα ευρωπαϊκά δήλωση είναι σύμφωνα με τις διατάξεις των παρακάτω οδηγιών και τις εθνικές νομοθεσίες στις οποίες έχει μεταφερθεί:</p> <p>Μηχανήματα 2006/42/EK ; Ηλεκτρομαγνητικής συμβατότητας 2014/30/EK ; Συνδεόμενα με την ενέργεια προϊόντα 2009/125/EK</p> <p>και επίσης με τα εξής εναρμονισμένα ευρωπαϊκά πρότυπα που αναφέρονται στην προηγούμενη σελίδα.</p>
<p style="text-align: center;">(ES) - Español DECLARACIÓN CE DE CONFORMIDAD</p> <p>WILO SE declara que los productos citados en la presente declaración están conformes con las disposiciones de las siguientes directivas europeas y con las legislaciones nacionales que les son aplicables :</p> <p>Máquinas 2006/42/CE ; Compatibilidad Electromagnética 2014/30/CE ; Productos relacionados con la energía 2009/125/CE</p> <p>Y igualmente están conformes con las disposiciones de las normas europeas armonizadas citadas en la página anterior.</p>	<p style="text-align: center;">(ET) - Eesti keel EÜ VASTAVUSDEKLARATSIOONI</p> <p>WILO SE kinnitab, et selles vastavustunnustuses kirjeldatud tooted on kooskõlas alljärgnevate Euroopa direktiivide säteteega ning riiklike seadusandlustega, mis nimetatud direktiivid üle on võtnud:</p> <p>Masinad 2006/42/EÜ ; Elektromagnetilist Ühilduvust 2014/30/EÜ ; Energiamõjuga toodete 2009/125/EÜ</p> <p>Samuti on tooted kooskõlas eelmisel leheküljel ära toodud harmoniseeritud Euroopa standarditega.</p>
<p style="text-align: center;">(FI) - Suomen kieli EY-VAATIMUSTENMUKAISUUSVAKUUTUS</p> <p>WILO SE vakuuttaa, että tässä vakuutuksessa kuvatut tuotteet ovat seuraavien eurooppalaisten direktiivien määräysten sekä niihin sovellettavien kansallisten lakiasetusten mukaisia:</p> <p>Koneet 2006/42/EY ; Sähkömagneettinen Yhteensopivuus 2014/30/EY ; Energian liittyvien tuotteiden 2009/125/EY</p> <p>Lisäksi ne ovat seuraavien edellisellä sivulla mainittujen yhdenmukaistettujen eurooppalaisten normien mukaisia.</p>	<p style="text-align: center;">(GA) - Gaeilge EC DEARBHÚ COMHLÍONTA</p> <p>WILO SE ndearbhaíonn an cur síos ar na táirgí atá i ráiteas seo, siad i gcomhréir leis na forálacha atá sna treoracha seo a leanas na hEorpa agus leis na dlíthe náisiúnta is infheidhme orthu:</p> <p>Inneala 2006/42/EC ; Comhoiriúnacht Leictreamaighnéadach 2014/30/EC ; Fuinneamh a bhainneann le táirgí 2009/125/EC</p> <p>Agus siad i gcomhréir le forálacha na caighdeán chomhchuibhithe na hEorpa dák dtagraítear sa leathanach roimhe seo.</p>
<p style="text-align: center;">(HR) - Hrvatski EZ IZJAVA O SUKLADNOSTI</p> <p>WILO SE izjavljuje da su proizvodi navedeni u ovoj izjavi u skladu sa sljedećim prihvaćenim europskim direktivama i nacionalnim zakonima: EZ smjernica o strojevima 2006/42/EZ ; Elektromagnetna kompatibilnost - smjernica 2014/30/EZ ; Smjernica za proizvode relevantne u pogledu potrošnje energije 2009/125/EZ</p> <p>i usklađenim europskim normama navedenim na prethodnoj stranici.</p>	<p style="text-align: center;">(HU) - Magyar EK-MEGFELELŐSÉGI NYILATKOZAT</p> <p>WILO SE kijelenti, hogy a jelen megfelelőségi nyilatkozatban megjelölt termékek megfelelnek a következő európai irányelvök előírásainak, valamint azok nemzeti jogrendbe átültetett rendelkezéseinek:</p> <p>Gépek 2006/42/EK ; Elektromágneses összeférhetőségre 2014/30/EK ; Energiával kapcsolatos termékek 2009/125/EK</p> <p>valamint az előző oldalon szereplő, harmonizált európai szabványoknak.</p>
<p style="text-align: center;">(IS) - Íslenska EB LEYFISYFIRLÝSING</p> <p>WILO SE lýsir því yfir að vörurnar sem um getur í þessari yfirlýsingu eru í samræmi við eftirfarandi tilskipunum ESB og landslögum hafa samþykkt:</p> <p>Vélartilskipun 2006/42/EB ; Rafseguls-samhæfni-tilskipun 2014/30/EB ; Tilskipun varðandi vörur tengdar orkunotkun 2009/125/EB</p> <p>og samhæfða evrópska staðla sem nefnd eru í fyrri síðu.</p>	<p style="text-align: center;">(IT) - Italiano DICHIARAZIONE CE DI CONFORMITÀ</p> <p>WILO SE dichiara che i prodotti descritti nella presente dichiarazione sono conformi alle disposizioni delle seguenti direttive europee nonché alle legislazioni nazionali che le traspongono :</p> <p>Macchine 2006/42/CE ; Compatibilità Elettromagnetica 2014/30/CE ; Prodotti connessi all'energia 2009/125/CE</p> <p>E sono pure conformi alle disposizioni delle norme europee armonizzate citate a pagina precedente.</p>
<p style="text-align: center;">(LT) - Lietuvių kalba EB ATITIKTIES DEKLARACIJA</p> <p>WILO SE pareiškia, kad šioje deklaracijoje nurodyti gaminiai atitinka šiuos Europos direktyvų ir jas perkeliančiu nacionalinių įstatymų nuostatus:</p> <p>Mašinos 2006/42/EB ; Elektromagnetinis Suderinamumas 2014/30/EB ; Energija susijusiems gaminiams 2009/125/EB</p> <p>ir taip pat harmonizuotas Europos normas, kurios buvo cituotos ankstesniame puslapyje.</p>	<p style="text-align: center;">(LV) - Latviešu valoda EK ATBILSTĪBAS DEKLARĀCIJU</p> <p>WILO SE deklarē, ka izstrādājumi, kas ir nosaukti šajā deklarācijā, atbilst šeit uzskaitīto Eiropas direktīvu nosacījumiem, kā arī atsevišķu valstu likumiem, kuros tie ir ietverti:</p> <p>Mašinas 2006/42/EK ; Elektromagnētiskās Saderības 2014/30/EK ; Enerģiju saistītiem ražojumiem 2009/125/EK</p> <p>un saskaņotajiem Eiropas standartiem, kas minēti iepriekšējā lappusē.</p>

<p>(MT) - Malti DIKJARAZZJONI KE TA' KONFORMITÀ</p> <p>WILO SE jiddikjara li l-prodotti spéċifikati f'din id-dikjarazzjoni huma konformi mad-direttivi Ewropej li jsegwu u mal-legislazzjonijiet nazzjonali li jaapplikawhom:</p> <p>Makkinarju 2006/42/KE ; Kompatibbiltà Elettromanjetika 2014/30/KE ; Prodotti relatati mal-enerġija 2009/125/KE</p> <p>kif ukoll man-normi Ewropej armoniżżati li jsegwu imsemmija fil-paġna preċedenti.</p>	<p>(NL) - Nederlands EG-VERKLARING VAN OVEREENSTEMMING</p> <p>WILO SE verklaart dat de in deze verklaring vermelde producten voldoen aan de bepalingen van de volgende Europese richtlijnen evenals aan de nationale wetgevingen waarin deze bepalingen zijn overgenomen:</p> <p>Machines 2006/42/EG ; Elektromagnetische Compatibiliteit 2014/30/EG ; Energiegerelateerde producten 2009/125/EG</p> <p>De producten voldoen eveneens aan de geharmoniseerde Europese normen die op de vorige pagina worden genoemd.</p>
<p>(NO) - Norsk EU-OVERENSSTEMMELSESERKLÆRING</p> <p>WILO SE erklærer at produktene nevnt i denne erklæringen er i samsvar med følgende europeiske direktiver og nasjonale lover:</p> <p>EG-Maskindirektiv 2006/42/EG ; EG-EMV-Elektromagnetisk kompatibilitet 2014/30/EG ; Direktiv energirelaterte produkter 2009/125/EF</p> <p>og harmoniserte europeiske standarder nevnt på forrige side.</p>	<p>(PL) - Polski DEKLARACJA ZGODNOŚCI WE</p> <p>WILO SE oznacza, że produkty wymienione w niniejszej deklaracji są zgodne z postanowieniami następujących dyrektyw europejskich i transponującymi je przepisami prawa krajowego:</p> <p>Maszyn 2006/42/WE ; Kompatybilności Elektromagnetycznej 2014/30/WE ; Produktów związanych z energią 2009/125/WE</p> <p>oraz z następującymi normami europejskimi zharmonizowanymi podanymi na poprzedniej stronie.</p>
<p>(PT) - Português DECLARAÇÃO CE DE CONFORMIDADE</p> <p>WILO SE declara que os materiais designados na presente declaração obedecem às disposições das directivas europeias e às legislações nacionais que as transcrevem :</p> <p>Máquinas 2006/42/CE ; Compatibilidade Electromagnética 2014/30/CE ; Produtos relacionados com o consumo de energia 2009/125/CE</p> <p>E obedecem também às normas europeias harmonizadas citadas na página precedente.</p>	<p>(RO) - Română DECLARAȚIE DE CONFORMITATE CE</p> <p>WILO SE declară că produsele citate în prezenta declarație sunt conforme cu dispozițiile directivelor europene următoare și cu legislația națională care le transpun :</p> <p>Mașini 2006/42/CE ; Compatibilitate Electromagnetică 2014/30/CE ; Produselor cu impact energetic 2009/125/CE</p> <p>și, asemenea, sunt conforme cu normele europene armonizate citate în pagina precedentă.</p>
<p>(RU) - русский язык Декларация о соответствии Европейским нормам</p> <p>WILO SE заявляет, что продукты, перечисленные в данной декларации о соответствии, отвечают следующим европейским директивам и национальным предписаниям:</p> <p>Директива ЕС по машинному оборудованию 2006/42/EC ; Директива ЕС по электромагнитной совместимости 2014/30/EC ; Директива о продукции, связанной с энергопотреблением 2009/125/EC</p> <p>и гармонизированным европейским стандартам, упомянутым на предыдущей странице.</p>	<p>(SK) - Slovenčina ES VYHLÁSENIE O ZHODE</p> <p>WILO SE čestne prehlasuje, že výrobky ktoré sú predmetom tejto deklarácie, sú v súlade s požiadavkami nasledujúcich európskych directive a odpovedajúcich národných legislatívnych predpisov:</p> <p>Strojových zariadeniach 2006/42/ES ; Elektromagnetickú Kompatibilitu 2014/30/ES ; Energeticky významných výrobkov 2009/125/ES</p> <p>ako aj s harmonizovanými európskymi normami uvedenými na predchádzajúcej strane.</p>
<p>(SL) - Slovenščina ES-IZJAVA O SKLADNOSTI</p> <p>WILO SE izjavlja, da so izdelki, navedeni v tej izjavi, v skladu z določili naslednjih evropskih direktiv in z nacionalnimi zakonodajami, ki jih vsebujejo:</p> <p>Stroji 2006/42/ES ; Elektromagnetno Združljivostjo 2014/30/ES ; Izdelkov, povezanih z energijo 2009/125/ES</p> <p>pa tudi z uskljenimi evropskimi standardi, navedenimi na prejšnji strani.</p>	<p>(SV) - Svenska EG-FÖRSÄKRAN OM ÖVERENSSTÄMELSE</p> <p>WILO SE intygar att materialet som beskrivs i följande intyg överensstämmer med bestämmelserna i följande europeiska direktiv och nationella lagstiftningar som inför dem:</p> <p>Maskiner 2006/42/EG ; Elektromagnetisk Kompatibilitet 2014/30/EG ; Energirelaterade produkter 2009/125/EG</p> <p>Det överensstämmer även med följande harmoniserade europeiska standarder som nämnts på den föregående sidan.</p>
<p>(TR) - Türkçe CE UYGUNLUK TEYİD BELGESİ</p> <p>WILO SE bu belgede belirtilen ürünlerin aşağıdaki Avrupa yönetmeliklерine ve ulusal kanunlara uygun olduğunu beyan etmektedir:</p> <p>Makine Yönetmeliği 2006/42/AT ; Elektromanyetik Uyumluluk Yönetmeliği 2014/30/AT ; Eko Tasarım Yönetmeliği 2009/125/AT</p> <p>ve önceki sayfada belirtilen uyumlaştırılmış Avrupa standartlarına.</p>	

Wilo – International (Subsidiaries)

Argentina WILO SALMSON Argentina S.A. C1295ABI Ciudad Autónoma de Buenos Aires T +54 11 4361 5929 carlos.musich@wilo.com.ar	Cuba WILO SE Oficina Comercial Edificio Simona Apto 105 Siboney. La Habana. Cuba T +53 5 2795135 T +53 7 272 2330 raul.rodriguez@wilo-cuba.com	Ireland WILO Ireland Limerick T +353 61 227566 sales@wilo.ie	Romania WILO Romania s.r.l. 077040 Com. Chiajna Jud. Ilfov T +40 21 3170164 wilo@wilo.ro	Ukraine WILO Ukraina t.o.w. 08130 Kiev T +38 044 3937384 wilo@wilo.ua
Australia WILO Australia Pty Limited Murrarrie, Queensland, 4172 T +61 7 3907 6900 chris.dayton@wilo.com.au	Czech Republic WILO CS, s.r.o. 25101 Cestlice T +420 234 098711 info@wilo.cz	Italy WILO Italia s.r.l. Via Novegro, 1/A20090 Segrate MI T +39 25538351 wilo.italia@wilo.it	Russia WILO Rus ooo 123592Moscow T +7 495 7810690 wilo@wilo.ru	United Arab Emirates WILO Middle East FZE Jebel Ali Free zone – South PO Box 262720 Dubai T +971 4 880 91 77 info@wilo.ae
Austria WILO Pumpen Österreich GmbH 2351 Wiener Neudorf T +43 507 507-0 office@wilo.at	Denmark WILO Danmark A/S 2690 Karlslunde T +45 70 253312 wilo@wilo.dk	Kazakhstan WILO Central Asia 050002 Almaty T +7 727 312 40 10 info@wilo.kz	Saudi Arabia WILO Middle East KSA Riyadh 11465 T +966 1 4624430 wshoula@wataniaind.com	USA WILO USA LLC Rosemont, IL 60018 T +1 866 945 6872 info@wilo-usa.com
Azerbaijan WILO Caspian LLC 1065 Baku T +994 12 5962372 info@wilo.az	Estonia WILO Eesti OÜ 12618 Tallinn T +372 6 509780 info@wilo.ee	Korea WILO Pumps Ltd. 20 Gangseo, Busan T +82 51 950 8000 wilo@wilo.co.kr	Serbia and Montenegro WILO Beograd d.o.o. 11000 Beograd T +381 11 2851278 office@wilo.rs	Vietnam WILO Vietnam Co Ltd. Ho Chi Minh City, Vietnam T +84 8 38109975 nkminh@wilo.vn
Belarus WILO Bel IODOO 220035 Minsk T +375 17 3963446 wilo@wilo.by	Finland WILO Finland OY 02330 Espoo T +358 207401540 wilo@wilo.fi	Latvia WILO Baltic SIA 1019 Riga T +371 6714-5229 info@wilo.lv	Slovakia WILO CS s.r.o., org. Zložka 83106 Bratislava T +421 2 33014511 info@wilo.sk	
Belgium WILO NV/SA 1083 Ganshoren T +32 2 4823333 info@wilo.be	France WILO Salmson France S.A.S. 53005 Laval Cedex T +33 2435 95400 info@wilo.fr	Lebanon WILO LEBANON SARL Jdeideh 1202 2030 Lebanon T +961 1 888910 info@wilo.com.lb	Slovenia WILO Adriatic d.o.o. 1000 Ljubljana T +386 1 5838130 wilo.adriatic@wilo.si	
Bulgaria WILO Bulgaria EOOD 1125 Sofia T +359 2 9701970 info@wilo.bg	Great Britain WILO (U.K.) Ltd. Burton Upon Trent DE14 2WJ T +44 1283 523000 sales@wilo.co.uk	Lithuania WILO Lietuva UAB 03202 Vilnius T +370 5 2136495 mail@wilo.lt	South Africa Wilo Pumps SA Pty LTD 1685 Midrand T +27 11 6082780 patrick.hulley@salmson.co.za	
Brazil WILO Comercio e Importacao Ltda Jundiaí – São Paulo – Brasil 13.213-105 T +55 11 2923 9456 wilo@wilo-brasil.com.br	Greece WILO Hellas SA 4569 Anixi (Attika) T +302 10 6248300 wilo.info@wilo.gr	Morocco WILO Maroc SARL 20250 Casablanca T +212 (0) 5 22 66 09 24 contact@wilo.ma	Spain WILO Ibérica S.A. 8806 Alcalá de Henares (Madrid) T +34 91 8797100 wilo.iberica@wilo.es	
Canada WILO Canada Inc. Calgary, Alberta T2A 5L7 T +1 403 2769456 info@wilo-canada.com	Hungary WILO Magyarország Kft 2045 Törökbalint (Budapest) T +36 23 889500 wilo@wilo.hu	The Netherlands WILO Nederland B.V. 1551 NA Westzaan T +31 88 9456 000 info@wilo.nl	Sweden WILO NORDIC AB 35033 Växjö T +46 470 727600 wilo@wilo.se	
China WILO China Ltd. 101300 Beijing T +86 10 58041888 wilobj@wilo.com.cn	India Wilo Mather and Platt Pumps Private Limited Pune 411019 T +91 20 27442100 services@matherplatt.com	Norway WILO Norge AS 0975 Oslo T +47 22 804570 wilo@wilo.no	Switzerland Wilo Schweiz AG 4310 Rheinfelden T +41 61 836 80 20 info@wilo.ch	
Croatia WILO Hrvatska d.o.o. 10430 Samobor T +38 51 3430914 wilo-hrvatska@wilo.hr	Indonesia PT. WILO Pumps Indonesia Jakarta Timur, 13950 T +62 21 7247676 citrawilo@cbn.net.id	Poland WILO Polska Sp. z.o.o. 5-506 Lesznowola T +48 22 7026161 wilo@wilo.pl	Taiwan WILO Taiwan CO., Ltd. 24159 New Taipei City T +886 2 2999 8676 nelson.wu@wilo.com.tw	
		Portugal Bombas Wilo-Salmson Sistemas Hidráulicos Lda. 4475-330 Maia T +351 22 2080350 bombas@wilo.pt	Turkey WILO Pompa Sistemleri San. ve Tic. A.S., 34956 İstanbul T +90 216 2509400 wilo@wilo.com.tr	

wilo

Pioneering for You

WILO SE
Nortkirchenstr. 100
44263 Dortmund
Germany
T +49 (0)231 4102-0
T +49 (0)231 4102-7363
wilo@wilo.com
www.wilo.com