Pioneering for You



Wilo-DrainLift SANI CUT-S



en Installation and operating instructions

6094307 · Ed.03/2025-04





DrainLift SANI CUT-S https://qr.wilo.com/496

Table of Contents

| 1 | Gene | ral | |
|---|----------------------|--|----|
| | 1.1 | About these instructions | 4 |
| | 1.2 | Copyright | 4 |
| | 1.3 | Subject to change | 4 |
| | 1.4 | Exclusion from warranty and liability | 4 |
| 2 | Safet | y | 4 |
| - | 2.1 | Safety signs, instructions, and text markups | |
| | 2.2 | Staff qualifications | |
| | 2.3 | Protective equipment for staff | |
| | 2.4 | Electrical work | |
| | 2.5 | Monitoring devices | |
| | 2.6 | Pumping of fluids that are hazardous to health | |
| | 2.7 | Explosive atmosphere in the collection tank | |
| | 2.8 | Transport | |
| | 2.9 | Installing/dismantling | |
| | 2.10 | During operation | |
| | 2.11 | Cleaning and disinfection | |
| | 2.12 | Maintenance tasks | |
| | 2.13 | Operator responsibilities | |
| 2 | A == 1 | ication/use | 7 |
| 3 | Арр іі 3.1 | Intended use | |
| | 3.2 | Fluids | |
| | 3.3 | Improper use | |
| | | | |
| 4 | | uct description | |
| | 4.1 | Design | |
| | 4.2 4.3 | Materials | |
| | 4.5 4.4 | Monitoring devices | |
| | 4.4 | Operating principle | |
| | 4.5 4.6 | Operation with frequency converter Type key | |
| | 4.0 | Technical data | |
| | 4.8 | Date of manufacture | |
| | 4.9 | Scope of delivery | |
| | 4.10 | Accessories | |
| _ | _ | | |
| 5 | | sportation and storage1 | |
| | 5.1 5.2 | Delivery 1 | |
| | 5.2 5.3 | Transport1 | |
| | | Storage 1 | |
| 6 | | Ilation and electrical connection 1 | |
| | 6.1 | Staff qualifications 1 | |
| | 6.2 | Installation types | |
| | 6.3 | Operator responsibilities 1 | |
| | 6.4 | Installation 1 Electrical connection | |
| | 6.5 | | L/ |
| 7 | Com | missioning 1 | |
| | 7.1 | Staff qualifications 1 | |
| | 7.2 | Operator responsibilities 1 | |
| | 7.3 | Operation 1 | |
| | 7.4 7 E | Test run | |
| | 7.5 | Follow-up time 1 | |
| 8 | Oper | ation 1 | |
| | 8.1 | Application limits 2 | |
| | 8.2 | During operation | |
| | 8.3 | Emergency operation 2 | 20 |
| 9 | Shut | down/dismantling 2 | 21 |

| | 9.1 | Staff qualifications | 21 |
|----|-------|--|----|
| | 9.2 | Operator responsibilities | 21 |
| | 9.3 | Shutdown | 21 |
| | 9.4 | Removal | 22 |
| | 9.5 | Cleaning and disinfection | 23 |
| | | | |
| 10 | Main | tenance and repair | 23 |
| | 10.1 | General overhaul | 23 |
| 11 | Spare | e parts | 24 |
| 12 | Dispo | osal | 24 |
| | 12.1 | Protective clothing | 24 |
| | | | |
| | 12.2 | Operating fluids | 24 |
| | | Operating fluids Information on the collection of used electrical and ele | |

en

1 General

| 1.1 | About these instructions | These instructions are a part of the product. Obey the instructions for correct handling and use: Read the instructions carefully before all works. Keep the instructions easy to access. Follow the product specifications. |
|-----|--------------------------------------|---|
| | | Follow the markings on the product. |
| 1.2 | Copyright | WILO SE © 2025 |
| | | The reproduction, distribution, and use of this document and the communication of its contents to others without express consent is prohibited. Infringement results in the obligation to pay for damages. All rights reserved. |
| 1.3 | Subject to change | Wilo reserves the right to change the listed data without prior notice and is not liable for technical inaccuracies and/or omissions. The illustrations vary from the original and are in-tended as a sample representation of the product. |
| 1.4 | Exclusion from warranty and liabil- | Wilo accepts no warranty or liability in these cases: |
| | ity | Wrong configuration because the operator or the customer did not give enough or cor- rect instructions |
| | | Non-compliance with these instructions Incorrect use of the product |
| | | Incorrect storage or transport |
| | | Incorrect installation or dismantling |
| | | Not sufficient maintenance Non-approved repairs |
| | | Not applicable installation location |
| | | Chemical, electrical or electrochemical causesWear of product components |
| _ | | This social contains sofety information for each phase of the product's lifecuster. Disrog |
| 2 | Safety | This section contains safety information for each phase of the product's lifecycle. Disreg- arding this information leads to: |
| | | Danger to persons |
| | | Danger to the environmentDamage to property |
| | | Loss of claims for damages |
| 2.1 | Safety signs, instructions, and text | The safety instructions are structured as below: |
| | markups | Danger to persons: signal word, safety symbol, text, and shaded grey. Property damage: signal word and text. |
| | | Signal words |
| | | DANGER! Disregarding these instructions leads to death or serious injury. |
| | | WARNING! Disregarding these instructions leads to (serious) injury. |
| | | CAUTION! |
| | | Disregarding these instructions leads to property damage or even a total loss. NOTICE! Useful information for handling the product. |
| | | Text markups |
| | | Precondition |
| | | Work step/list ⇒ Notice/instructions |
| | | ► Result |
| | | Cross-references The name of the section or table is put in quotation marks " ". The page number follows in square brackets []. |
| | | |

Overview of safety symbols



Danger of death because of electric shock



Protective equipment: cleaning work

- Safety gloves: 4X42C + Type A (uvex protector chemical NK2725B)
 - Safety glasses: uvex skyguard NT

Protective equipment for staff

2.2

2.3

Staff qualifications

2.4 Electrical work

2.5 Monitoring devices

- Marking of frame: W 166 34 F CE
- Marking of eyeglass-lens: 0-0.0* W1 FKN CE
 * The safety class for filters is not necessary for this work.
- Respiratory mask: Half mask 3M series 6000 with filter 6055 A2

Article recommendations

The mentioned branded articles are non-binding suggestions. Equivalent products from other brands can also be used. The prerequisite is obeying the standards mentioned.

WILO SE accepts no liability for the articles mentioned regarding their conformity to the applicable standards.

- Do electrical work only by a qualified electrician.
- Make sure that the product is disconnected from the mains connection. Prevent the product from accidental switching on.
- Obey the local regulations for the mains connection.
- Obey the specifications of the local energy supplier for the mains connection.
- The staff knows the electrical connections.
- The staff knows the shutdown options for the product.
 - Follow the technical data on the rating plate and in these instructions.
- Earth the product.
- To prevent switchgears from flooding, install switchgears at a sufficient height.
- Replace damaged cables. Contact customer service for this work.

Provide the monitoring devices listed below on-site:

Circuit breaker

- The type and switching characteristics of the circuit breakers must be compatible with the rated current of the connected product.
- Obey local regulations.

Residual-current device (RCD)

- If persons can touch the device and conductive fluids, install a residual-current device (RCD).
- Obey the regulations of the local energy supplier.

There is a risk of bacterial infection when touching the fluid in the lifting unit.

- Wear protective equipment.
- Clean and disinfect the tank after removal.
- Inform all persons about the pumped fluid and the danger.

Sewage containing faeces can lead to gas collections in the tank. These gas collections can come out into the operating space because of incorrect installation or maintenance work. An explosive atmosphere can occur. This atmosphere can ignite and lead to an explosion. To prevent an explosive atmosphere, follow these points:

- Only use undamaged tanks (no cracks, leaks, porous material). Switch off lifting units with damaged tanks immediately.
- Make sure that all connections for the inlet, discharge pipe, and ventilation are sealed tightly. Obey local regulations for these connections.
- Lay the ventilation pipe.
 - For floor-mounted or concealed-wall installation in buildings, lay the ventilation pipe over the roof of the building. Obey the local regulations for the correct length of the pipe above the roof.
 - For concealed-floor installation (underground installation) outside of buildings, lay the ventilation pipe over the surface. Obey the local regulations for the correct length of the pipe above the surface.
- When opening the tank (e.g. during maintenance work), make sure that the operating space is sufficiently ventilated.
- Obey local regulations and laws on accident prevention and work safety on-site.
- Move the product by the grip strap at the tank.

Packaging guidelines

- Make sure that the packaging is shock-resistant.
- Make sure that the packaging is moisture-resistant.
- Make sure that the packaging permits safety fastening.
- Make sure that the packaging prevents dirt, dust, and oil from going into.
- Obey local regulations and laws on accident prevention and work safety on-site.
 Make sure that the product is disconnected from the mains connection. Prevent the
- Make sure that the product is disconnected from the mains connection. Prevent the
 product from accidental switching on.
- When dismantling, shut off inlet and discharge pipe.
- Ventilate closed rooms.
 - Installation and operating instructions Wilo-DrainLift SANI CUT-S Ed.03/2025-04

- 2.6 Pumping of fluids that are hazardous to health
- 2.7 Explosive atmosphere in the collection tank

2.8 Transport

2.9 Installing/dismantling

- Do not work alone in closed rooms. Only do this work with a second person.
- Toxic or asphyxiating gases can collect in closed rooms or buildings. Wear protective equipment (e.g., gas detector). Obey the factory regulations.
- Clean the product thoroughly.
 Risk of fire from static load. Make sure to wear antistatic clothing when cleaning plastic parts. Do not use highly flammable cleaning agents.
- 2.10 During operation
- Open all shut-off valves in the inlet and discharge pipe.
- The maximum inflow must be less than the maximum output of the system.
- Do not open the inspection opening.
- Make sure that the operating space is sufficiently ventilated.

CAUTION

Property damage through overpressure in the collection tank!

If there is overpressure in the collection tank, the tank can break. To prevent overpressure in the collection tank, follow these points:

- The maximum inlet height of the lowest inlet is 5 m (16.5 ft).
- The maximum inflow must be lower than the maximum volume flow at the duty point.
- The maximum permitted pressure in the discharge line is 6 bar (87 psi).

2.11 Cleaning and disinfection

Maintenance tasks

2.12

- Wear protective equipment. Obey the factory regulations.
 - Use a disinfectant. Follow the manufacturer's instructions:
 - Wear the given protective equipment. If you are not sure, contact your supervisor.
 - Give the staff the necessary information about the disinfectant and its correct use.



WARNING

Risk of injury from sharp edges and the macerator!

The pump has a macerator. The macerator blades are sharp. Furthermore, there can be sharp edges on the suction port. There is a high risk of cuts. Follow these points:

- Do not touch the macerator.
- Carry the pump only by the handle.
- Wear cut-resistant gloves.
- Maintenance work: Only a specialist for lifting units must do the work. Necessary knowledge: sanitary installation
- Make sure that the product is disconnected from the mains connection. Prevent the product from accidental switching on.
- Clean the product thoroughly.
 Risk of fire from static load. Make sure to wear antistatic clothing when cleaning plastic parts. Do not use highly flammable cleaning agents.
- When dismantling, shut off inlet and discharge pipe.
- Only use original parts from the manufacturer. The use of non-original parts releases the manufacturer from all liability.
- Immediately clean up and remove leaked liquids (fluid, operating fluid). Obey local regulations to dispose of these liquids.
- Supply these instructions in the language which the staff can read and understand.
- Make sure that staff are trained to do the set tasks.
- Supply protective equipment. Make sure that staff wears protective equipment.
- Make sure that attached safety and warning signs are clearly readable.
- Inform staff how the system operates.
- Mark and close the working area.
- 3 Application/use

Operator responsibilities

3.1 Intended use

2.13

As a lifting unit for floor-mounted or concealed-wall installation in buildings, or for concealed-floor installation in pump chambers:

 In cases where sewage cannot be discharged directly into the sewer system through a natural downward slope 3.2 Fluids

 For backflow resistant drainage in cases where the discharge point is below the backflow level

NOTICE! When pumping sewage with oil or grease content, install an oil and grease separator upstream of the lifting unit.

For the collection and pumping of these fluids in commercial areas:

- Sewage with faeces
- Sewage without faeces

Sewage pumping according to 12050

The lifting unit follows DIN EN 12050-1.





DANGER

Explosion hazard when pumping explosive fluids!

The lifting unit is not designed to pump highly flammable and explosive fluids. There is a danger of death through explosion.

• Do not pump highly flammable and explosive fluids (e.g., gasoline, kerosene, ...).

Do **not** use for these fluids:

- Sewage from discharge points higher than the backflow level which can be discharged directly into the sewer system through a natural downward slope
- Debris, ash, rubbish, glass, sand, plaster, cement, lime, mortar, fibrous materials, textiles, paper towels, wet wipes (e.g. fleece cloths, moist toilet paper wipes), nappies, cardboard, coarse paper, synthetic resins, tar, kitchen waste, grease, oil
- Slaughterhouse waste, disposal of slaughtered animals and animal waste (liquid manure etc.)
- Toxic, aggressive and corrosive fluids, such as heavy metals, biocides, pesticides, acids, bases, salts, swimming pool water
- Cleaning agents, disinfectants, dishwashing or laundry detergents in excessive quantities, which have a disproportionately high degree of foam formation
- Drinking water
- To use the product correctly, follow these installation and operating instructions.

4 Product description

4.1 Design



Fig. 1: Overview

Compact, ready for connection, and fully submersible single pump lifting unit with macerator hydraulics for pumping sewage containing faeces.

| 1 | Collection tank |
|---|------------------------|
| 2 | Ventilation connection |
| 3 | Inspection opening |
| 4 | Motor |
| 5 | Flexible pipe |
| 6 | Non-return valve |
| 7 | Drain connection |
| 8 | Grip strap |
| 9 | Discharge port |
| | |

Gas- and watertight collection tank:

- Sloped floor at an angle
- Inspection opening with transparent cover
- Freely selectable inlets in the shown areas
- Level measurement with analogue output signal through reed contact and two switching points.

Macerator pump:

- Mounted directly on the collection tank
- Surface-cooled (air) motor with thermal motor monitoring
- Discharge port with non-return valve attached

Pre-wired switchgear for automatic operation:

Wilo-Control MS-L

· Collective fault signal with potential-free contact

| | | Integrated and mains-independent alarm Adjustable follow-up time 1.5 m connection cable with attached plug | | |
|-----|---|--|---|---|
| 4.2 | Materials | Motor housing: 1.4404 (AISI 316L) Hydraulics: EN-GJL-250 (ASTM A48 Class 35/40B) Impeller: EN-GJL-250 (ASTM A48 Class 35/40B) Macerator: 1.4528/59 HRC (AISI 440B+Co) Tank: PE Non-return valve: EN-GJL-250 (ASTM A48 Class 35/40B) | | |
| 4.3 | Monitoring devices | Monitoring of m | otor winding | |
| | - | - | • | oring with bimetallic sensor: |
| | | Single-phase if it overheats | AC motor: The moto . The motor automa AC motor: The moto | or monitoring is self-switching. The motor switches off tically switches on again when it has cooled down. r monitoring is displayed and reset through the con- |
| | | High water alarn | n with collective fa | ult signal |
| | | pump automatica tivated. An exter | ally switches on. Fur | -on level, a sound and visual alarm signal starts. The thermore, the collective fault signalling contact is ac-through SmartHome connection) can be triggered |
| | | | | n water level, the pump switches off after the set fol- lowledged automatically. |
| 4.4 | Operating principle | The sewage flows into the collection tank through the inlet pipe. When the water con the switch-on level, the pump switches on. The collected sewage is pumped into the nected discharge pipe. When the water comes to the switch-off level, the pump swit off after the set follow-up time. When the water comes to the high water level, the pump switches on (forced switch- The high water LED or display shows an alarm signal. Also, the internal buzzer can em sound alarm signal. Furthermore, the output for the collective fault signal (SSM) active | | nes on. The collected sewage is pumped into the con- |
| | | | | an alarm signal. Also, the internal buzzer can emit a |
| 4.5 | Operation with frequency con- verter | Operation with the frequency converter is not permitted. | | |
| | | | | |
| 4.6 | Type key | Example: Drainl ift | | JT-S.27/T540/1-CEE |
| 4.6 | Type key | Example: DrainLift SANI CUT | Product family | |
| 4.6 | Type key | DrainLift | | |
| 4.6 | Type key | DrainLift SANI CUT | Product family Sewage lifting un | it with macerator |
| 4.6 | Type key | DrainLift SANI CUT S | Product family Sewage lifting un Size | it with macerator d in m at $Q = 0$ |
| 4.6 | Type key | DrainLift SANI CUT S 27 | Product family Sewage lifting un Size Max. delivery hea Mains connectior • M = 1~ | it with macerator d in m at $Q = 0$ |
| 4.6 | Type key | DrainLift SANI CUT S 27 T | Product family Sewage lifting un Size Max. delivery hea Mains connection • M = 1~ • T = 3~ | it with macerator d in m at $Q = 0$ |
| 4.6 | Type key | DrainLift SANI CUT S 27 | Product family Sewage lifting un Size Max. delivery hea Mains connectior • M = 1~ | it with macerator d in m at $Q = 0$ |
| 4.6 | Type key | DrainLift SANI CUT S 27 T | Product family Sewage lifting un Size Max. delivery hea Mains connection • $M = 1$ ~ • $T = 3$ ~ Electrical Value: • $5 = 50$ Hz • $6 = 60$ Hz • $23 = 230$ V • $38 = 380$ V | it with macerator d in m at Q = 0 I: |
| 4.6 | Type key | DrainLift SANI CUT S 27 T 540 | Product family Sewage lifting un Size Max. delivery hea Mains connection • $M = 1 \sim$ • $T = 3 \sim$ Electrical Value: • $5 = 50$ Hz • $6 = 60$ Hz • $23 = 230$ V • $38 = 380$ V • $40 = 400$ V Motor and switch | it with macerator d in m at Q = 0 I: |
| 4.6 | Type key | DrainLift SANI CUT S 27 T 540 | Product family Sewage lifting un Size Max. delivery hea Mains connection • $M = 1$ ~ • $T = 3$ ~ Electrical Value: • $5 = 50$ Hz • $6 = 60$ Hz • $23 = 230$ V • $38 = 380$ V • $40 = 400$ V Motor and switch • $1 = operating$ Plug: • $EF = CEE7/7$ pl • $G = G$ type (UH • $I = I$ type (AU, | it with macerator d in m at Q = 0 :: gear version: mode: S3, switchgear: Control MS–L ug (Shockproof) () NZ, ZH) t CEE plugs (16 A/32 A, 3–poles; 32 A, 1–pole) |
| 4.6 | Type key Technical data | DrainLift SANI CUT S 27 T 540 1 CEE | Product family Sewage lifting un Size Max. delivery hea Mains connection • $M = 1 \sim$ • $T = 3 \sim$ Electrical Value: • $5 = 50 \text{ Hz}$ • $6 = 60 \text{ Hz}$ • $23 = 230 \text{ V}$ • $38 = 380 \text{ V}$ • $40 = 400 \text{ V}$ Motor and switch • $1 = \text{operating}$ Plug: • $EF = CEE7/7 \text{ pl}$ • $G = G \text{ type (UF)}$ • $I = I \text{ type (AU)}$ • $CEE = \text{different}$ • $O = \text{without pl}$ | it with macerator d in m at Q = 0 :: gear version: mode: S3, switchgear: Control MS–L ug (Shockproof) () NZ, ZH) t CEE plugs (16 A/32 A, 3–poles; 32 A, 1–pole) |
| | | DrainLift SANI CUT S 27 T 540 1 CEE | Product family Sewage lifting un Size Max. delivery hea Mains connection • $M = 1 \sim$ • $T = 3 \sim$ Electrical Value: • $5 = 50 \text{ Hz}$ • $6 = 60 \text{ Hz}$ • $23 = 230 \text{ V}$ • $38 = 380 \text{ V}$ • $40 = 400 \text{ V}$ Motor and switch • $1 = \text{operating}$ Plug: • $EF = CEE7/7 \text{ pl}$ • $G = G \text{ type (UF)}$ • $I = I \text{ type (AU)}$ • $CEE = \text{different}$ • $O = \text{without pl}$ | it with macerator d in m at Q = 0 :: gear version: mode: S3, switchgear: Control MS-L ug (Shockproof) {} NZ, ZH) t CEE plugs (16 A/32 A, 3-poles; 32 A, 1-pole) ug |

Max. volume flow

See rating plate

en

| Max. inlet height of the lowest in- let | 5 m (16.5 ft) | |
|--|---|--|
| Fluid temperature | 3 40 °C (37 104 °F) | |
| Max. short-time fluid temperature | 65 °C (149 °F), 5 min | |
| Ambient temperature | 3 40 °C (37 104 °F) | |
| Protection class of lifting unit | IP68 (2 mWs/7 d) | |
| Protection class of switchgear | IP54 | |
| Electrical data | | |
| Power consumption $[P_1]$ | See rating plate | |
| Rated power [P ₂] | See rating plate | |
| Rated current $[I_N]$ | See rating plate | |
| Speed [n] | See rating plate | |
| Activation type | Direct | |
| Operating mode | \$3 10% | |
| | Cycle time: 10 min Activation period: 1 min Downtime: 9 min | |
| Maximum switching frequency | 60/h | |
| Cable length to plug | 1.5 m (5 ft) | |
| Cable length to switchgear | 4 m (13.2 ft) | |
| Connections | | |
| Discharge port | DN 32/40, PN 6; 40 mm, PN 6 | |
| Inlet connection | DN/OD 110; DN/OD 90 | |
| Ventilation connection | DN/OD 50 | |
| Drain connection | DN/OD 50 | |
| Dimensions and weights | | |
| Tank volume | 21 l (5 US.liq.gal.) | |
| Max. usable volume in the tank ac- cording to the inlet height* | 11 l/2 US.liq.gal. (180 mm*) | |
| Diagonal dimension | 756 mm (30 in) | |
| Weight | 34 kg (75 lb) | |
| Noise level | 70 dB(A) | |
| | | |

The unit is not designed for continuous duty (operation mode S1). The max. volume flow applies to intermittent periodic duty (operation mode S3).

4.8 Date of manufacture

4.9 Scope of delivery

4.10 Accessories

The date of production is shown according to ISO 8601: YYYYWww (e.g., 2020W53)

- YYYY = year
- W = abbreviation for week
- ww = calendar week
- Fully submersible lifting unit with macerator, switchgear, and connection cable including plug
- Pipe connection DN/OD 40
- HT double socket DN/OD 50 for ventilation connection
- HT double socket DN/OD 50 for drain connection
- Inlet set with hole saw 124 mm (5 in) and seal for HT pipe DN/OD 110
- Floor fixation set
- Noise insulation mat
- 9 V rechargeable battery
- Installation and operating instructions

On the discharge side

• Shut-off valve

On the inlet side

- Shut-off valve with fixed pipe ends
- Inlet seal and inlet set (seal and hole saw)

General

- Diaphragm hand pump
- 3-way stopcock for switching over to manual suctioning
- Signal horn
- Flash light
- DrainAlarm Mains–independent alarm switching device with visual and sound alarm signal and a connection for a float switch

5 Transportation and storage

5.1 Delivery

Transport

Storage

5.2

5.3

- Immediately examine the shipment for defects (damage, completeness ...).
- Write all defects on the freight documentation.
- Tell the manufacturer about the defects on the day of receiving the shipment.
- Later told claims can no longer be asserted.

The manufacturer supplies the lifting unit in applicable packaging. This packaging prevents damage during transport and storage.

- To prevent damage to the lifting unit during transport, only remove the outer packaging at the installation site.
- Do not immerse the plug in the fluid.
- Do not pull on the connection cable.
- Use leak-proof packaging for used lifting units, e.g., rip-proof plastic bags.



DANGER

Danger through bacterial infection!

The lifting unit collects and pumps sewage. There can be bacteria and hazardous germs in the tank. Follow these points:

- After removal, disinfect the lifting unit. Especially the inner side of the tank.
- Obey the factory regulations.

CAUTION

Property damage through water ingress in the connection cable!

Water in the connection cable destroys the cable. Water ingress in the connection cable can also cause total loss of the motor.

- Do not immerse the bare cable end in the fluid.
- Seal the bare cable end for storage.

Newly supplied lifting units can be stored for one year. For longer storage time, contact customer service.

When storing the pump, follow these points:

- Put the lifting unit securely on a hard surface and prevent it from slipping and falling over.
- Permitted storage temperature: -15 ... 60 °C (5 ... 140 °F), max. humidity: 90%, noncondensing.

It is recommended to use frost-proof storage. Storage temperature: 5 ... 25 $^\circ C$ (41 ... 77 $^\circ F),$ relative humidity: 40 ... 50%.

- Drain the collection tank fully.
- Coil up connection cables and attach them to the motor.
- Seal open ends of the connection cables and plugs in a watertight manner.
- Obey the instructions for switchgear storage.
- Tightly seal all open connections.
- Do not keep the lifting unit in spaces where welding work is carried out. The caused gases or radiation can corrode the parts made of plastic and elastomer.
- Prevent the lifting unit from direct sunlight and heat. Very high heat can damage the plastic parts.
- Parts made of elastomer are subject to natural brittleness. Contact the customer service if storage is necessary for more than 1 year.

| 6 | Installation and electrical con- nection |
|---|---|
| | |

- 6.1 Staff qualifications
- 6.2 Installation types

6.3 Operator responsibilities

6.4 Installation

Electrical work: Only a qualified electrician must do the work.
 Necessary knowledge: identification and prevention of electrical hazards

 Installation and dismantling: Only a specialist in sanitary facilities must do the work. Necessary knowledge: fastening of buoyancy safeguards, connection of plastic pipes

- Floor-mounted installation in buildings
- Concealed–wall installation in buildings
- Concealed-floor installation in pump chambers outside buildings
- Obey local accident prevention and safety regulations.
- Obey regulations for working below suspended loads when using lifting accessories.
- Supply protective equipment. Make sure that staff wears protective equipment.
- Obey local sewage technology regulations for the operation of sewage systems.
- Make sure there is access to the installation location.
- Structural components and foundations must be sufficiently stable for the device to be fixed in a safe and functional manner. The operator is responsible for supplying the correct structural components and foundations.
- Obey local regulations for the installation work.
- Make sure that the available consulting documents (installation plans, installation location, inflow conditions) are full and accurate.
- Obey the consulting documents to lay and prepare the pipes.
- To prevent the mains connection from flooding, mount the mains connection at a sufficient height.



WARNING

- Risk of injury without protective equipment!
- During work, there is a risk of (serious) injury to feet and hands.
- Wear safety gloves.
- Wear safety shoes.

Building installation

- Obey EN 12056-4.
- Make sure that the operating space is sufficiently ventilated.
- Free space of min. 60 cm (2 ft) around the unit
- In case of an accident: Prepare pump sump in the operating space, min. dimensions: 500x500x500 mm (20x20x20 in). Use pump accordingly. Make sure that manual drainage is feasible.
- Make sure that all connection cables are laid correctly. Prevent the connection cables from causing any risk (i.e. tripping, damage during operation). Examine if the cable cross-section and the cable length are sufficient for the selected installation type.
- The switchgear is not flood-proof. Install the switchgear at an sufficient height.

Installation in the pump chamber

DANGER



Danger through lone working!

Working in chambers, narrow rooms, and in areas with a risk of falling can be dangerous. Do not work alone.

• Only do this work with a second person.



WARNING

Risk of injury without protective equipment!

During work, there is a risk of (serious) head injury.

• Wear safety helmet (if a lifting equipment is used).

CAUTION

Property damage through frost!

Frost can cause malfunctions. Frost can also cause property damage.

- Make sure that the pump chamber and the discharge line are outside the frost zone.
- If the pump chamber or the discharge line is in the frost zone, stop operating the system during the time of frost.

Also adhere to the following points if the lifting unit is installed in a pump chamber:

- Toxic or asphyxiating gases can collect during work.
 - If toxic or asphyxiating gases collect, go out of the workplace immediately.
- Be conscious of the diagonal dimension of the lifting unit.
- Install lifting accessory on a flat, clean and hard surface. Make sure to access the storage area and installation location easily.
- Attach two transport straps to the lifting unit. Prevent the transport straps from slipping. Only use technically approved lifting slings.
- If it is no longer safe to work because of the weather conditions (e.g. ice formation, strong wind), stop work immediately.

The lifting unit can be installed on different constructions (concrete and steel construction, etc.). Use the fixation material which is applicable for the related construction. For correct installation, follow these instructions for the fixation material:

- Prevent tearing or chipping of the construction surface, follow the minimum edge distances.
- Make sure that the installation is tight and safe, follow the given drilling hole depth.
- Drilling dust decreases holding strength, always blow out or vacuum out the drilling hole.
- Only use components (e.g. screws, anchors, mortar cartridges) which are in good condition.

6.4.2 Note on pipework The pipework has changing pressures during operation. Pressure peaks can occur depending on the operating conditions, for example, when closing the non-return valve. These pressure peaks can be multiple times the pump pressure. These changing pressures apply forces on the piping and the pipe connections. For safe and correct operation, design and examine the piping and pipe connections based on these points:

- Make sure that the pipes are self-supporting: No tensile or compressive forces are applied on the lifting unit.
- Consider the pressure resistance of pipework and pipe connections.
- Consider tensile strength of the pipe connections (= longitudinal force fit connection).
- Consider the pressure rating of the pipes.
- Make sure that pipes are connected without tension and vibrations.
- Install a gate valve on the inlet side and on the discharge pipe side downstream of the non-return valve.

Install the lifting unit in these steps:

- Preparing the installation.
- Installing the lifting unit .
- Connecting the discharge pipe.
- Connecting the inlet.
- Connecting the ventilation pipe.
- Connecting a diaphragm hand pump to the drain connection.
- Unpack the lifting unit.
 - Remove the transportation lock.
 - Examine the scope of delivery.
 - Examine that all components are in correct working condition. **CAUTION! Do not install** defective components. Defective components can lead to system failures.
 - Put accessories aside and keep them for later use.
 - Prepare the installation location:
 - Horizontal and flat installation surface
 - Free space of min. 60 cm (2 ft) around the unit
 - Feasible fixation with dowels
 - Clean, free of coarse solids
 - Dry
 - Frost-free
 - Sufficiently lit

6.4.4 Preparing the installation

Work steps

6.4.1

6.4.3

Note on fixation material

6.4.5 Installing the lifting unit




Fig. 2: Lifting unit top view

For concealed-wall installation, follow these points:

- Inspection opening
- Minimum distance between wall and the unit: 20 mm
- Sufficient and regular air change for motor cooling CAUTION! Not sufficient air change can lead to overheating of the motor and a possible decrease of function of the lifting unit.
- Ventilation of the lifting unit over the roof
- Sufficient space for maintenance and repair: safe and easy access to tank opening, non-return valve, motor, and switchgear
- For concealed-floor installation, follow these points:
 - Sufficient space for maintenance and repair: safe and easy access to tank opening, non-return valve and motor
 - Ventilation of the lifting unit over the surface
 - Outdoor switch cabinet for installation of the switchgear

1 Fastening grooves for floor anchoring

Install the lifting unit. Prevent the lifting unit from buoyancy and twisting. Anchor the lifting unit to the floor.

- Installation preparing work is done.
- Installation location is prepared as shown in the consulting documents.
- Applicable fixation material is given for the building floor. NOTICE! Follow the information on the fixation material.
- 1. Put the lifting unit at the installation location and align it to the pipework. CAUTION! To prevent the switchgear from falling down, attach the switchgear to the lifting unit. The switchgear can break if dropped. NOTICE! Lifting unit must be upright.
- 2. Mark the drilling holes of the fastening grooves.
- 3. Put the lifting unit aside.
- 4. Drill and clean the holes. Put into the dowels.
- 5. Lay and align the noise insulation mat.
- 6. Put and align the lifting unit to the noise insulation mat.
- 7. Put into the fastening screws and washers through the fastening grooves. Put the fastening screws into the dowels.
- 8. Fasten the lifting unit to the floor.
- 9. To prevent the switchgear from flooding, fasten the switchgear to the wall at a sufficient height (see switchgear instructions).
- 10. Lay the connection cable. Obey applicable regulations.
 - ▶ Lifting unit is installed. Next step: Connecting the discharge pipe.

6.4.6 Connecting the discharge pipe

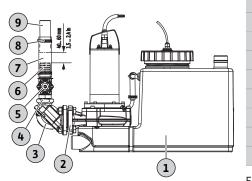


Fig. 3: Fitting discharge connection

| 1 | Lifting unit |
|---|------------------|
| 2 | Discharge port |
| 3 | Non-return valve |
| 4 | Double nipple |
| 5 | Shut-off valve |
| 6 | Hose nipple |
| 7 | Flexible collar |
| 8 | Pipe clamp |
| 9 | Discharge pipe |
| | |

Follow these points to connect the discharge pipe:

- Make sure that the discharge pipe is DN 32 or larger.
- Be conscious of the flow rate in the discharge pipe: 0.7 m/s (2.3 ft/s) to 2.3 m/s (7.5 ft/s).
- Do not decrease the pipe diameter.
- Make sure that all connections are fully tight.
- Install the discharge pipe as a "pipe loop" to prevent backflow from the primary public sewer.

At the highest point, the bottom edge of the pipe loop must be above the locally given backflow level.

- To prevent frost, install the discharge line sufficiently deep.
- Install a shut-off valve.
- ✓ The lifting unit is installed correctly.

- / The discharge pipe is installed correctly as shown in the consulting documents.
- Assembly materials are prepared:
- 1x shut-off valve 1x flexible collar 1x double nipple 1x hose nipple
- 2x pipe clamps
- Screw the double nipple in the non-return valve. Tightening torque: 8 Nm (5.9 ft·lb).
 ⇒ To prevent leakage, it is recommended to apply seal connection with Teflon tape for all screw connections.
- 2. Screw the shut-off valve on the double nipple. Tightening torque: 8 Nm (5.9 ft·lb).
- 3. Screw the hose nipple in the shut-off valve. Tightening torque: 5 Nm (3.7 ft·lb).
- 4. Slide the flexible collar over the discharge pipe.
- 5. Slide the flexible collar over the hose nipple.
 - \Rightarrow To make sure that the discharge pipe is connected in a sound-isolated manner, keep a 40 ... 60 mm (1.5 ... 2.4 in) distance between the end of the discharge pipe and the end of the hose nipple.
 - If the distance is too small, decrease the length of the discharge pipe.
 - If the distance is too large, extend or replace the discharge pipe.
- 6. Align the flexible collar centrally between the shut-off valve and the discharge pipe.
- 7. Fasten the flexible collar to the hose nipple and discharge pipe with one pipe clamp each. **Tightening torque: 5 Nm (3.7 ft·lb).**
 - > Discharge pipe is connected. Next step: Connecting the inlet.

6.4.7 Connecting the inlet

The inlet can be located in the areas indicated on the rear wall, both side walls and the tank roof, as desired.

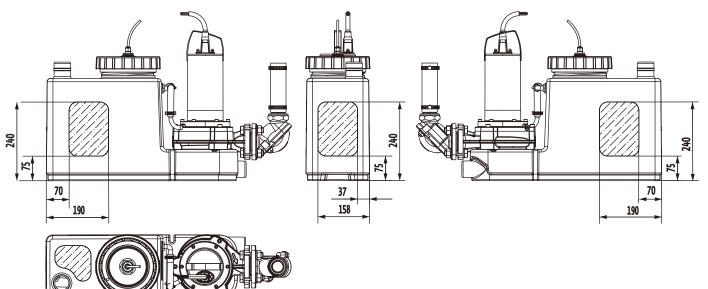
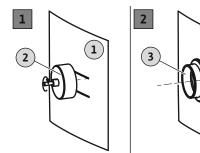



Fig. 4: Inlet areas

Follow these points to connect the inlet:

- Only connect the inlet in the areas shown. Installing the inlet outside these areas can cause:
 - Leaking connections
 - Backflow into the inlet pipe
 - Impaired function of the lifting unit
- To prevent surging inflow or air intake into the collection tank, install the inlet correctly.
 CAUTION! Surging inflow or air intake into the collection tank can lead to malfunctions of the lifting unit.
- To permit the inlet pipe to drain off by itself, install the inlet pipe with a slope gradient to the lifting unit.
- Be conscious of the minimum inlet height (from floor to the centre of the inlet pipe): 180 mm (7 in).
- Make sure that all connections are fully tight.
- Install a shut-off valve in the inlet pipe.





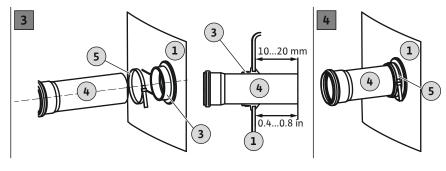


Fig. 5: Connecting the inlet

| 1 | Tank wall |
|---|--------------------|
| 2 | Hole saw for drill |
| 3 | Inlet seal |
| 4 | Inlet pipe |
| 5 | Pipe clamp |

- Lifting unit is installed correctly. 1
- Inlet pipe is installed to the collection tank. The consulting documents are obeyed.
- Installation material are prepared: 1x hole saw 124 mm (5 in) 1x seal DN/OD 110 1x pipe clamp
- Mark the inlet on the collection tank. 1.
- 2 Cut the hole with the hole saw into the tank wall.
 - To drill the hole, follow these points:

- - Obey the dimensions of the inlet area. CAUTION! The drilled hole must be fully in the identified inlet area.

- Max. speed of the drill: 200 rpm.

- Examine the hole diameter. NOTICE! Drill the hole carefully. Impermeability of the connection depends on the drilled hole.

- Make sure that the drilling chips fall cleanly from the hole saw. If the drilling chips attach to the hole saw, the material heats up too quickly and melts. If the material melts, obey these instructions:

- \Rightarrow Stop drilling, let the material cool down, and clean the hole saw.
- \Rightarrow Decrease the drilling speed.
- \Rightarrow Adjust feed rate during drilling.
- 3. Deburr the cut edge and make it smooth.
- 4. Put the seal into the hole.
- 5. Push the pipe clamp on the seal.
- 6. Coat the inner surface of the seal with lubricant.
- 7. Push the inlet pipe into the seal. Push the inlet pipe 10 ... 20 mm (0.4 ... 0.8 in) into the collection tank. \Rightarrow Obey the value specification, or else the function of the lifting unit can be impaired.
- 8. Fasten the seal and the pipe with the pipe clamp. Tightening torque: 5 Nm (3.7 ft·lb). Inlet is connected. Next step: Connecting the ventilation pipe.
- 6.4.8 Installation of a diaphragm hand pump

NOTICE

1

Do not connect inlets to the drain connection!

For maintenance work or if a system malfunctions, the tank is emptied through the drain connection. If an inlet is connected to the drain connection, the tank cannot be emptied.

Manually pump out the collection tank for maintenance or if the lifting unit malfunctions. It is recommended to install a diaphragm hand pump. CAUTION! If the lifting unit malfunc-

tions, backflow into the inlet can break the collection tank. Shut off the inlet and drain the collection tank.

Drain connection

1

Follow these points to install a diaphragm hand pump:

- Obey the installation and operating instructions for the diaphragm hand pump.
- Make sure that all connections are fully tight.
- Installation height for optimum operation is set.
- 1. Use a 30 mm (1.3 in) hole saw to drill the drain connection.
- 2. Put the HT double socket on the open drain connection.
- 3. Connect the inlet of the diaphragm hand pump to the HT double socket on the drain connection.
- 4. Connect the outlet of the diaphragm hand pump to the discharge line above the shutoff valve. Alternatively, connect the outlet of the diaphragm hand pump through a pipe loop directly to the sewer.
 - ▶ Diaphragm hand pump is installed.



DANGER

Danger of death through electrical shock!

Incorrect behaviour during electrical work results in death by electric shock.

- Only a qualified electrician must do the electrical work.
- Obey local regulations.

6.5.1 Fuse on mains side

6.5

Circuit breaker

- Make sure the type and switching characteristics of the circuit breakers are compatible with the rated current of the connected product.
- Obey local regulations.

| Lifting unit | Max. rated current (when high water alarm ac- tivated) | Fuse protection (recom- mended characteristic: C) |
|----------------------|--|--|
| Single-phase current | | |
| DrainLift SANI-SM | 5.4 A | 10 A |
| Three-phase current | · | |
| DrainLift SANI-ST | 1.9 A | 6 A |

Residual-current device (RCD)

- If persons can touch the device and conductive fluids, install a residual-current device (RCD).
- Obey the regulations of the local energy supplier for the residual-current device (RCD).
- Follow the information on the rating plate.
- Earth the device. Obey local regulations.
- To prevent the socket from flooding, install it at a sufficient height.
- Socket type:
 - Single-phase current:
 - DrainLift SANI CUT-S...**M**...: CEE 7/7 (Schuko)
 - Three-phase current:
 - DrainLift SANI CUT-S...T...: CEE 16A, 3P+N+PE, 6 h, clockwise rotating field

For the mains connection, refer to the installation and operating instructions of the switchgear.

6.5.3 Switchgear

Mains connection

6.5.2

The switchgear is pre-wired and factory-set. Obey local regulations to lay all connection cables to the switchgear and mains connection. **CAUTION! To prevent the switchgear from flooding, install it at a sufficient height.**

The switchgear has these basic functions:

- Level-dependent control
- Motor protection
- Direction-of-rotation monitoring (only for the three-phase current)
- High water alarm

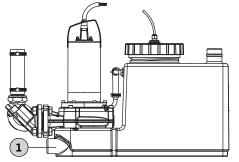


Fig. 6: Connection of diaphragm hand pump

Electrical connection

For detailed information, refer to the installation and operating instructions for the switchgear:


- Electrical connection of the lifting unit to the switchgear
- Overview and description of functions
- Setting of the switching points

Switching points

The switching points of the lifting unit can be adjusted to the inlet height of the lowest inlet. This results in a larger usable volume. The switching point data always refers to the floor. **NOTICE! If the inlet is below the permitted inlet height, there is a risk of a permanent backflow into the inlet pipe.**

Wilo-Control MS-L switchgear

For the Wilo-Control MS-L switchgear, set the switching points through fixed switch positions of DIP switch 3:

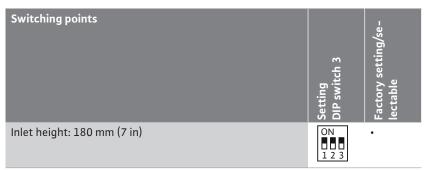

Key

• = factory setting, o = adjustable

NOTICE! For the location of DIP switch 3, refer to the installation and operating instructions for the switchgear.

6.5.4 Operation with frequency converter

7 Commissioning



WARNING

Risk of injury without protective equipment!

During work, there is a risk of (serious) foot injury.

• Wear safety shoes.

Operation with the frequency converter is not permitted.



NOTICE

Automatic switching on after power blackout

A switchgear controls the product. The product is automatically switched on and off depending on the application.

The product can start automatically after a power blackout.

7.1 Staff qualifications

- 7.2 Operator responsibilities
- Operation/control: The staff knows how the system works.
- Supply the installation and operating instructions. Keep the installation and operating instructions easy to access.
- Supply these instructions in the language which the staff can read and understand.
- Make sure that the staff reads and understands the installation and operating instructions.
- Make sure that all system-side safety devices and emergency cut-outs are active and working correctly.
- Make sure that the product is the correct one for the given operating conditions.

CAUTION

System malfunction through incorrect switchgear operation mode!

When the plug is connected to the socket, the switchgear starts in the operation mode set before. An incorrect operation mode can result in system malfunction.

- Do not put the plug into the socket. Read the operating instructions of the switchgear.
- Only put the plug into the socket when you know how to use the switchgear.

The lifting unit is operated by the switchgear. The switchgear is pre-set for the lifting unit. Obey the installation and operating instructions for the switchgear to make sure of correct operation:

- Settings
- LED displays/LC display
- Alarm signals

Do a test run before operating the lifting unit in automatic mode. A test run examines the correct functioning and impermeability of the unit. If necessary, adjust the pump's followup time to make sure of the optimum operation of the unit

- ✓ Lifting unit is installed correctly.
- Connections are checked for correctness.
- 1. Activate the lifting unit: Put the plug into the socket.
- 2. Set automatic mode on the switchgear.
- 3. Open the shut-off valve in the discharge pipe. **NOTICE! Keep the shut-off valve in the inlet closed.**
- 4. Disassemble the ventilation pipe: Pull out the ventilation pipe from the HT double socket.
- 5. Slowly fill the collection tank with water through the ventilation opening with a hose. NOTICE! Risk of malfunction! Do not hold water jet directly above the float switch.
- 6. Switch on and off the lifting unit through level control device.
 - \Rightarrow Do no less than two full pumping operations of all pumps for a test run.
 - ⇒ To examine the duty point, fill the discharge pipe fully with water. Do more test runs until the discharge pipe is fully filled.
- Assemble the ventilation pipe: Put the venting pipe into the HT double socket. NO-TICE! Tightly seal the ventilation connection.
- 8. Examine all connections for impermeability.
 - \Rightarrow If all connections are leak-proof, the lifting unit can run in automatic mode.
 - Test run is completed.
 - Lifting unit is commissioned: Keep shut-off valve open in the discharge pipe.
 - Lifting unit is in standby mode: Close the shut-off valve in the discharge pipe.

The follow-up time is pre-set at the factory to 6 seconds. Adjust the follow-up time as necessary for these points:

- Increasing the usable volume for each pumping process.
- Extensive suction of settling sediments at the bottom of the tank through integrated deep suction.
- Slurping operation to prevent pressure surges.

To set the follow-up time, read the installation and operating instructions for the switchgear.

CAUTION! Be conscious of the operating mode if the follow-up time is changed. The operating mode shows the duty time and the standby time.

8 Operation

Follow-up time

7.5

The lifting unit operates in automatic mode by default and is switched on and off through the integrated level control device.

7.4 Test run



WARNING

Risk of burns from hot surfaces!

During operation, the motor housing can get hot. There is a risk of skin burns if the component is touched.

- Cool down the motor to ambient temperature after switching off.
- Commissioning is done.
- Test run is done.
- The handling and functioning of the lifting unit are known.
- Discharge pipe is fully filled with water.
- 1. Activate the lifting unit: Put the plug into the socket.
- 2. Set automatic mode on the switchgear.
- 3. Open the shut-off valve in the inlet and discharge pipe.
 - > The lifting unit operates in automatic mode and is controlled depending on level.

8.1 Application limits

During operation

8.2

Incorrect operating conditions can result in overload or property damage to the lifting unit. Obey these operating limits:

- Max. inlet height of the lowest inlet: 5 m (16 ft)
- Max. pressure in the discharge pipe: 2.5 bar (36 psi)
- Fluid temperature: 3 ... 40 °C (37 ... 104 °F)
- Ambient temperature: 3 ... 40 °C (37 ... 104 °F)
- Max. short-time fluid temperature: 65 °C (149 °F), 5 min
- Maximum switching frequency: 60/h
- Operating mode: S3 10%

CAUTION

Property damage through pressure surges!

Pressure surges can occur when switching off the pump. These pressure surges can damage the discharge pipe and the lifting unit.

• Increase the follow-up time to prevent pressure surges. A longer follow-up time results in slurping operation. In slurping operation, the non-return valve closes more smoothly.



NOTICE

System malfunction through low delivery head!

If the delivery head is lower than 2 metres, the non-return valve does not close correctly. This lower counter pressure causes in a backflow of the fluid into the tank. This backflow results in a frequently switching on and off of the lifting unit, which can lead to a malfunction.

- Open shut-off valves in the inlet and the discharge pipe.
- Make sure that the maximum inflow is less than the maximum output of the system.
- Do not open inspection openings on the collection tank and the non-return valve.
- Make sure that the collection tank is sufficiently ventilated.

If the level control fails, drain the collection tank in manual mode. For all related information on manual mode, refer to the installation and operating instructions for the switchgear.

If the lifting unit fully fails, pump out the sewage using a diaphragm hand pump.

- 1. Close the shut-off valve in the inlet.
- 2. Close the shut-off valve in the discharge pipe.
- 3. Pump sewage into the discharge pipe using the diaphragm hand pump.

8.3 Emergency operation

8.3.1 Level control failure

8.3.2 Lifting unit failure

8.3.3 Flooding of the lifting unit (accident)



DANGER

Danger through harmful fluid!

In case of an accident, the collected sewage flows into the operating space. There is a risk of a bacterial infection. Follow these points:

- Wear protective equipment:
 - One-time protective suit
 - Sealed safety glasses
 - Respiratory mask
- Clean and disinfect all equipment (e.g., diaphragm hand pump, hoses) after use.
- Disinfect the lifting unit and operating space.
- Dispose of flushing water to the sewer
- Obey local regulations to dispose of protective clothing and cleaning material.
- Obey the factory regulations.



NOTICE

Use of the lifting unit in a flood

The switchgear is not waterproof. To make sure that the lifting unit works correctly in a flood, follow these points:

- Install the electrical connections and switchgear at a flood-proof height.
- Obey the maximum flooding level and flooding time for the lifting unit.

- 9 Shutdown/dismantling
- 9.1 Staff qualifications
- 9.2 Operator responsibilities
- 9.3 Shutdown

- Operation/control: The staff knows how the system works.
- Electrical work: Only a qualified electrician must do the work. Necessary knowledge: identification and prevention of electrical hazards
- Installation and dismantling: Only a specialist in sanitary facilities must do the work. Necessary knowledge: fastening of buoyancy safeguards, connection of plastic pipes
- Obey local accident prevention and safety regulations.
- Supply protective equipment. Make sure that staff wears protective equipment.
- Ventilate closed rooms.
- Toxic or asphyxiating gases can collect in closed rooms or buildings. Wear protective equipment (e.g., gas detector). Obey the factory regulations.
- Do not work alone in closed rooms. Only do this work with a second person.
- Obey regulations for working below suspended loads when using lifting accessories.
- 1. Close the shut-off valve in the inlet pipe.
- 2. Switch the switchgear to standby mode.
- Drain the collection tank. Activate the lifting unit in manual mode and drain the collection tank.
- 4. Close the shut-off valve in the discharge pipe.
- Switch off the lifting unit.
 Pull the plug out of the socket. CAUTION! Prevent the lifting unit from not approved reactivation.
 - The lifting unit is now decommissioned.

If the lifting unit is decommissioned for an extended time, do a functional check at regular intervals (quarterly). **CAUTION! Do the functional check as described in "Test run".**



DANGER

Danger through harmful fluid!

In case of an accident, the collected sewage flows into the operating space. There is a risk of a bacterial infection. Follow these points:

- Wear protective equipment:
 - One-time protective suit
 - Sealed safety glasses
 - Respiratory mask
- Clean and disinfect all equipment (e.g., diaphragm hand pump, hoses) after use.
- Disinfect the lifting unit and operating space.
- · Dispose of flushing water to the sewer
- Obey local regulations to dispose of protective clothing and cleaning material.
- Obey the factory regulations.



DANGER

Danger of death through electrical shock!

Incorrect behaviour during electrical work results in death by electric shock.

- Only a qualified electrician must do the electrical work.
- Obey local regulations.



DANGER

Danger through lone working!

Working in chambers, narrow rooms, and in areas with a risk of falling can be dangerous. Do not work alone.

• Only do this work with a second person.



WARNING

Risk of burns from hot surfaces!

During operation, the motor housing can get hot. There is a risk of skin burns if the component is touched.

• Cool down the motor to ambient temperature after switching off.



WARNING

Risk of injury from sharp edges and the macerator!

The pump has a macerator. The macerator blades are sharp. Furthermore, there can be sharp edges on the suction port. There is a high risk of cuts. Follow these points:

- Do not touch the macerator.
- Carry the pump only by the handle.
- Wear cut-resistant gloves.
- The lifting unit is decommissioned.
- Protective equipment put on.
- All shut-off valves are closed.
- 1. Pump out the remaining fluid using the diaphragm hand pump.
- 2. Remove the inlet connection: Pull the inlet pipe out of the inlet seal.
- 3. Remove the discharge pipe connection: Remove the flexible collar and drain the discharge pipe. **DANGER! Risk of health because of contact with sewage. The remain**-

ing sewage goes out of the discharge pipe. Collect sewage in applicable tanks and dispose of it into the sewer.

- 4. Remove the ventilation connection: Pull the ventilation pipe out of the HT double socket.
- Remove the drain connection: Remove the suction line of the diaphragm hand pump from the drain connection. DANGER! Risk of health because of contact with sewage. The remaining sewage goes out of the collection tank through the drain connection. Collect sewage in applicable tanks and dispose of it into the sewer system.
- 6. Loosen the floor anchoring.
- 7. Pull the lifting unit carefully out of the pipework.
 - The lifting unit is disassembled. Next step: Cleaning and disinfecting the lifting unit and the working area.

9.5 Cleaning and disinfection

DANGER

Danger through harmful fluids!

Disinfect the lifting unit after disassembly. Wear protective equipment when cleaning:

- Sealed safety glasses
- Respiratory mask
- Safety gloves
 - This protective equipment is the necessary basic equipment.
- Obey the factory regulations.
- ✓ The lifting unit is dismantled.
 - The switchgear is packed watertight.
- Washing water is flushed into the sewer complying with local regulations.
- A disinfectant complying with factory regulations is available. NOTICE! Obey the manufacturer's specifications for use.
- 1. Flush the lifting unit with clean water from top to bottom.
- 2. Open and flush the inspection openings on the collection tank and the non-return valve.
- 3. Flush the inner side of all connection ports.
- 4. Flush all dirt left on the floor into the sewer.
- 5. Let the lifting unit dry out.
- 6. Close the inspection opening on the collection tank and non-return valve again.

10 Maintenance and repair



WARNING

Risk of injury from sharp edges and the macerator!

The pump has a macerator. The macerator blades are sharp. Furthermore, there can be sharp edges on the suction port. There is a high risk of cuts. Follow these points:

- Do not touch the macerator.
- Carry the pump only by the handle.
- Wear cut-resistant gloves.

Do maintenance and repair work **only** by a specialist (e.g. customer service). The maintenance intervals according to EN 12056-4 are:

- ¼ year for commercial operations
- ¹/₂ year for multi-residential buildings
- One year for detached houses

Write all maintenance and repair work in a log. The log must be signed by the qualified staff and the operator.

Do a test run after the maintenance work.

10.1 General overhaul

During the general overhaul, the motor bearings, shaft sealings, O-rings and connection cables are checked for wear and damage. Damaged components are replaced with original parts. This makes sure that the operation is correct.

11 Spare parts

- 12 Disposal
- 12.1 Protective clothing
- 12.2 Operating fluids
- 12.3 Information on the collection of used electrical and electronic products

The general overhaul is done by the manufacturer or an approved service centre.

Order spare parts through customer service. To prevent return queries and incorrect orders, always supply the serial or article number. **Subject to change without prior notice.**

Obey local regulations to dispose of worn protective clothing.

- Collect operating fluids in dedicated tanks.
- Immediately clean up the leaked liquid.
- Obey local regulations to dispose of the operating fluids.

To prevent damage to the environment and human health, make sure to dispose of and recycle this product correctly.



NOTICE

Do not dispose of the product in domestic waste!

This symbol means that the product must not be disposed of in domestic waste. The symbol is applied to the product or its packaging.

Follow these points for a correct disposal of the product:

- Only return the product to a designated and permitted collection point.
- Obey local regulations.

Consult your local municipality, the nearest waste disposal site, or your retailer for a correct disposal. See for more http://www.wilo-recycling.com information about recycling.







wilo



Local contact at www.wilo.com/contact

WILO SE Wilopark 1 44263 Dortmund Germany T +49 (0)231 4102-0 T +49 (0)231 4102-7363 wilo@wilo.com www.wilo.com

Pioneering for You