

Pioneering for You

wilo

Handling and Operating Manual

CO Control Panel



CO Control Panel Handling and Operating Manual

Contents

1. General	3.
2. Safety	3.
2.1 Symbols related to explanations in the operation guide	3.
2.2 Staff education	3.
2.3 If the safety rules are not followed	3.
Possible hazards	3.
2.4 Safety rules for operating personnel	3.
2.5 Safety rules for control and installation works	3.
2.6 Unauthorized modification and spare parts use	3.
2.7 Unacceptable operating types	3.
3. Shipping and interim storage	3.
4. Purpose of use	3.
5. Product information	4.
5.1 Application	4.
5.2 Clipboard Coding	4.
5.3 Working Principle	4.
5.4 Product Features / Benefits	4.
5.4.1 Control and Signal Functions	4.
5.5 Equipment used in Board	4.
5.6 Delivery scope	4.
5.7 Options / Accessories	4.
6. Electrical connections	5
6.1 Pressure switch	5
6.2 External on / off circuit:	5
7. Operation	5
7.1 Factory settings	5
7.2 Control of motor rotation	5
8. Maintenance	6
9. Failure causes and possible solutions	6

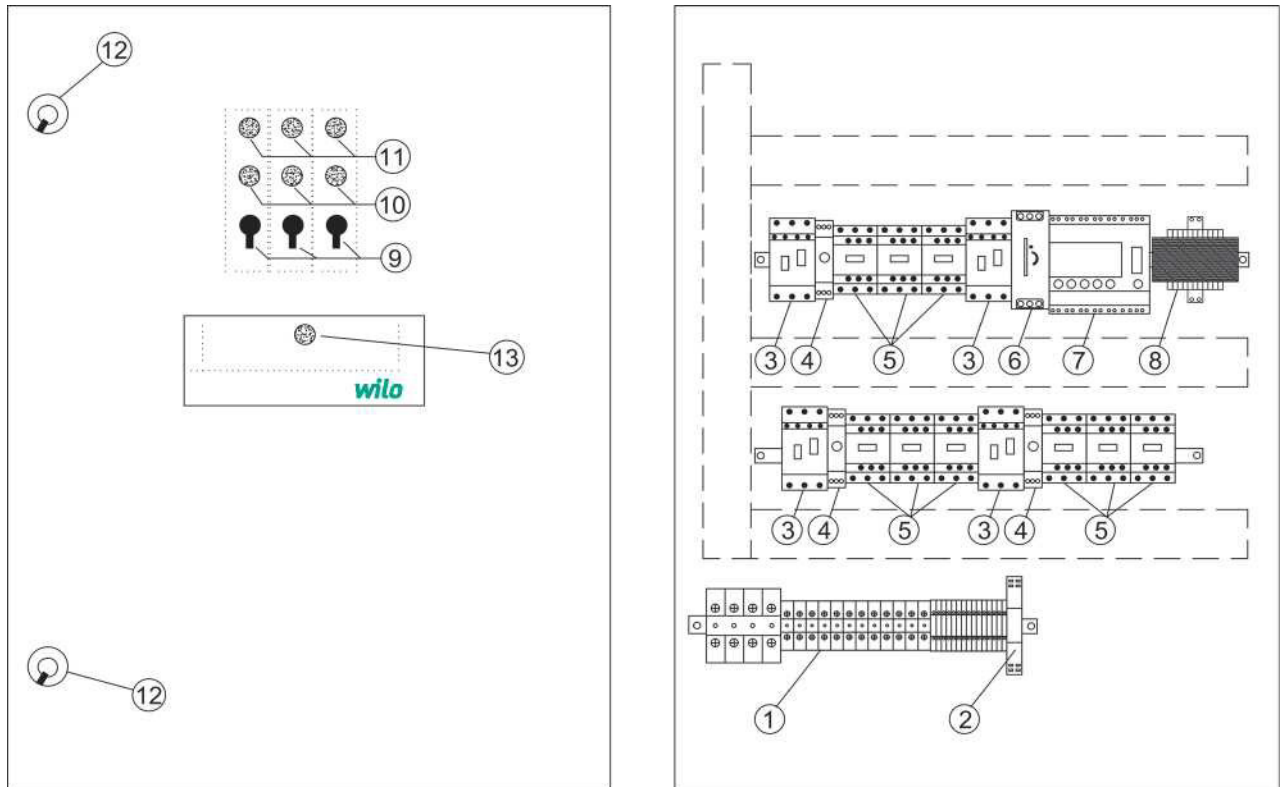


Figure: 1 (Wall Type)

- 1- Control and power terminals
- 2- General fault relay
- 3- Thermal switches
- 4- Star delta relay
- 5- Contactors
- 6- 24 VDC Power supply
- 7- Programmable control device (Zelio)
- 8- Isolation transformer
- 9- Auto-manual selector switches
- 10- Pump malfunction lamps
- 11- Pump operation lamps
- 12- Door locking mechanism
- 13- General fault lamp

" Panel design; The number of pumps may vary according to the power and selected options "

1. General

Installation and operating should only be carried out by qualified personnel!

Installation and operating instructions are part of the device. It should be available at the side of the device as a source for reference at any time. Completely observing this manual is essential for proper use of the device and proper operation. The installation and operating manual conforms to the device model and the current safety technical norms at the time of printing.

2. Safety

This user manual contains basic explanations that should be taken into account during installation and operation. For this reason, this manual must be read by the installer and the relevant operator during installation and operation. Not only the general safety instructions under this basic safety title but also the special safety instructions added under the following points must be taken into consideration.

2.1 Symbols related to explanations in the user manual

In this operating guide, the safety rules if not followed that may cause injuries and handicaps are indicated by the following symbol.



The warnings against electric shock are specified by the following symbol.



For the purpose of specifying safety rules that may cause damage to machinery, equipment or systems when not in compliance

ATTENTION!

Symbol is used.

2.2 Staff education

The personnel performing the installation must have been properly trained for these operations.

2.3 Dangerous hazards if the safety rules are not observed

Failure to comply with the safety instructions may result in personal injury and damage to the equipment. Failure to comply with the safety rules will also invalidate compensation claims that may arise due to possible injuries. Failure to comply with the rules in general can lead to the following negative facts:

- The important functions of the equipment are disabled,
- Personnel injuries resulting from electrical or mechanical reasons.

2.4 Safety rules for operating personnel

The current legislation on the prevention of accidents should be respected. Necessary precautions should be taken against the hazards that may be caused by electricity. Hazardous electrical hazards must be considered and the directives of the local electricity distribution companies must be respected.

2.5 Safety rules for control and installation works

The business manager should ensure that all control and installation work is carried out by authorized and qualified specialist personnel and that they have information at a sufficient level regarding the details given in the user manual. In principle, the work on the system should only be carried out when the system is in a completely stopped position.

2.6 Unauthorized modification and spare parts use

Changes to the appliance are only possible with the manufacturer's approval. The use of spare parts recommended by the manufacturer ensures that the safety is complete. The use of other parts may invalidate claims for compensation.

2.7 Unacceptable operating types

The operating safety of the supplied equipment is only guaranteed in case of operation in working condition indicated in paragraph 4 of the operating instructions. The operating limit values given in the catalog or brochures should never be exceeded.

3. Shipping and interim storage

ATTENTION!

The panel is shipped from the factory in boxes or on a pallet, protected against dust and moisture.

Receiving the product:

- The transport should be checked for damage,
- If any transport damage is detected, the transport company must make necessary initiatives.

During transport:

- Always use suitable lifting devices and take the safety nets to prevent parts from falling,



- Secure the product on a flat pallet, use a suitable pallet truck for transportation.
- Never stop under suspended loads, use a cage during lifting and secure the product straight into the cage.
- Ensure that the panel is stable and stable in storage and transport, and before the installation work in a safe place. The control unit must be protected against nausea and mechanical damage.

ATTENTION! The control unit must be protected against humidity and mechanical damage. Environment between -10 °C and + 50 °C Should not be used except this temperature range

4. Purpose of use

Automatic control of booster systems with contact manometer up to maximum 7 pumps

5. Product information



5.1 Application

Automatic control of booster systems with contact manometer up to maximum 7 pumps

5.2 Panel Coding

Sample: CO 3/11

CO Booster panel with contact manometer
3 number of pumps controlled
11 nominal power of each pump P2 [kW]

5.3 Working Principle

The system operates in accordance with the signal from the manometer in booster system. When pressure is needed in the system, the contact manometer sends the operation signal to start the system. After the need is over, it stops the system by sending a stop signal.

5.4 Product Features / Benefits

- Auto manual switch
- Signal lamp for pump failure status information
- Isolation transformer for control system
- Automatic pump change in case of failure
- Rotational co-aging between pumps
- General fault signal dry contact
- Pump operation information dry contact
- Dry run protection
- Maximum number of pumps 7
- Protection from over current and heat by motor protection switch
- External on-off

5.4.1 Control and Signal Functions

- Operation / stop with external dry contact
- SSM general fault signal
- SBM general operation signal
- Individual error signal for each pump
- Individual operation signal for each pump

5.5 Equipment used in the panel

The structure of the control panel is determined by the power of the pumps to be connected.

• Memory programmable control (Zelio):

The network is made up of quality modular construction. (Fig. 1, No. 7)

• Protective / protection combinations:

There are safeguards for the operation of the pumps:
 Overcurrent fuse thermal isolator (current rating: 0.58 IN)
 Time relay and contactors for star-to-delta transformation. (Fig. 1: 3-4)

Technical Specifications	
Mains supply voltage (V)	3 to 400 V, 50/60 Hz
Nominal current (A)	See. Product label
Protection type	IP54
Maximum permissible ambient temperature.	50 °C
Mains insurance	According to the circuit plan

5.6 Delivery scope

- Control panel - WILO CO
- Electrical Circuit Diagram
- Installation and operating instructions

5.7 Options / Accessories

The CO system can optionally be equipped with the options listed below. These must be ordered exclusively. The connection of the pumps must be carried out on the contact site in accordance with the circuit diagram,

- Fan
- Main circuit breaker
- Thermistor relay
- Soft starter
- Multimeter



6. Electrical connections

The electrical connection must be carried out by trained personnel in accordance with the regulations of the regional electricity distribution company.

Network connection:

Explanations regarding the installation and operating instructions of the whole equipment must be taken into account.

CAUTION!

Pump network connections

CAUTION!

Take into consideration account the installation and user manuals of the pump!

6.1 Pressure switch

According to the installation and operating instructions, connect the pressure sensor to the terminals according to the circuit diagram. Use shielded cable, place shield in one-sided circuit box.

CAUTION!

Do not apply external voltage to the terminals!

6.2 External on / off circuit:

In accordance with the circuit plan, A tele (remote) on / off circuit can be connected via a potential-free contact (opener) after the bridge has been removed with the relevant terminals (pre-assembled by the factory.)

External on / off circuit	
Switch off	Open Auto
Switch on	Auto OFF, reporting on the screen with a symbol.
Switch loaded	24 VDC / 10 mA

CAUTION!

Do not apply external voltage to the terminals!

6.3 Protection against dry running

According to the circuit plan, A protection against water insufficiency can be integrated via the potential free contact (opener) after the bridge has been removed with the corresponding terminals (pre-assembled by the factory).

Protection against water scarcity	
Switch off	No Water scarcity
Switch on	Water scarcity
Switch loaded	24 VDC/10 mA

CAUTION!

Do not apply external voltage to the terminals!

6.4 General operation / General fault messages

Potential-free contacts for external messages via respective terminals according to the circuit diagram, maximum contact load 250 V~ / 2A

7. Commissioning

We recommend that the device be operated by WILO Customer Service. The cables on the side of structure Before the first operating must be checked for correct connection and especially grounding. Individual precautions for operating must be taken from the installation and operating instructions for the complete assembly.

CAUTION!

All connection terminals must be tightened before commissioning.

7.1 Factory settings

Preset of the control panel was made in the factory. The factory setting can be recreated by the WILO Service.

7.2 Control of motor rotation

Each pump should be activated for a short period of time as «manual operation» to check whether the direction of rotation of the mains operated pump is the same as the arrow mark on the pump casing. In wet rotor pumps, an incorrect or correct direction of rotation is indicated by a control LED in the terminal box. If all the pumps turn in the wrong direction during mains operation, change 2 phases according to the demand of the mains line.

8. Maintenance

Before maintenance or repair work, the device must be switched off and secured against unauthorized restart. The control cabinet must be kept clean. The control cabinet and fan should be cleaned when soiled.

From 5,5 kW motor power, check the protection contacts from time to time for burns and replace in case of intense combustion. The charging status of the real time clock buffer battery is determined by the system and notified when necessary. However, it is recommended to change it at 12-month intervals. For this purpose, the battery should be changed according to the description of the following CPU structure set.

ATTENTION!

The leakage current protection relay must be installed in the power line where the control panel is connected.

9. Spare parts

Spare parts is ordered through the services authorized by WILO Pompa Sistemleri A.Ş.:

The spare parts list is on the back page of the electricity project.

10. Authorized services

You can find a list of services authorized by WILO Pompa Sistemleri A.Ş. :

<http://www.wilo.com.tr/anasayfa/servis-destek/yetkili-servisler/>

11. Misuse

- The control panel cover must be kept closed and locked.
- Do not switch off the power supply switch of the control panel except for periodic maintenance (controlled conditions).
- Do not intervene in the panel without interrupting the power supply.
- Do not place any material on or in front of the control panel.
- By inserting an isolated carpet in front of the control panel and pressing on the carpet interfere with the board.
- Do not pull the power supply line out of the control cabinet.

12. Safety and Environmental Instructions

Waste disposal and Complying with WEEE Regulation on Control of Hazardous Wastes:

This product is in accordance with EU WEEE Instructions(2012/19/EU). This product includes a symbol that is used for management of waste from electric and electronic equipment. Within the European Union this symbol may be present on the product, packing or its relative manual. This symbol means that the relevant electric or electronic product must not be disposed alongside household waste products. The relevant products must be transported, recycled or disposed of according the following statements:

- These products must only be handed over to a certified disposal center.
- Comply with local law at all times! For the proper disposal procedure please contact local authorities, nearest disposal center or the dealer where you have made your purchase. For more information on recycling visit; <http://www.wilo-recycling.com> .

Packing Information Ambalaj Bilgileri : Packaging of this product is made from recycleable materials that comply with National Environmental Legislation. Do not dispose of packaging materials with household or other waste. Take these materials to recycling points designated by local authorities.

Technical differences may apply!

13. Failure causes and possible solutions

Definition of Problem	Possible reasons	Solution recommendation
Thermal fault information at first commissioning	Motor connections may be reversed.	Check the motor connections.
	The motor thermal magnetic switch may not have been properly adjusted.	Check the settings of the thermal magnetic switch.
	The contactor may be stuck or the phase loss of the motor due to cable loosening.	Measure the voltage applied to the motor.
The motor contactor trips into the circuit and switches off after a while.	The contactor may be stuck or loose cable connections.	Check the contactor and cable connections.
Phase failure	One of the phases feeding the panel may be broken, reversed or phase unbalanced.	Check for looseness of the terminals, measure the voltage between phases.
Thermistor failure	The motor overheat makes this default. For the reason, the motor is connected incorrectly or mechanical problem.	Check the motor connections and the motor.
Water leak fault	When the pump seal is water contact; The humidity sensor gives a water leak error and does not start the pump.	Check the motor.
Automatic system on but the pump does not enter the circuit	The auto-manual selector switch may be in the "0" position.	Check the auto-manual selector switch.

Notes :

Notes :



05.2017

WILO Pompa Sistemleri A.Ş.
Orhanlı Mah. Fettah Başaran Cad.
No: 91, 34956, Tuzla, İstanbul
T 0216 250 94 00
F 0216 250 94 01
wilo@wilo.com.tr
www.wilo.com.tr



www.wilo.com.tr

Pioneering for You