

Wilo-Drain STS 40/...A, STS 40/...

- D** Einbau- und Betriebsanleitung
GB Installation and operating instructions
F Notice de montage et de mise en service
NL Inbouw- en bedieningsvoorschriften
E Instrucciones de instalación y funcionamiento
I Istruzioni di montaggio, uso e manutenzione
P Manual de instalação e funcionamento
TR Montaj ve kullanma kılavuzu
GR Οδηγίες εγκατάστασης και λειτουργίας
S Monterings- och skötselanvisning
FIN Asennus- ja käyttöohje
DK Monterings- og driftsvejledning

- H** Beépítési és üzemeltetési utasítás
PL Instrukcja montażu i obsługi
CZ Návod k montáži a obsluze
RUS Инструкция по монтажу и эксплуатации
EST Paigaldus- ja kasutusjuhend
LV Instalēšanas un ekspluatācijas instrukcijas
LT Montavimo ir naudojimo instrukcija
SK Návod na montáž a obsluhu
SLO Navodila za vgradnjo in vzdrževanje
BG Инструкция за монтаж и експлоатация
RO Instrucțiuni de montaj și exploatare

Fig.1:

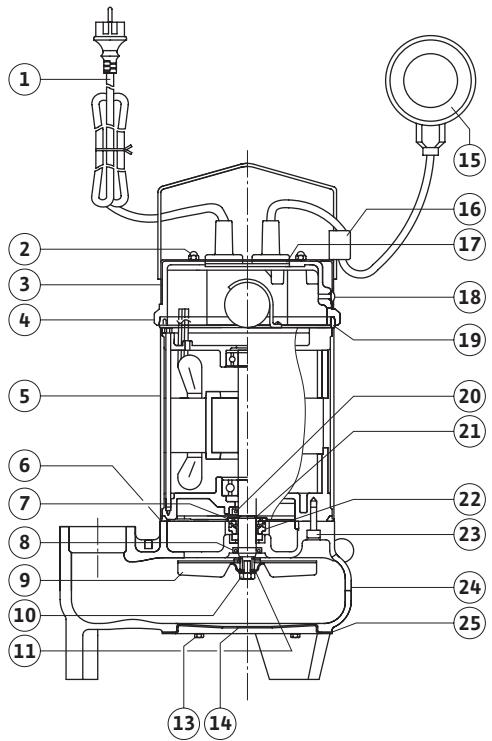


Fig. 2a

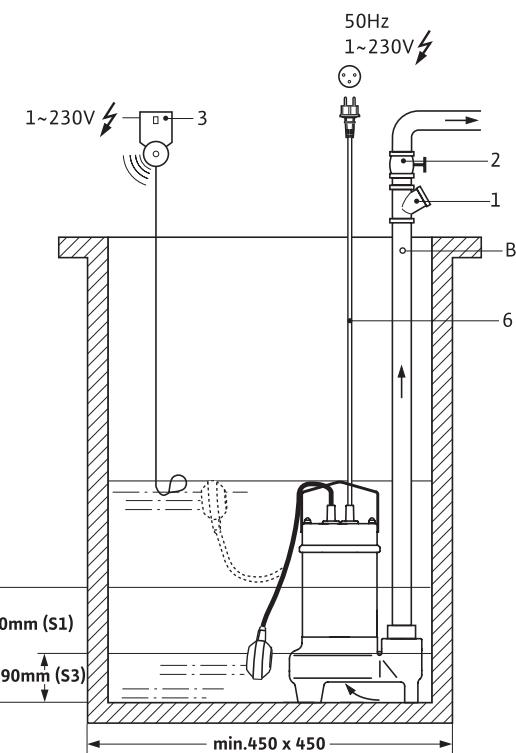


Fig. 2b


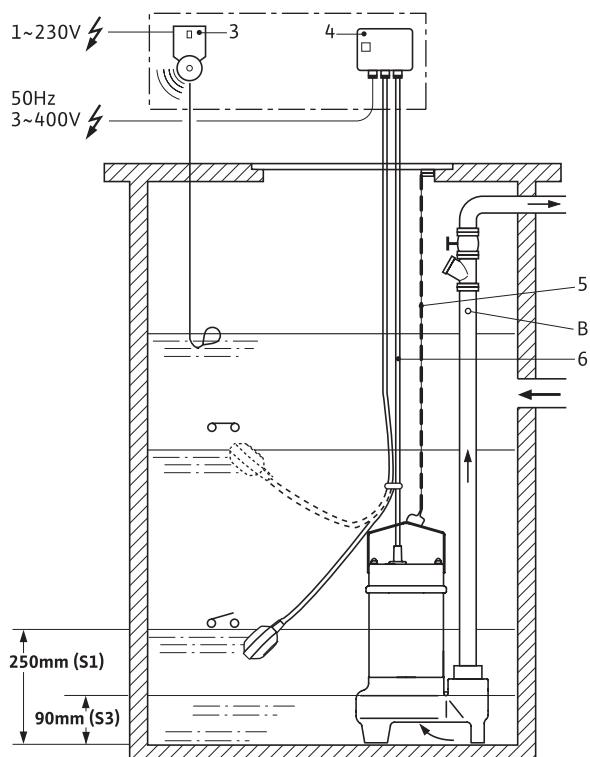


Fig.3:

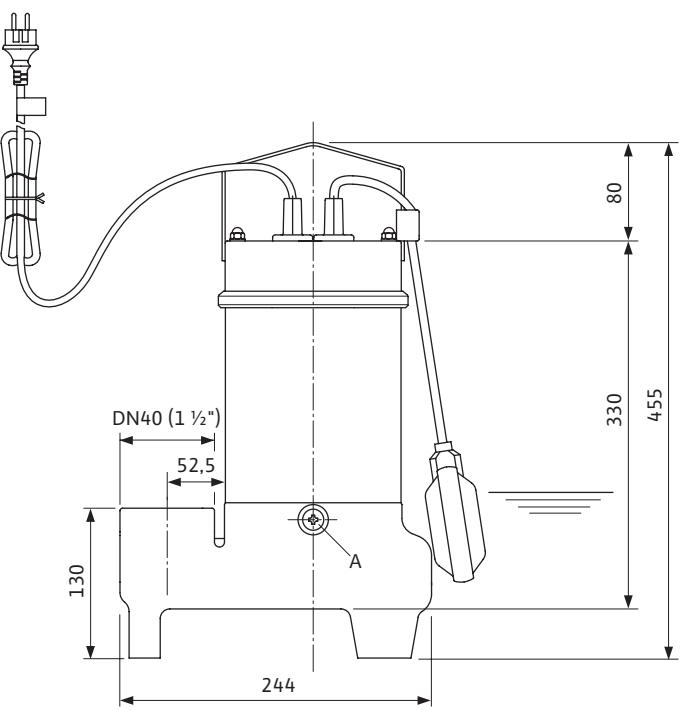

D	Einbau- und Betriebsanleitung	3
GB	Installation and operating instructions	8
F	Notice de montage et de mise en service	13
NL	Inbouw- en bedieningsvoorschriften	19
E	Instrucciones de instalación y funcionamiento	24
I	Istruzioni di montaggio, uso e manutenzione	29
P	Manual de instalação e funcionamento	34
TR	Montaj ve kullanma kılavuzu	39
S	Monterings- och skötselanvisning	44
FIN	Asennus- ja käyttöohje	49
DK	Monterings- og driftsvejledning	54
PL	Instrukcja montażu i obsługi	59
GR	Οδηγίες εγκατάστασης και λειτουργίας	65
CZ	Návod k montáži a obsluze	71
RUS	Инструкция по монтажу и эксплуатации	76
EST	Paigaldus- ja kasutusjuhend	82
LV	Instalācijas un ekspluatācijas instrukcija	87
H	Beépítési és üzemeltetési utasítás	92
LT	Montavimo ir naudojimo instrukcija	97
SK	Návod na montáž a obsluhu	102
BG	Инструкция за монтаж и експлоатация	107
SLO	Navodila za vgradnjo in vzdrževanje	113
RO	Instructiuni de montaj și exploatare	118

1 General

About this document

These installation and operating instructions are an integral part of the product. They must be kept readily available at the place where the product is installed. Strict adherence to these instructions is a precondition for the proper use and correct operation of the product.

These installation and operating instructions correspond to the relevant version of the product and the underlying safety standards valid at the time of going to print.

2 Safety

These operating instructions contain basic information which must be adhered to during installation and operation. For this reason, these operating instructions must, without fail, be read by the service technician and the responsible operator before installation and commissioning. It is not only the general safety instructions listed under the main point "safety" that must be adhered to but also the special safety instructions with danger symbols included under the following main points.

2.1 Indication of instructions in the operating instructions

Symbols:

General danger symbol



Danger due to electrical voltage



NOTE: ...



Signal words:

DANGER!

Acutely dangerous situation.

Non-observance results in death or the most serious of injuries.

WARNING!

The user can suffer (serious) injuries. 'Warning' implies that (serious) injury to persons is probable if this information is disregarded.

CAUTION!

There is a risk of damaging the pump/unit. 'Caution' implies that damage to the product is likely if the information is disregarded.

HINWEIS: Useful information on using the product. It draws attention to possible problems.

2.2 Personnel qualifications

The installation personnel must have the appropriate qualification for this work.

2.3 Danger in event of non-observance of the safety instructions

Non-observance of the safety instructions can result in risk of injury to persons and damage to pump/unit. Non-observance of the safety instructions can result in the loss of any claims to damages.

In detail, non-observance can, for example, result in the following risks:

- Failure of important pump/unit functions
- Failure of required maintenance and repair procedures
- Danger to persons from electrical, mechanical and bacteriological influences
- Property damage

2.4 Safety instructions for the operator

The existing directives for accident prevention must be adhered to.

Danger from electrical current must be eliminated. Local directives or general directives [e.g. IEC, VDE etc.] and local power supply companies must be adhered to.

2.5 Safety instructions for inspection and installation work

The operator must ensure that all inspection and installation work is carried out by authorised and qualified personnel, who are sufficiently informed from their own detailed study of the operating instructions.

Work to the pump/unit must only be carried out when at a standstill.

2.6 Unauthorised modification and manufacture of spare parts

Alterations to the pump/unit are only permissible after consultation with the manufacturer. Original spare parts and accessories authorised by the manufacturer ensure safety. The use of other parts can nullify the liability from the results of their usage.

2.7 Improper use

The operating safety of the supplied pump/unit is only guaranteed for conventional use in accordance with section 4 of the operating instructions. The limit values must on no account fall under or exceed those specified in the catalogue/data sheet.

3 Transport and interim storage

As soon as the product arrives:

- check product for any damage in transit,
- If damage has occurred, take the necessary steps, within the defined periods, with the transport company.

CAUTION! Danger of material damage!

The product may be damaged if it is not transported and stored correctly.

- **For transport, the pump may only be lifted or carried using the brackets intended for that purpose. The cable should never be used for lifting!**
- **During transport and temporary storage, the pump must be protected from moisture, from frost and from mechanical damage.**

4 Intended use

Wilo-Drain STS 40 submersible pumps are suitable for pumping sewage, waste water and clean fluids containing solid particles of up to 40 mm diameter from shafts, pits and containers.

They are used for the following applications:

- Domestic drainage
- Sewage and water supply
- Environment and waste water treatment
- Industrial and process engineering

 NOTE: Follow the locally applicable regulations for the intended application.

The pumps are usually installed flooded (immersed) and can only be installed vertically, whether fixed or mobile.

Submersible motor pumps with connection lines of less than 10 m are only approved (according to EN 60335) for use within buildings, not for outdoor use.

 **DANGER! Risk of fatal injury!**

The pump may not be used to empty swimming pools / garden ponds or similar locations if there are people in the water.

 **WARNING! Health risk!**

Owing to the materials used, the pumps are not suitable for drinking water! Dirty water poses a risk to health.

 **CAUTION! Danger of material damage!**

Pumping materials which are not approved can lead to damage to the product.

The pumps are not suitable for water containing coarse impurities such as sand, fibres or flammable liquids, or for use in areas at risk of explosion.

Use of the product as intended also means following these instructions.

Use over and beyond the use described is not use as intended.

5 Product information

5.1 Type key

Example: **STS 40/8 A 1-230-50-2-5M KA**
STS 40/10 3-400-50-2-10M KA

STS	Series:	ST = Sewage Technology
		S = Stainless Steel Motor
40	Nominal diameter of the discharge port [mm]:	40 = Rp 1½
/8	Max. delivery head [m] for Q=0m³/h: 8, 10	
A	A = with float switch, - = not specified: without float switch,	
1-230	Mains voltage: 1~230 V, single-phase motor, 3~400 V, three-phase motor	
-50	Mains frequency [Hz]	
-2	2 poles	
5M KA	Length of electrical cable [m]: 5, 10	

5.2 Technical data

Permissible fluid components:	Slightly acidic / slightly alkaline, maximum chloride content 150 mg/l (for 1.4301 / AISI 304)
Max particle size:	40 mm
Mains voltage:	1~230 V, ± 10 %, 3~400 V, ± 10 %
Mains frequency:	50 Hz
Protection class:	IP 68
Speed:	Max. 2900 /min (50 Hz)
Max. current consumption:	See name plate
Power consumption P1:	See name plate
Rated motor power P2:	See name plate
Max. flow rate:	See name plate
Max. delivery head:	See name plate
Operating mode S1:	200 operating hours per year
Operating mode S3 (optimum):	Intermittent duty, 25 % (2.5 min. operation, 7.5 min. pause).
Recommended switching frequency:	20/h
Max. starts per hour:	50/h
Nominal diameter of the pressure port:	See type key
Permissible temperature range of the pumped liquid:	+3 to 35 °C
Max. immersion depth:	5 m
Noise level at min. level:	< 70 db(A)
Oil filling:	ELFOLNA DS 22 or equivalent, approx. 0.4 l

5.3 Scope of delivery

Pump is delivered with

- 5 or 10 m electrical connection cable (depending on version),
- single-phase version with mains plug (CEI 23-5),
- three-phase version with free cable end.

- Connected float switch (Wilo-Drain STS 40),
- Installation and operating instructions

5.4 Accessories

- Accessories must be ordered separately:
- Switchgear for 1 or 2-pump operation
 - external monitoring devices / tripping units
 - level controller (level sensor / float switch)
 - Accessories for transportable wet-well installation
 - Accessories for stationary wet-well installation

6 Description and function

6.1 Description of the pump (Fig. 1)

Pos.	Description of component
1	Electrical connection cable
2	Cap nut
3	Cover with handle
4	Cover holder
5	Motor housing
6	Oil chamber seal cover
7	Oil chamber seal
8	Shaft seal ring
9	Impeller
10	Screw
11	Washer
13	Screw
14	Feed plate
15	Float switch
16	Cable holder
17	Cable entry seal
18	Screw
19	Motor cover seal
20	Shaft seal ring
21	Snap ring
22	Mechanical seal
23	Screw
24	Pump housing
25	Seal

The pump is made of stainless steel (motor) and cast iron (hydraulics).

It is driven by a water pressure-tight, encapsulated motor. The pump and the motor have a shared shaft. The fluid comes up through the central suction opening and is pumped out through the vertical discharge port.

The pumps are equipped with a single-stage VORTEX impeller. It pumps solids of diameters up to 40 mm diameter (not fibrous solids such as grass, leaves and rags).

The pump is either permanently installed and bolted to a fixed pressure pipe (R 1 ½"), or set up portably and connected to a hose.

The motor chamber is sealed from the pump chamber using a mechanical seal on the fluid side and a radial shaft seal on the motor side. To ensure that the mechanical seal is always lubricated and cooled, even when running dry, the mechanical seal chamber is filled with oil.

The motors have thermal protection, switching off the motor automatically on overheating, and

switching it on again after cooling down. The single-phase motor has a capacitor to generate the rotating magnetic field.

7 Installation and electrical connection

DANGER! Risk of fatal injury!

Improper installation and improper electrical connections can result in a risk of fatal injury.

- **The installation and electrical connections should only be done by properly skilled staff and in compliance with applicable regulations!**
- **Follow all accident prevention regulations!**

7.1 Installation

The pump was designed both for fixed and for mobile installation.

CAUTION! Danger of material damage!

Danger of damage due to improper handling.

Lift the pump using a chain or a rope attached to the handle. Never lift using the power / float switch cable or the pipe / hose connection.

The installation site or pit for the pump must be free of frost.

The pit must be cleared of coarse material such as rubble before setting up and starting the pump. For the installation dimensions see the drawing (Fig 3), pit dimension (Fig 2a).

The pressure pipe must have the same nominal width as the pump (R 1 ½", can be enlarged).

It is essential that the pit allows the float switch to move freely (Wilo-Drain STS 40).

7.1.1 Stationary wet installation (Fig. 2a, 2b)

- 1 Non-return valve
- 2 Isolating valve
- 3 Overflow alarm control
- 4 Switchgear with connected float switch for pump operation
- 5 Chain
- 6 Electrical connection motor cable

Fig. 2a:

Pump (Wilo-Drain STS 40) with single-phase motor and optional overflow alarm control.

Fig. 2b:

Pump with three-phase motor. Switchgear with connected float switch for one pump operation and optional overflow alarm control.

For stationary wet installation with a fixed pressure pipe, the pump must be positioned and fastened to ensure the following:

- The connection to the pressure pipe does not bear the weight of the pump
 - The load of the pressure pipe does not act on the connection port
- Provide a 4 mm diameter hole on the discharge pipe before the check valve for a possible venting following a draining (Fig. 2a, 2b Pos. B)

7.1.2 Portable wet installation

For portable wet installation with hose connection, the pump must be secured in the pit against moving or falling over (e.g. fix the chain with a small amount of tension).

NOTE: When used in a pit without a firm base, the pump must be put on a sufficiently large plate or hung from a rope or a chain in a suitable position.

7.2 Electrical connection



DANGER! Risk of fatal injury!

If the electrical connection is not made properly, there is a risk of fatal injury from an electric shock.

The electrical connection must be made by an electrician approved by the local energy supply company in compliance with the applicable local regulations.

- The type of power supply (single phase or 3 phase) and its voltage must correspond to the specifications on the name plate
- Fuse in the power supply: 16 A, slow blow
- Earth the system as required by regulations
- Using a residual current device $\leq 30 \text{ mA}$
- Using a mains disconnection device with an opening of at least 3 mm
- The pump is ready for connection.

Pump with three-phase motor (3~400V):

For the three-phase connection, connect the wires at the free end of the cable as follows:

4-wire connection cable: $4 \times 1,0 \text{ mm}^2$

Wire	Terminal
brown	U
black	V
blue	W
green/yellow	PE

Wire up the free end of the cable in the switch box (see the installation and operating instructions of the switch box).

8 Commissioning



DANGER! Beware of electric shock!

The pump may not be used to empty swimming pools, garden ponds or similar if there are people in the water.



CAUTION! Danger of material damage!

Before installation, clean the pond and the supply pipes from all solid materials such as rubble.

8.1 Checking the direction of rotation (three-phase motors only)



NOTE: If the pump is running in the wrong sense, the flow is significantly reduced.

You must check the direction of rotation of the pump **before** you immerse it. An arrow on the top of the motor housing shows the correct direction of rotation.

- Hold the pump in your hand.

- Switch the pump on briefly. The pump recoils in the opposite direction (anticlockwise) to the motor's direction of rotation.
- If the direction of rotation is incorrect, swap two phases of the mains connection.

8.2 Adjusting the level control

CAUTION! Danger of material damage!

Do not allow the mechanical seal to run dry.

Dry running shortens the life of the motor and the mechanical seal. If the mechanical seal is damaged, small amounts of oil may escape into the pumped fluid.

- The water level may not sink below the minimum pump immersion depth. Set the level control to the following minimum level: Fig. 2a, 2b
 - Min 90 mm: Operating mode S3: see Technical data
 - Min 250 mm: Operating mode S1: see Technical data
- When filling the shaft or powering the pump into the pit, make sure the float switch (Wilo-Drain STS 40) can move freely.
- Switch on the pump.

9 Maintenance

Maintenance and repairs may only be carried out by qualified experts!

WARNING! Beware of infection!

Wear suitable protective clothing (safety gloves) for maintenance in order to prevent any risk of infection.

Danger! Beware of fatal injury!

When working on electrical equipment, there is a risk of a fatal shock.

- For all maintenance and repair work on the pump, it must be electrically isolated and unauthorised switch-on must be prevented.
- Any damage to the connection cable must always be repaired by a properly qualified electrician.
- Change the oil in the mechanical seal chamber once a year.
 - Unscrew the oil drain plug with seal ring (Fig. 3, Pos. A).
 - Lay the pump on its side until oil flows out (catch it in a suitable receptacle and take it for proper disposal).

NOTE: When you change the oil, the old oil and water have to be disposed of as hazardous waste. The oil is not biodegradable.

- Fill the pump with new oil (see Technical data).
- Screw in the oil drain plug and seal ring.

10 Faults, causes and remedies

Only allow faults to be remedied by qualified personnel!
Follow the safety instructions in Maintenance.

Fault	Cause	Remedy
Pump does not start	No voltage	Check the wires and fuses, or switch automatic fuses in the distribution station back on
	Rotor blocked	Clean the housing and impeller, if still blocked replace the pump
	Cable rupture	Check the cable resistance. If necessary, replace the cable. Only use genuine Wilo special cable.
Safety switches thrown	Water in the motor chamber	Contact customer service
	Foreign bodies in the pump, winding protection contact triggered	Disconnect the system from the electricity supply and secure it against being switched on. Lift the pump out of the sump. Remove the objects.
Pump has no power	Pump drawing up air because fluid level is too low	Check the function/setting of the level control
	Pressure pipe blocked	Detach the pipe and clean it

If the fault can't be fixed, please contact your local specialist or your nearest <Wilo><Salmson> customer service location or representative.

11 Spare parts

Spare parts can be ordered from your local specialist and/or via <Wilo><Salmson> customer service.

To avoid queries and incorrect orders, always provide all of the details on the name plate with every order.

Subject to change without prior notice!

D EG – Konformitätserklärung
GB EC – Declaration of conformity
F Déclaration de conformité CEE

Hiermit erklären wir, dass die Bauarten der Baureihe : **STS 40/8**
Herewith, we declare that this product: **STS 40/10**
Par le présent, nous déclarons que cet agrégat :

in der gelieferten Ausführung folgenden einschlägigen Bestimmungen entspricht:
in its delivered state comply with the following relevant provisions:
est conforme aux dispositions suivants dont il relève:

EG-Maschinenrichtlinie

98/37/EG

EC-Machinery directive

Directives CEE relatives aux machines

Elektromagnetische Verträglichkeit – Richtlinie

89/336/EWG

Electromagnetic compatibility – directive

i.d.F/ as amended/ avec les amendements suivants:

Compatibilité électromagnétique- directive

91/263/EWG

92/31/EWG

93/68/EWG

Niederspannungsrichtlinie

73/23/EWG

Low voltage directive

i.d.F/ as amended/ avec les amendements suivants :

Direction basse-tension

93/68/EWG

Bauproduktenrichtlinie

89/106/EWG

Construction product directive

i.d.F/ as amended/ avec les amendements suivants :

Directive de produit de construction

93/68/EWG

Angewendete harmonisierte Normen, insbesondere:

EN 809

Applied harmonized standards, in particular:

EN 12050-2

Normes harmonisées, notamment:

EN 60034-1


EN 60204-1

EN 60335-2-41

EN 61000-6-3

EN 61000-6-4

Dortmund, 06.04.2006

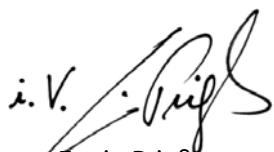

Erwin Prieß
Quality Manager



WILO AG
Nortkirchenstraße 100
44263 Dortmund

NL EG-verklaring van overeenstemming Hiermede verklaren wij dat dit aggregaat in de geleverde uitvoering voldoet aan de volgende bepalingen: EG-richtlijnen betreffende machines 98/37/EG Elektromagnetische compatibiliteit 89/336/EEG als vervolg op 91/263/EEG, 92/31/EEG, 93/68/EEG EG-laagspanningsrichtlijn 73/23/EEG als vervolg op 93/68/EEG Bouwproductenrichtlijn 89/106/EEG als vervolg op 93/86/EEG Gebruikte geharmoniseerde normen, in het bijzonder: 1)	I Dichiarazione di conformità CE Con la presente si dichiara che i presenti prodotti sono conformi alle seguenti disposizioni e direttive rilevanti: Direttiva macchine 98/37/CE Compatibilità elettromagnetica 89/336/CEE e seguenti modifiche 91/263/CEE, 92/31/CEE, 93/68/CEE Direttiva bassa tensione 73/23/CEE e seguenti modifiche 93/68/CEE Direttiva linee guida costruzione dei prodotti 89/106/CEE e seguenti modifiche 93/68/CEE Norme armonizzate applicate, in particolare: 1)	E Declaración de conformidad CE Por la presente declaramos la conformidad del producto en su estado de suministro con las disposiciones pertinentes siguientes: Directiva sobre máquinas 98/37/CE Directiva sobre compatibilidad electromagnética 89/336/CEE modificada por 91/263/CEE, 92/31/CEE, 93/68/CEE Directiva sobre equipos de baja tensión 73/23/CEE modificada por 93/68/CEE Directiva sobre productos de construcción 89/106/CEE modificada por 93/68/CEE Normas armonizadas adoptadas, especialmente: 1)
P Declaração de Conformidade CE Pela presente, declaramos que esta unidade no seu estado original, está conforme os seguintes requisitos: Directivas CEE relativas a máquinas 98/37/CE Compatibilidade electromagnética 89/336/CEE com os aditamentos seguintes 91/263/CEE, 92/31/CEE, 93/68/CEE Directiva de baixa voltagem 73/23/CEE com os aditamentos seguintes 93/68/CEE Directiva sobre produtos de construção 89/106/CEE com os aditamentos seguintes 93/68/EWG Normas harmonizadas aplicadas, especialmente: 1)	S CE- försäkran Härmed förklarar vi att denna maskin i levererat utförande motsvarar följande tillämpliga bestämmelser: EG-Maskindirektiv 98/37/EG EG-Elektromagnetisk kompatibilitet – riktlinje 89/336/EWG med följande ändringar 91/263/EWG, 92/31/EWG, 93/68/EWG EG-Lågspänningssdirektiv 73/23/EWG med följande ändringar 93/68/EWG EG-Byggmaterialdirektiv 89/106/EWG med följande ändringar 93/68/EWG Tillämpade harmoniserade normer, i synnerhet: 1)	N EU-Overensstemmelseserklæring Vi erklærer hermed at denne enheten i utførelse som leverer er i overensstemmelse med følgende relevante bestemmelser: EG-Maskindirektiv 98/37/EG EG-EMV-Elektromagnetisk kompatibilitet 89/336/EWG med senere tilføyer: 91/263/EWG, 92/31/EWG, 93/68/EWG EG-Lavspenningsdirektiv 73/23/EWG med senere tilføyer: 93/68/EWG Byggevaredirektiv 89/106/EWG med senere tilføyer 93/68/EWG Anvendte harmoniserede standarder, særlig: 1)
FIN CE-standardinmukaisuusseloste Ilmoitamme täten, että tämä laite vastaa seuraavia asiaankuuluvia määryksiä: EU-kondirektiivist: 98/37/EG Sähkömagneettinen soveltuvuus 89/336/EWG seuraavin täsmennyksin 91/263/EWG, 92/31/EWG, 93/68/EWG Matalajännite direktiivist: 73/23/EWG seuraavin täsmennyksin 93/68/EWG EU materiaalidirektiivi 89/106/EWG seuraavin täsmennyksin 93/68/EWG Käytetyt yhteenvetotut standardit, erityisesti: 1)	DK EF-overensstemmelseserklæring Vi erklærer hermed, at denne enhed ved levering overholder følgende relevante bestemmelser: EU-maskindirektiver 98/37/EG Elektromagnetisk kompatibilitet: 89/336/EWG, følgende 91/263/EWG, 92/31/EWG, 93/68/EWG Lavvolts-direktiv 73/23/EWG følgende 93/68/EWG Produktkonstruktionsdirektiv 98/106/EWG følgende 93/68/EWG Anvendte harmoniserede standarder, særligt: 1)	H EK. Azonossági nyilatkozat Ezzel kijelentjük, hogy az berendezés az alábbiaknak megfelel: EK Irányelvezégekhez: 98/37/EG Elektromágneses zavarás/türés: 89/336/EWG és az azt kiváltó 91/263/EWG, 92/31/EWG, 93/68/EWG Kifeszültségű berendezések irány-Elve: 73/23/EWG és az azt kiváltó 93/68/EWG Építési termékek irányelv 98/106/EWG és az azt kiváltó 93/68/EWG Felhasznált harmonizált szabványok, különösen: 1)
CZ Prohlášení o shodě EU Prohlašujeme tímto, že tento agregát v dodaném provedení odpovídá následujícím příslušným ustanovením: Směrnicím EU–strojní zařízení 98/37/EG Směrnicím EU–EMV 89/336/EWG ve sledu 91/263/EWG, 92/31/EWG, 93/68/EWG Směrnicím EU–nízké napětí 73/23/EWG ve sledu 93/68/EWG Směrnicím stavebních produktů 89/106/EWG ve sledu 93/68/EWG Použité harmonizační normy, zejména: 1)	PL Deklaracja Zgodności CE Niniejszym deklarujemy z pełną odpowiedzialnością że dostarczony wyrób jest zgodny z następującymi dokumentami: EC-dyrektiva dla przemysłu maszynowego 98/37/EG Odpowiedniość elektromagnetyczna 89/336/EWG ze zmianą 91/263/EWG, 92/31/EWG, 93/68/EWG Normie niskich napięć 73/23/EWG ze zmianą 93/68/EWG Wyroby budowlane 89/106/EWG ze zmianą 93/68/EWG Wyroby są zgodne ze szczegółowymi normami zharmonizowanymi: 1)	RUS Декларация о соответствии Европейским нормам Настоящим документом заявляем, что данный агрегат в его объеме поставки соответствует следующим нормативным документам: Директивы ЕС в отношении машин 98/37/EG Электромагнитная устойчивость 89/336/EWG с поправками 91/263/EWG, 92/31/EWG, 93/68/EWG Директивы по низковольтному напряжению 73/23/EWG с поправками 93/68/EWG Директива о строительных изделиях 89/106/EWG с поправками 93/68/EWG Используемые согласованные стандарты и нормы, в частности : 1)
GR Δήλωση προσαρμογής της Ε.Ε. Δηλώνουμε ότι το προϊόν αυτό σ' αυτή την κατάσταση παράδοσης ικανοποιεί τις ακόλουθες διατάξεις : Οδηγίες EG για μηχανήματα 98/37/EG Ηλεκτρομαγνητική συμβατότητα EG- 89/336/EWG όπως τροποποιήθηκε 91/263/EWG 92/31/EWG, 93/68/EWG Οδηγία χαρημάτης τάσης EG-73/23/EWG όπως τροποποιήθηκε 93/68/EWG Οδηγία κατασκευής 89/106/EWG όπως τροποποιήθηκε 93/68/EWG Εναρμονισμένα χρησιμοποιούμενα πρότυπα, ιδιαίτερα: 1)	TR CE Uygunluk Teyid Belgesi Bu cihazın teslim edildiği şekilde aşağıdaki standartlara uygun olduğunu teyid ederiz: AB-Makina Standartları 98/37/EG Elektromanyetik Uyumluluk 89/336/EWG ve takip eden, 91/263/EWG, 92/31/EWG, 93/68/EWG Alçak gerilim direktifi 73/23/EWG ve takip eden, 93/68/EWG Ürün imalat direktifi 89/106/EWG ve takip eden, 93/68/EWG Kısmen kullanılan standartlar: 1)	1) EN 809, EN 12050-2, EN 60034-1, EN 60204-1 EN 60335-2-41, EN 61000-6-3, EN 61000-6-4.

i. V. Erwin Prieß
Quality Manager



WILO AG
Nortkirchenstraße 100
44263 Dortmund



WILO AG
Nortkirchenstraße 100
44263 Dortmund
Germany
T +49 231 4102-0
F +49 231 4102-7363
www.wilo.com

Wilo – International (Subsidiaries)

Austria WILO Handelsges. m.b.H. 1230 Wien T +43 5 07507-0 F +43 5 07507-42 office@wilo.at	Croatia WILO Hrvatska d.o.o. 10090 Zagreb T +38 51 3430914 F +38 51 3430930 wilo-hrvatska@wilo.hr	Greece WILO Hellas AG 14569 Anixi (Attika) T +302 10 6248300 F +302 10 6248360 wilo.info@wilo.gr	Latvia WILO Baltic SIA 1019 Riga T +371 7 145229 F +371 7 145566 mail@wilo.lv	Portugal WILO Salmson 1019 Riga T +371 7 145229 F +371 7 145566 mail@wilo.lv	Sweden WILO Sverige AB 35246 Växjö T +46 470 727600 F +46 470 727644 wilo@wilo.se
Azerbaijan WILO Caspian LLC 1014 Baku T +994 12 4992386 F +994 12 4992879 info@wilo.az	Czech Republic WILO Praha s.r.o. 25101 Cestlice T +420 234 098 711 F +420 234 098 710 info@wilo.cz	Hungary WILO Magyarország Kft 2045 Társosi út 1 (Budapest) T +36 23 889500 F +36 23 889599 wilo@wilo.hu	Lebanon WILO SALMSON Lebanon 12022030 El Metn T +961 4 722280 F +961 4 722285 wsl@cyberia.net.lb	Romania WILO Romania s.r.l. 041833 Bucharest T +40 21 4600612 F +40 21 4600743 wilo@wilo.ro	Switzerland EMB Pumpen AG 4310 Rheinfelden T +41 61 8368020 F +41 61 8368021 info@emb-pumpen.ch
Belarus WILO Bel OOO 220035 Minsk T +375 17 2503393 F +375 17 2503383 wilobel@wilo.by	Denmark WILO Danmark A/S 2690 Karlslunde T +45 70 253312 F +45 70 253316 wilo@wilo.dk	Ireland WILO Engineering Ltd. Limerick T +353 61 227566 F +353 61 229017 sales@wilo.ie	Lithuania WILO Lietuva UAB 03202 Vilnius T/F +370 2 236495 mail@wilo.lt	Montenegro WILO Beograd d.o.o. 11000 Beograd T +381 11 2850410 F +381 11 2851278 office@wilo.co.yu	Russia WILO Rus ooo 123592 Moscow T +7 495 7810690 F +7 495 7810691 wilo@orc.ru
Belgium WILO SA/NV 1083 Ganshoren T +32 2 4823333 F +32 2 4823300 info@wilo.be	Estonia WILO Eesti OÜ 12618 Tallinn T +372 6509780 F +372 6509781 info@wilo.ee	Italy WILO Italia s.r.l. 20068 Peschiera Borromeo (Milano) T +39 25538351 F +39 255303374 wilo.italia@wilo.it	The Netherlands WILO Nederland b.v. 1948 RC Beverwijk T +31 251 220844 F +31 251 225168 info@wilo.nl	Kazakhstan WILO Central Asia 050002 Almaty T +7 3272 785961 F +7 3272 785960 in.pak@wilo.kz	Slovenia WILO Adriatic d.o.o. 1000 Ljubljana T +386 1 5838130 F +386 1 5838138 wilo.adriatic@wilo.si
Bulgaria WILO Bulgaria Ltd. 1125 Sofia T +359 2 9701970 F +359 2 9701979 info@wilo.bg	Finland WILO Finland OY 02330 Espoo T +358 207401540 F +358 207401549 wilo@wilo.fi	France WILO S.A.S. 78310 Coignières T +33 1 30050930 F +33 1 34614959 info@wilo.fr	Norway WILO Norge AS 0901 Oslo T +47 22 804570 F +47 22 804590 wilo@wilo.no	Poland WILO Polska Sp. z.o.o. 621-807 Gimhae Gyeongnam T +82 55 3405809 F +82 55 3405885 wilo@wilo.co.kr	Spain WILO Ibérica S.A. 28806 Alcalá de Henares (Madrid) T +34 91 8797100 F +34 91 8797101 wilo.iberica@wilo.es
Canada WILO Canada Inc. Calgary, Alberta T2A5L4 T/F +1 403 2769456 bill.lowe@wilo-na.com	Great Britain WILO (U.K.) Ltd. DE14 2WJ Burton- Upon-Trent T +44 1283 523000 F +44 1283 523099 sales@wilo.co.uk	Korea WILO Pumps Ltd. 1000 Skopje T/F +389 2122058 valerij.vojneski@wilo.com.mk	Moldova WILO Chisinau 2012 Chisinau T/F +373 2 223501 sergiu.zagurean@wilo.md	Tajikistan Dushanbe T +992 93 5554541	Uzbekistan 100046 Taschkent T/F +998 71 1206774 info@wilo.uz

Wilo – International (Representation offices)

Bosnia and Herzegovina 71000 Sarajevo T +387 33 714510 F +387 33 714511 zeljko.cvjetkovic@wilo.ba	Georgia 0177 Tbilisi T/F +995 32317813 info@wilo.ge	Macedonia 1000 Skopje T/F +389 2122058 valerij.vojneski@wilo.com.mk	Moldova 2012 Chisinau T/F +373 2 223501 sergiu.zagurean@wilo.md	Tajikistan Dushanbe T +992 93 5554541	Uzbekistan 100046 Taschkent T/F +998 71 1206774 info@wilo.uz
--	---	---	---	--	--

January 2007



WILO AG
Nortkirchenstraße 100
44263 Dortmund
Germany
T 0231 4102-0
F 0231 4102-7363
wilo@wilo.de
www.wilo.de

Wilo-Vertriebsbüros in Deutschland

G1 Nord

WILO AG
Vertriebsbüro Hamburg
Beim Strohhause 27
20097 Hamburg
T 040 5559490
F 040 55594949
hamburg.anfragen@wilo.de

G2 Ost

WILO AG
Vertriebsbüro Berlin
Juliusstraße 52–53
12051 Berlin-Neukölln
T 030 6289370
F 030 62893770
berlin.anfragen@wilo.de

G3 Sachsen/Thüringen

WILO AG
Vertriebsbüro Dresden
Frankenring 8
01723 Kesselsdorf
T 035204 7050
F 035204 70570
dresden.anfragen@wilo.de

G4 Südstadt

WILO AG
Vertriebsbüro München
Landshuter Straße 20
85716 Unterschleißheim
T 089 4200090
F 089 42000944
muenchen.anfragen@wilo.de

G5 Südwest

WILO AG
Vertriebsbüro Stuttgart
Hertichstraße 10
71229 Leonberg
T 07152 94710
F 07152 947141
stuttgart.anfragen@wilo.de

G6 Rhein-Main

WILO AG
Vertriebsbüro Frankfurt
An den drei Hasen 31
61440 Oberursel/Ts.
T 06171 70460
F 06171 704665
frankfurt.anfragen@wilo.de

G7 West

WILO AG
Vertriebsbüro Düsseldorf
Westring 19
40721 Hilden
T 02103 90920
F 02103 909215
duesseldorf.anfragen@wilo.de

Kompetenz-Team Gebäudetechnik

WILO AG
Nortkirchenstraße 100
44263 Dortmund
T 0231 4102-7516
T 01805 R-U-F-W-I-L-O*
7-8-3-9-4-5-6
F 0231 4102-7666

Erreichbar Mo–Fr von 7–18 Uhr.

– Antworten auf
– Produkt- und Anwendungsfragen
– Liefertermine und Lieferzeiten

– Informationen über Ansprechpartner vor Ort
– Versand von Informationsunterlagen

Kompetenz-Team Kommune Bau + Bergbau

WILO EMU GmbH
Heimgartenstraße 1
95030 Hof

T 09281 974-550

F 09281 974-551

F 0231 4102-7666

Erreichbar Mo–Fr von 7–18 Uhr.

– Antworten auf
– Produkt- und Anwendungsfragen
– Liefertermine und Lieferzeiten

– Informationen über Ansprechpartner vor Ort
– Versand von Informationsunterlagen

Werkskundendienst Gebäudetechnik

Kommune
Bau + Bergbau
Industrie

WILO AG

Nortkirchenstraße 100

44263 Dortmund

T 0231 4102-7900

T 01805 W-I-L-O-K-D*

9-4-5-6-5-3

F 0231 4102-7126

Erreichbar Mo–Fr von

7–17 Uhr.

Wochenende und feiertags

9–14 Uhr elektronische

Bereitschaft mit

Rückruf-Garantie!

– Kundendienst-Anforderung

– Werksreparaturen

– Ersatzteilfragen

– Inbetriebnahme

– Wartung

– Technische Service-Beratung

– Funktionsprobleme

– Qualitätssanalyse

Wilo-International

Österreich

Zentrale Wien:
WILO Handelsgesellschaft mbH
Eitnergasse 13
1230 Wien
T +43 5 07507-0
F +43 5 07507-15

Vertriebsbüro Salzburg:

Gnigler Straße 56
5020 Salzburg
T +43 5 07507-0
F +43 5 07507-15

Vertriebsbüro Österreich:

Trattnachtalstraße 7
4710 Grieskirchen
T +43 5 07507-0
F +43 5 07507-15

Schweiz

EMB Pumpen AG
Gerstenweg 7
4310 Rheinfelden

T +41 61 8368020

F +41 61 8368021

Standorte weiterer Tochtergesellschaften

Aserbaidschan, Belarus,
Belgien, Bulgarien, China,
Dänemark, Estland, Finnland,
Frankreich, Griechenland,
Großbritannien, Irland, Italien,
Kanada, Kasachstan, Korea,
Kroatien, Lettland, Libanon,
Litauen, Montenegro,
Niederlande, Norwegen,
Polen, Portugal, Rumänien,
Russland, Schweden, Serbien,
Slowakei, Slowenien,
Spanien, Tschechien, Türkei,
Ukraine, Ungarn, USA

Die Adressen finden Sie unter
www.wilo.de oder
www.wilo.com.

Stand Januar 2007

* 14 Cent pro Minute aus
dem deutschen Festnetz
der T-Com