

Wilo-IR-Monitor



de Einbau- und Betriebsanleitung

en Installation and operating instructions

fr Notice de montage et de mise en service

nl Inbouw- en bedieningsvoorschriften

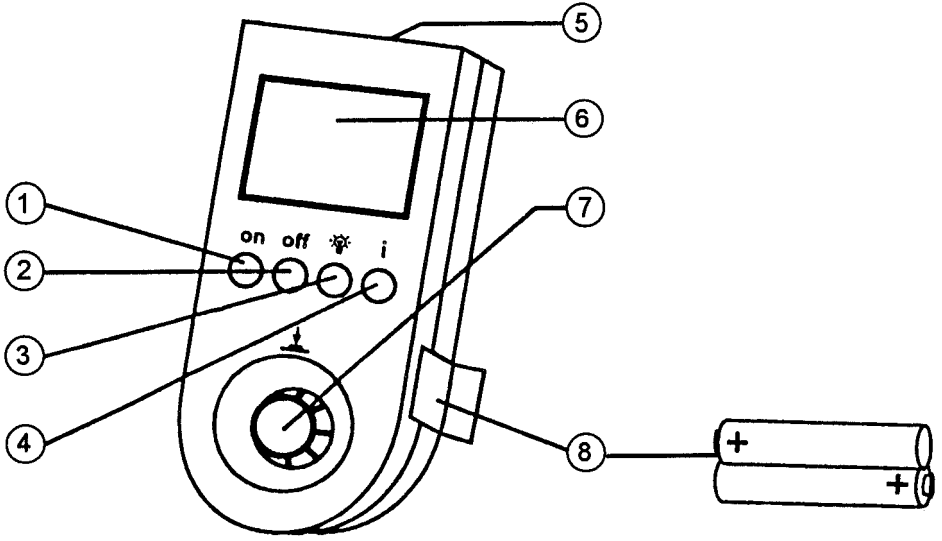


Fig. 1

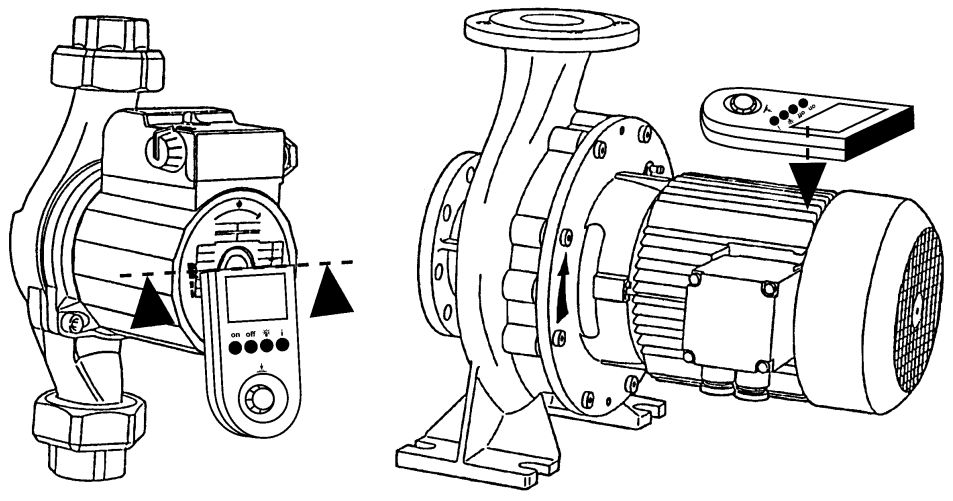


Fig. 2

max. 16

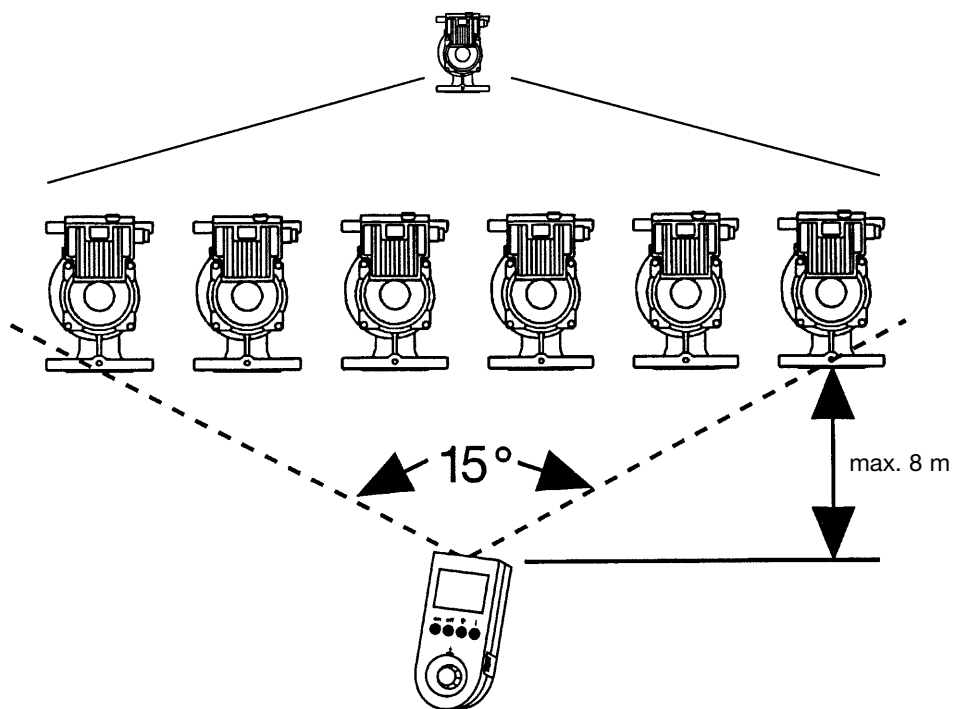


Fig. 3

D **EG – Konformitätserklärung**
GB **EC – Declaration of conformity**
F **Déclaration de conformité CE**

Hiermit erklären wir, dass die Bauarten der Baureihe : **IR-Monitor**
Herewith, we declare that this product:
Par le présent, nous déclarons que cet agrégat :

in der gelieferten Ausführung folgenden einschlägigen Bestimmungen entspricht:
in its delivered state complies with the following relevant provisions:
est conforme aux dispositions suivants dont il relève:

Elektromagnetische Verträglichkeit – Richtlinie **2004/108/EG**
Electromagnetic compatibility – directive
Compatibilité électromagnétique- directive

und entsprechender nationaler Gesetzgebung.
and with the relevant national legislation.
et aux législations nationales les transposant.

Angewendete harmonisierte Normen, insbesondere: **EN 61000-6-2**
Applied harmonized standards, in particular: **EN 61000-6-3**
Normes harmonisées, notamment:

Bei einer mit uns nicht abgestimmten technischen Änderung der oben genannten Bauarten, verliert diese Erklärung ihre Gültigkeit.
If the above mentioned series are technically modified without our approval, this declaration shall no longer be applicable.
Si les gammes mentionnées ci-dessus sont modifiées sans notre approbation, cette déclaration perdra sa validité.

Dortmund, 08.04.2009

i. V. 
Erwin Prieß
Quality Manager

wilo

WILO SE
Nortkirchenstraße 100
44263 Dortmund
Germany

<p>NL EG-verklaring van overeenstemming Hiermede verklaren wij dat dit aggregaat in de geleverde uitvoering voldoet aan de volgende bepalingen:</p> <p>Elektromagnetische compatibiliteit 2004/108/EG</p> <p>Gebruikte geharmoniseerde normen, in het bijzonder: 1)</p>	<p>I Dichiarazione di conformità CE Con la presente si dichiara che i presenti prodotti sono conformi alle seguenti disposizioni e direttive rilevanti:</p> <p>Compatibilità elettromagnetica 2004/108/EG</p> <p>Norme armonizzate applicate, in particolare: 1)</p>	<p>E Declaración de conformidad CE Por la presente declaramos la conformidad del producto en su estado de suministro con las disposiciones pertinentes siguientes:</p> <p>Directiva sobre compatibilidad electromagnética 2004/108/EG</p> <p>Normas armonizadas adoptadas, especialmente: 1)</p>
<p>P Declaração de Conformidade CE Pela presente, declaramos que esta unidade no seu estado original, está conforme os seguintes requisitos:</p> <p>Compatibilidade electromagnética 2004/108/EG</p> <p>Normas harmonizadas aplicadas, especialmente: 1)</p>	<p>S CE- försäkran Härmed förklarar vi att denna maskin i levererat utförande motsvarar följande tillämpliga bestämmelser:</p> <p>EG–Elektromagnetisk kompatibilitet – riktlinje 2004/108/EG</p> <p>Tillämpade harmoniserade normer, i synnerhet: 1)</p>	<p>N EU-Overensstemmelseserklæring Vi erklærer hermed at denne enheten i utførelse som levert er i overensstemmelse med følgende relevante bestemmelser:</p> <p>EG–EMV–Elektromagnetisk kompatibilitet 2004/108/EG</p> <p>Anvendte harmoniserte standarder, særlig: 1)</p>
<p>FIN CE-standardinmukaisuuslause Ilmoitamme täten, että tämä laite vastaa seuraavia asiaankuuluvia määräyksiä:</p> <p>Sähkömagneettinen soveltuvuus 2004/108/EG</p> <p>Käytetyt yhteensovitettut standardit, erityisesti: 1)</p>	<p>DK EF-overensstemmelseserklæring Vi erklærer hermed, at denne enhed ved levering overholder følgende relevante bestemmelser:</p> <p>Elektromagnetisk kompatibilitet: 2004/108/EG</p> <p>Anvendte harmoniserede standarder, særligt: 1)</p>	<p>H EK. Azonossági nyilatkozat Ezennel kijelentjük,hogy az berendezés az alábbiaknak megfelel:</p> <p>Elektromágneses zavarás/tűrés: 2004/108/EG</p> <p>Felhasznált harmonizált szabványok, különösen: 1)</p>
<p>CZ Prohlášení o shodě EU Prohlašujeme tímto, že tento agregát v dodaném provedení odpovídá následujícím příslušným ustanovením:</p> <p>Směrnícím EU–EMV 2004/108/EG</p> <p>Použité harmonizační normy, zejména: 1)</p>	<p>PL Deklaracja Zgodności CE Niniejszym deklarujemy z pełną odpowiedzialnością że dostarczony wyrób jest zgodny z następującymi dokumentami:</p> <p>Odpowiedniość elektromagnetyczna 2004/108/EG</p> <p>Wyroby są zgodne ze szczegółowymi normami zharmonizowanymi: 1)</p>	<p>RUS Декларация о соответствии Европейским нормам Настоящим документом заявляем, что данный агрегат в его объеме поставки соответствует следующим нормативным документам:</p> <p>Электромагнитная устойчивость 2004/108/EG</p> <p>Используемые согласованные стандарты и нормы, в частности : 1)</p>
<p>GR Δήλωση προσαρμογής της Ε.Ε. Δηλώνουμε ότι το προϊόν αυτό ο' αυτή την κατάσταση παράδοσης ικανοποιεί τις ακόλουθες διατάξεις :</p> <p>Ηλεκτρομαγνητική συμβατότητα EG–2004/108/EG</p> <p>Εναρμονισμένα χρησιμοποιούμενα πρότυπα, ιδιαίτερα: 1)</p>	<p>TR EC Uygunluk Teyid Belgesi Bu cihazın teslim edildiği şekliyle aşağıdaki standartlara uygun olduğunu teyid ederiz:</p> <p>Elektromanyetik Uyumluluk 2004/108/EG</p> <p>Kısmen kullanılan standartlar: 1)</p>	<p>1) EN 61000–6–2, EN 61000–6–3.</p>

i. v. Erwin Prieß
Erwin Prieß
Quality Manager

wilo
WILO SE
Nortkirchenstraße 100
44263 Dortmund
Germany

1. General Information

1.1 Uses

Circulating pumps for Series TOP-E and TOP-ED "Monitoring" in heating systems are electronically set, operated and controlled by the **Infra Red** monitor. All technical data can be transferred between the pumps and the IR monitor and processed by infra red remote control. It is therefore the central monitoring unit in a heating system.

1.2 Technical data

Unit dimensions:	185 x 85 x 34 mm
Display dimensions:	47 x 47 mm 128 x 128 dots
Battery:	2 x 1.5 Volt Round Cells R6
Shock resistance:	max. height of fall 1 m
System of protection:	IP 43
Operating temperature:	0 °C to 40 °C
Storage temperature:	-20 °C to 70 °C
Permissible relative humidity:	≤ 95 %
IR bearing angle:	15°
Distance IR Monitor - module:	0.1 ... 8 m

2. Safety

The safety instructions for the connected pumps must be strictly adhered to at all times.

3. Transport and storage

WARNING! This apparatus must be protected against moisture and mechanical damage.

4. Description of product and accessories

4.1 Description of the IR monitor (Fig. 1)

The IR monitor, which was designed as a service apparatus, is fitted with a micro processor which enables it to register, process, and set all operating modes for the corresponding pumps TOP-E and TOP-ED. The pump modules are fitted with a remote control receiver and transmitter (positioned above the heat sink) for this purpose. By processing the data it registers, the unit supplies

more information than the modules on the pumps themselves.

Certain settings on the pump module can be blocked using the IR monitor. The monitor has been constructed in such a way that it will also be compatible with pump modules which will be developed in the future.

4.2 IR Monitor Technical Equipment

- **Display:** (Fig. 1, pos. ⑥). Screen definition: 128 x 128 dots, graphic compatibility, presentation of freely-defined symbols, optional background illumination (Fig. 1, pos. ③).
- **Energy supply:** 2 x round cells R6 (Fig. 1, pos. ⑧), each 1.5 V or suitable storage batteries. Once the battery is dead, an acoustic warning sound will be heard. In addition, "Battery dead" appears on the display. In order to save storage battery capacity, the monitor automatically switches off after a certain length of time during which it has not been operated.
- **Memory:** Non volatile memory for documenting the preset values.
- **Controlling the direction of rotation:** The following appears on the display: Motor ON/OFF, direction of rotation left/right, rotary frequency of the motor 10 ...100 Hz. The monitor must be placed on the pump housing (Fig. 2) in order to measure this data.

4.3 Operating the IR Monitor

The **IR window** (Fig. 1, pos. ⑤) is positioned on the face of the monitor. This window constitutes the transmitter and receiver surface and must be directed at the pump with which the display is to communicate. The bearing angle of the transmitter and receiver range of the monitor and the pump module are depicted in Fig. 3 and must be directed at the selected pump during the location procedure. Throughout the duration of the communication the monitor's direction of bearing must be maintained.

By pressing the **"ON" button** (Fig. 1, pos. ①) the **Start menu**, **WILLO** logo and the address of the operator will appear on the display (see table II). The monitor can be switched off using the **OFF button** (Fig. 1, pos ②).

The background lighting on the display can be switched on and off using the **light button** (Fig. 1, pos. ③).

Information on how to operate the menu can be called up onto the display by pressing the **"I" button** (Fig. 1, pos. ④).

The menu can be operated using the **one hand operating button** (Fig. 1, pos. ⑦). The directly selectable switching panel in the menus appears inverted. By pressing (clicking) the operating button the command for the inverted switching panel is carried out. By turning the operating button by one point, the inverted switching display moves to other switching displays on the same menu (turning to the right moves forward and to the left backwards), which can then be selected. The appearance of an arrow at the lower or the upper end of the data display, signifies that there are further data displays which can be viewed by turning the operating button. Using the same button, the data field can be scrolled upwards. In this case none of the switching displays appears inverted on the screen.

The structure of the menu is presented in tables I and II. The 5 main menus: display, operate, statistics, service and adjust, can be selected in the fixed order of appearance by turning and pressing the button. The sub menus can be reached by clicking the button. The data in the sub menu can be accessed by clicking on the button. To return to the main menu, click on "exit".

Should the connection between the monitor and the pump module be interrupted, the following message appears on the display: "IR Communication fault". A warning tone will sound at the same time. In this case, the unit must be re-started.

Should a double pump be controlled by the IR monitor the IR monitor will identify the double pump. The menus for double pump mode will then appear automatically on the display. As long as the WILO interface has been connected, the PCT (building management system) function will also be automatically identified and activated.

4.4 Products delivered

- IR monitor with batteries, protective cassette and service card,
- Installation and Operating Instructions.

5. Installation

No specific instructions.

6. Operation

The necessary pump settings with the IR monitor must be carried out by a trained professional. Details of how to operate the unit are given in chapter 4.

7. Maintenance

The switchgear is maintenance-free.

8. Problems, Causes and Solutions

IR monitor cannot be switched on

- Batteries dead, replace batteries
- Batteries incorrectly inserted, reinsert observing polarity

IR monitor switches off automatically on a regular basis

- Batteries dead, replace batteries
- Reset time-out time interval

Display contrast too high or too low

- Extreme ambient temperature, reset contrast

Communication faults occur on a regular basis

- Monitor communicates with several pumps at the same time (LEDs flash), disconnect and then reconnect
- Interference from another light or distance between monitor and pump too great, Reduce distance to pump.

Table I

Overview of menus on the IR Monitor

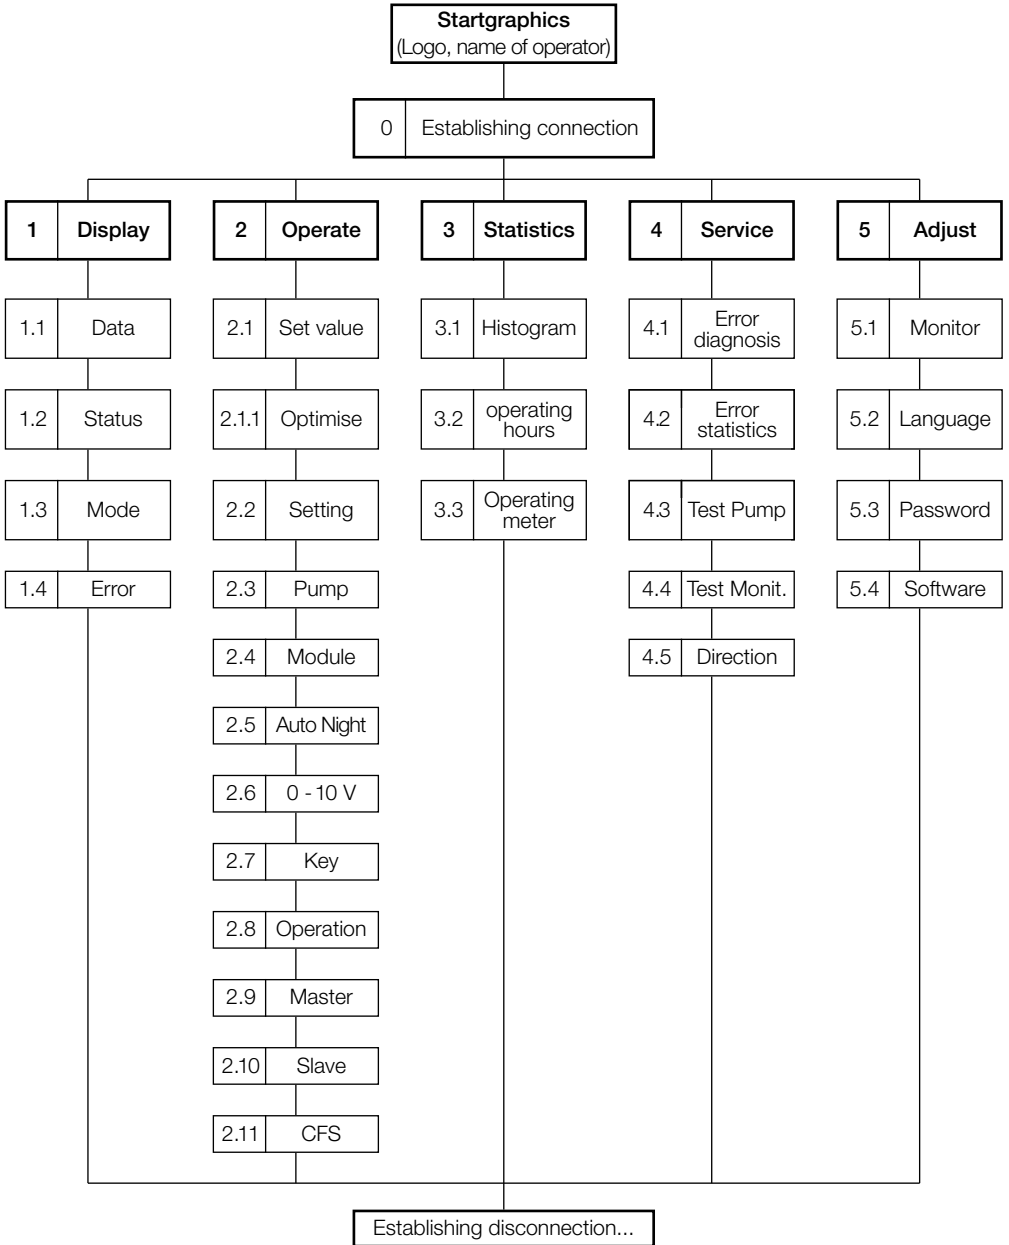


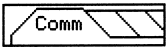

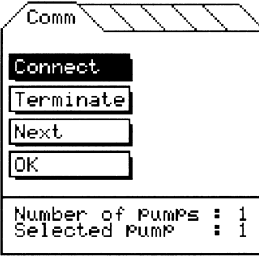








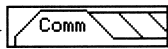
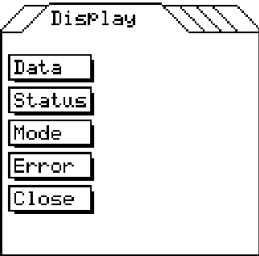

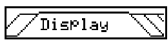

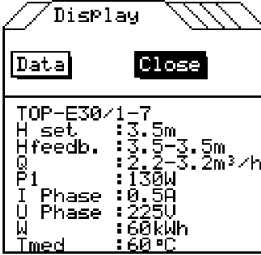


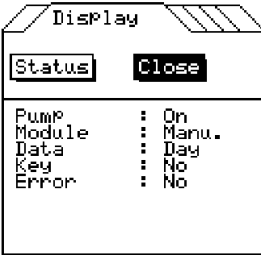
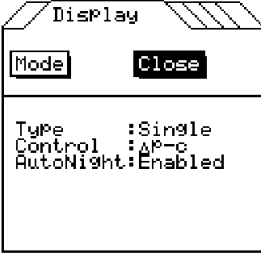
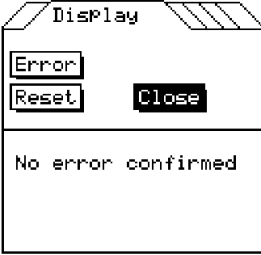




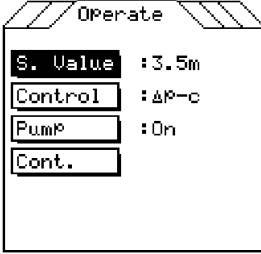
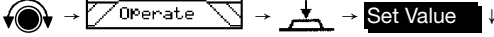
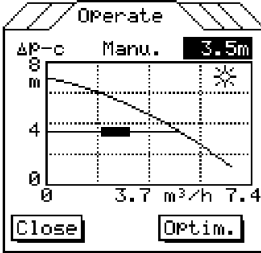
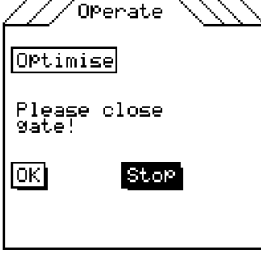
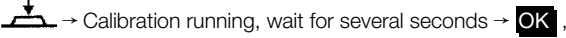
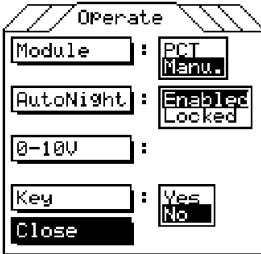
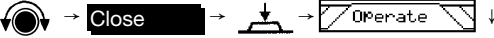

Table II IR monitor menu structure

The menu images presented here refer to single pumps (EP). In the menu images for double pumps

(DP) the data for Master and Slave will also be given.

No.	Display	Explanation of the Display
	 <p>Comm</p> <p>wilo</p> <p>IR-MONITOR</p> <p>NAME - NOM - NAAM</p>	<p>“on” → Start menu: WILO logo and operator address.</p> <p> → Communication menu  →  ↓</p>
0	 <p>Comm</p> <p>Connect</p> <p>Terminate</p> <p>Next</p> <p>OK</p> <p>Number of Pumps : 1</p> <p>Selected PUMP : 1</p>	<p>Establishing connection</p> <p>Locate pumps →  → LEDs of all pumps which have been located will light up in green. Connection confirmed by a tone. The number of pumps located will appear on the display. Should the selected pump not be located, repeat the aforementioned procedure.</p> <p> → Terminate →  : Connection terminated.</p> <p> → Next →  : Green LED will flash on one of the pumps.</p> <p> → The next pump will flash, select the desired pump.</p> <p> → OK →  →  ↓</p>
1	 <p>Display</p> <p>Data</p> <p>Status</p> <p>Mode</p> <p>Error</p> <p>Close</p>	<p>Feedback value data will appear but cannot be altered.</p> <p>Entry into the first main menu “Display”</p> <p> →  →  → Data ↓</p>

<p>1.1</p>		<p>→  → Close →</p> <p>Displays the type of pump and all current operating data</p> <p> → Data ↓</p>
<p>1.2</p>		<p>Displays the selected settings:</p> <p>Pump: Ready for operation ON/OFF</p> <p>Module: Set value set on the pump (manual), PCT over 0-10 V</p> <p>Data: Pump runs in regular (Day) or light load mode (Night)</p> <p>Key: Adjustments not permissible for operators, Yes/No</p> <p>Ext. OFF: Ext. pump OFF, Yes/No (if terminal present)</p> <p>Error to be removed: Yes/No</p> <p>DP: Master: Ready for operation Locked/Enabled Slave: Ready for operation Locked/Enabled</p>
<p>1.3</p>		<p>Display pump type and set control system:</p> <p>Pump type: Single / Double (DP)</p> <p>Control system: Δp-c, Δp-v, Δp-T, n-regulator,</p> <p>Auto Night: Locked/Enabled (Light load mode)</p> <p>0-10 V: Locked/Enabled (Ext. set value, if terminal present)</p> <p>DP: Mode: Reserve/Addition</p>
<p>1.4</p>		<p>Error display, Error acknowledgement</p> <p>No error confirmed</p> <p>Displays the type of error which has occurred</p> <p> → Reset →  → Type of error</p> <p>Error acknowledged</p> <p>Automatic start in x Min</p> <p>Can be reset in x Min</p>

2	Operate	Setting the operating parameters
2.1 2.2 2.3		 <p>The set values used to date are displayed.</p>
2.1		<p>H/Q diagram with max. characteristic line of the pump and current operating area in accordance with set control system. The following set values can be set for different control systems:</p> <p>Δp-c: set value delivery head [m] Δp-v: set value delivery head [m] Regulator: set speed [min⁻¹] Δp-T: Δp_{min}, Δp_{max} [m], T_{min}, T_{max} [°C]</p> <p>The factory setting can also be called up under control system.</p>
2.1.1		<p>0-point calibration of the pump characteristics are necessary when starting up the pump for the first time. Power input of the pump motor with transport capacity Q = 0 m³/h and maximum speed is measured and used as a reference point. Optimisation increases the accuracy of measurements but does not impair the function in any way. Optimisation also necessary for light load mode.</p> <p>Close discharge valve!</p>  <p>Calibration running, wait for several seconds → OK, Calibration completed.</p>
2.4 2.5 2.6 2.7		<p>Module: PCT: Adjustment of the set value via the PLR (pump control processor)/interface converter manual: Adjustment of the set value at the pump</p> <p>Auto Night: Enabled: Adjustment if light load mode permissible Locked: Light load mode blocked</p> <p>0-10 V: can only be activated if terminal is present Enabled: Input for external n-set value (regulator) Locked: Input blocked</p> <p>Key: Yes: Adjustment blocked by user No: Release</p>  <p>DP:  → Continue box ↓</p>

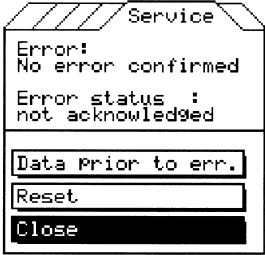
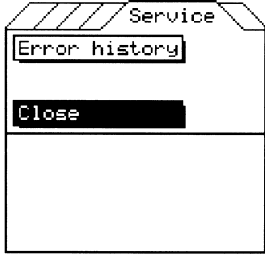
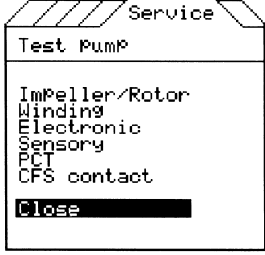
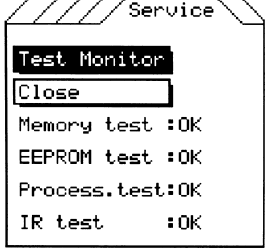
<p>2.8 2.9 2.10 2.11</p>		<p>Additional settings for double pump</p> <p>Data: Reserve: set to reserve mode Addition: setting in addition mode</p> <p>Master: Enabled: Master ready for operation Locked: Master blocked</p> <p>Slave: Enabled: Slave ready for operation Locked: Slave blocked</p> <p>CFS: Collect: Error reading for interference DP Single: Error reading for every pump</p>
--------------------------------------	--	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------



<p>3</p> <p>3.1 3.2 3.3</p>	<p>Statistics</p>	<p>Histogram and operating hours</p> <p>Operating hours: Added up between 2 delete commands DP: Total, Master and Slave hours</p> <p>Operating meter: Network On: Number of times pump switched on Pump kick: Number of short starts due to stoppages Auto Night: Number of times pump switched on in light load mode</p> <p>DP: same for Master and Slave</p>
--------------------------------------------	--------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

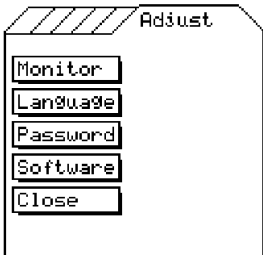
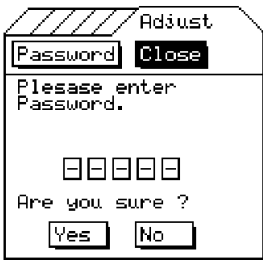

<p>3.1</p>		<p>Load diagram: ΔQ / % of running time, Gives information concerning how long the pump ran in the individual delivery capacity areas between the 2 delete commands. The sum total of each section gives the total operating time since the last delete command.</p>
------------	--	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

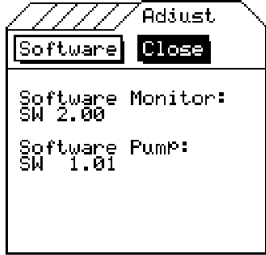
<p>4</p> <p>4.0 4.1 4.2 4.3 4.4 4.5</p>	<p>Service</p>	<p>Service Information</p>
--------------------------------------------------------------------	-----------------------	-----------------------------------

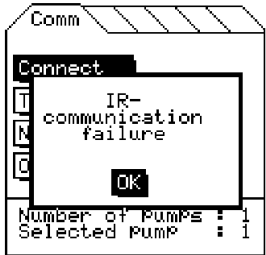
ENGLISH

<p>4.1</p>		<p>Error: No error / type of error Error status: acknowledged / not acknowledged Data prior to error: List of data in the sub menu Reset: Error is reset</p>
<p>4.2</p>		<p>Lists a maximum of 16 errors in the order in which they occurred Error list: see installation and operation instructions for the pump.</p>
<p>4.3</p>		<p>Every test is shown in a sub menu:</p> <p>Impeller/Rotor test: not yet available Winding: Contact or motor error Electronics: Self test External sensors: Self test PCT: Displays correctly received protocols, counts down from 60 s to 0 s CFS contact: Opens the CFS contact for 15 s Error indicated if test result negative.</p>
<p>4.4</p>		<p>Self test runs automatically. Test results OK or error reading</p>

<p>4.5</p>		<p>Direction of rotation Direction Place monitor on pump in accordance with. Fig. 2 The following are displayed: Direction of rotation, Rotary-field frequency, Motor ON/OFF, nothing displayed for OFF</p>	
------------	-----------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------

<p>5</p>	<p>Adjust</p> 	<p>Basic setting for starting up</p> <p>Monitor: Contrast: Contrast between writing and background on display, can be set between 1 (low contrast) and 15 (greater contrast).</p> <p>Time Out: Time passed between last operation and automatic mode. Monitor switch-off, can be set between 2 and 30 min.</p> <p>Language: menu languages: German, English, French, Dutch</p>	
<p>5.0 5.1 5.2 5.3 5.4</p>		<p>Password → [down arrow] → [left arrow] → [right arrow] → From A to the desired letter → [down arrow] → A → [left arrow] → [right arrow] → etc...</p> <p>until the last box → [down arrow] → Yes → [down arrow] → Password</p> <p>If the IR Monitor is switched off and then on again, the password will not reappear (personal code).</p> <p>Warning! Once a password has been confirmed it cannot be deleted.</p>	
<p>5.3</p>		<p>The menu only appears once the correct code has been entered in the first menu. This protects against unauthorised alteration of the operator's address.</p> <p>Entry of the address as above.</p> <p>Only confirm using Yes if the address entered is correct.</p>	

5.4	 <p>The screenshot shows a menu titled 'Adjust' with two options: 'Software' and 'Close'. Below the menu, the following text is displayed: 'Software Monitor: SW 2.00' and 'Software Pump: SW 1.01'.</p>	Description of monitor and pump software is set by WILO prior to delivery. The data shown here is given as an example.
-----	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------

	<p>Error indication</p>  <p>The screenshot shows a menu titled 'Comm' with a 'Connect' option. A central box displays the error message: 'IR-communication failure' with an 'OK' button below it. At the bottom of the screen, it shows 'Number of PUMPS : 1' and 'Selected PUMP : 1'.</p>	<p>The dialogue boxes appear when errors or interference occur. The following messages appear on the display:</p> <ul style="list-style-type: none"> ■ IR communication failure <p>This message appears when the connection to the pump is interrupted for a brief period, usually due to the fact that the monitor is outside the receiver range.</p> <p>Maintain direction of bearing.</p> <ul style="list-style-type: none"> ■ Function not present ■ Too many connections ■ No pump selected ■ Function not possible in this mode ■ Test running ■ Pump exchange in operation ■ Incorrect password, does not comply with entry ■ Battery dead
--	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------





Wilo – International (Subsidiaries)

Argentina

WILO SALMSON
Argentina S.A.
C1295ABI Ciudad
Autónoma de Buenos Aires
T +54 11 4361 5929
info@salmson.com.ar

Australia

WILO Australia Pty Limited
Murrarie, Queensland,
4172
T +61 7 3907 6900
chris.dayton@wilo.com.au

Austria

WILO Pumpen
Österreich GmbH
2351 Wiener Neudorf
T +43 507 507-0
office@wilo.at

Azerbaijan

WILO Caspian LLC
1065 Baku
T +994 12 5962372
info@wilo.az

Belarus

WILO Bel IOOO
220035 Minsk
T +375 17 3963446
wilo@wilo.by

Belgium

WILO NV/SA
1083 Ganshoren
T +32 2 4823333
info@wilo.be

Bulgaria

WILO Bulgaria EOOD
1125 Sofia
T +359 2 9701970
info@wilo.bg

Brazil

WILO Comercio e
Importacao Ltda
Jundiaí – São Paulo – Brasil
13.213-105
T +55 11 2923 9456
wilo@wilo-brasil.com.br

Canada

WILO Canada Inc.
Calgary, Alberta T2A 5L7
T +1 403 2769456
info@wilo-canada.com

China

WILO China Ltd.
101300 Beijing
T +86 10 58041888
wiloobj@wilo.com.cn

Croatia

WILO Hrvatska d.o.o.
10430 Samobor
T +38 51 3430914
wilo-hrvatska@wilo.hr

Cuba

WILO SE
Oficina Comercial
Edificio Simona Apto 105
Siboney, La Habana, Cuba
T +53 5 2795135
T +53 7 272 2330
raul.rodriguez@wilo-cuba.com

Czech Republic

WILO CS, s.r.o.
25101 Cestlice
T +420 234 098711
info@wilo.cz

Denmark

WILO Danmark A/S
2690 Karlslunde
T +45 70 253312
wilo@wilo.dk

Estonia

WILO Eesti OÜ
12618 Tallinn
T +372 6 5099780
info@wilo.ee

Finland

WILO Finland OY
02330 Espoo
T +358 207401540
wilo@wilo.fi

France

Wilo Salmson France S.A.S.
53005 Laval Cedex
T +33 2435 95400
info@wilo.fr

Great Britain

WILO (U.K.) Ltd.
Burton Upon Trent
DE14 2WJ
T +44 1283 523000
sales@wilo.co.uk

Greece

WILO Hellas SA
14569 Anixi (Attika)
T +302 10 6248300
wilo.info@wilo.gr

Hungary

WILO Magyarország Kft
2045 Törökbálint
(Budapest)
T +36 23 889500
wilo@wilo.hu

India

Mather and Platt Pumps Ltd.
Pune 411019
T +91 20 27442100
services@matherplatt.com

Indonesia

PT. WILO Pumps Indonesia
Jakarta Timur, 13950
T +62 21 7247676
citrawilo@cbn.net.id

Ireland

WILO Ireland
Limerick
T +353 61 227566
sales@wilo.ie

Italy

WILO Italia s.r.l.
20068 Peschiera Borromeo
(Milano)
T +39 25538351
wilo.italia@wilo.it

Kazakhstan

WILO Central Asia
050002 Almaty
T +7 727 2785961
info@wilo.kz

Korea

WILO Pumps Ltd.
618-220 Gangseo, Busan
T +82 51 950 8000
wilo@wilo.co.kr

Latvia

WILO Baltic SIA
1019 Riga
T +371 6714-5229
info@wilo.lv

Lebanon

WILO LEBANON SARL
Jdeidah 1202 2030
Lebanon
T +961 1 888910
info@wilo.com.lb

Lithuania

WILO Lietuva UAB
03202 Vilnius
T +370 5 2136495
mail@wilo.lt

Morocco

WILO Maroc SARL
20250 Casablanca
T +212 (0) 5 22 66 09 24
contact@wilo.ma

The Netherlands

WILO Nederland B.V.
1551 NA Westzaan
T +31 88 9456 000
info@wilo.nl

Norway

WILO Norge AS
0975 Oslo
T +47 22 804570
wilo@wilo.no

Poland

WILO Polska Sp. z o.o.
05-506 Lesznowola
T +48 22 7026161
wilo@wilo.pl

Portugal

Bombas Wilo- Salmson
- Sistemas Hidraulicos Lda.
4050-040 Porto
T +351 22 2080350
bombas@wilo.pt

Romania

WILO Romania s.r.l.
077040 Com. Chiajna
Jud. Ilfov
T +40 21 3170164
wilo@wilo.ro

Russia

WILO Rus ooo
123592 Moscow
T +7 495 7810690
wilo@wilo.ru

Saudi Arabia

WILO ME - Riyadh
Riyadh 11465
T +966 1 4624430
wshoula@watanaiind.com

Serbia and Montenegro

WILO Beograd d.o.o.
11000 Beograd
T +381 11 2851278
office@wilo.rs

Slovakia

WILO CS s.r.o., org. Zložka
83106 Bratislava
T +421 2 33014511
info@wilo.sk

Slovenia

WILO Adriatic d.o.o.
1000 Ljubljana
T +386 1 5838130
wilo.adriatic@wilo.si

South Africa

Salmson South Africa
2065 Sandton
T +27 11 6082780
patrick.hulley@
salmson.co.za

Spain

WILO Ibérica S.A.
28806 Alcalá de Henares
(Madrid)
T +34 91 8797100
wilo.iberica@wilo.es

Sweden

WILO NORDIC AB
35033 Växjö
T +46 470 727600
wilo@wilo.se

Switzerland

EMB Pumpen AG
4310 Rheinfelden
T +41 61 83680-20
info@emb-pumpen.ch

Taiwan

WILO Taiwan CO., Ltd.
24159 New Taipei City
T +886 2 2999 8676
nelson.wu@wilo.com.tw

Turkey

WILO Pompa Sistemleri
San. ve Tic. A.Ş.,
34956 İstanbul
T +90 216 2509400
wilo@wilo.com.tr

Ukraine

WILO Ukraina t.o.w.
08130 Kiev
T +38 044 3937384
wilo@wilo.ua

United Arab Emirates

WILO Middle East FZE
Jebel Ali Free Zone-South
PO Box 262720 Dubai
T +971 4 880 91 77
info@wilo.ae

USA

WILO USA LLC
Rosemont, IL 60018
T +1 866 945 6872
info@wilo-usa.com

Vietnam

WILO Vietnam Co Ltd.
Ho Chi Minh City, Vietnam
T +84 8 38109975
nkminh@wilo.vn

wilo

Pioneering for You

WILO SE
Nortkirchenstraße 100
D-44263 Dortmund
Germany
T +49(0)231 4102-0
F +49(0)231 4102-7363
wilo@wilo.com
www.wilo.com